Emerson™

SERVICE MANUAL

37″ COLOR LCD TELEVISION

EWL3706 A

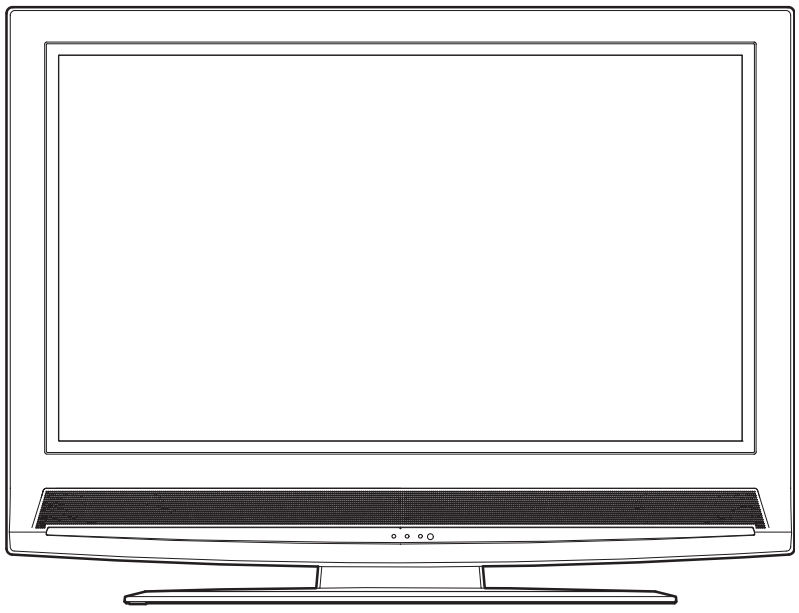

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advice the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

TABLE OF CONTENTS

Specifications 1-1
Important Safety Precautions 2-1
Standard Notes for Servicing 3-1
Cabinet Disassembly Instructions 4-1
Electrical Adjustment Instructions 5-1
How to initialize the LCD Television 6-1
Block Diagrams 7-1
Schematic Diagrams / CBA's and Test Points 8-1
Waveforms 9-1
Wiring Diagram 10-1
Exploded Views 11-1
Mechanical Parts List 12-1
Electrical Parts List 13-1

The LCD panel is manufactured to provide many years of useful life. Occasionally a few non active pixels may appear as a tiny spec of color. This is not to be considered a defect in the LCD screen.

SPECIFICATIONS

< TUNER / NTSC >

ANT. Input ---------- 75 ohm Unbal., F type

Description	Condition	Unit	Nominal	Limit
1. Intermediate Freq.	Picture Sound	MHz MHz	45.75 41.25	--- ---
2. Syncronizing Sens.	CH-4 CH-10 CH-41	dBμV dBμV dBμV	--- --- ---	20 20 23
3. AFT Pull In Range (10 mV input)	---	MHz	±2.3	±2.1

< TUNER / ATSC >

Description	Condition	Unit	Nominal	Limit
1. Received Freq. Range (-28dBm)		kHz kHz	--- ---	+100 -100
2. ATSC Dynamic Range (min / max)	ch.4 ch.10 ch.41	dBm dBm dBm	--- --- ---	-76/0 -76/0 -74/+4

< LCD PANEL >

Description	Condition	Unit	Nominal	Limit
1. Number of Pixels	Horizontal Vertical	pixels pixels	1366× 3 768	--- ---
2. Brightness		cd/m^2	500	---
3. Response Time (tr+tf)	---	msec	8	---
4. Support Color	---	-	16.7 mil. (8 bit)	---
5. Viewing Angle	Horizontal Vertical	° °	-85 to 85 -85 to 85	--- ---

< VIDEO >

Description	Condition	Unit	Nominal	Limit
1. Over Scan	Horizontal Vertical	% %	5 5	--- ---
2. Color Temperature	--- x y	°K	12000 0.272 0.278	--- ±3% ±3%
3. Resolution	Horizontal Vertical	line line	400 350	--- ---

< AUDIO >

All items are measured across 8 Ω load at speaker output terminal with L.P.F.

Description	Condition	Unit	Nominal	Limit
1. Audio Output Power	10% THD: Lch/Rch	W	5.0/5.0	4.5/4.5
2. Audio Distortion	500mW: Lch/Rch	%	1.0/1.0	4.0/4.0
3. Audio Freq. Response	–6dB: Lch –6dB: Rch	Hz Hz	100 to 10 k 100 to 10 k	--- ---

Note: Nominal specifications represent the design specifications. All units should be able to approximate these. Some will exceed and some may drop slightly below these specifications. Limit specifications represent the absolute worst condition that still might be considered acceptable. In no case should a unit fail to meet limit specifications.

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for LCD TV Circuit

1. **Before returning an instrument to the customer,** always make a safety check of the entire instrument, including, but not limited to, the following items:
   - **a.** Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**
   - **b.** Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the Liquid Crystal Panel and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.
   - **c. Antenna Cold Check -** With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer. Repeat this test with the instrument AC switch in the off position.
   - **d. Leakage Current Hot Check -** With the instrument completely reassembled, plug the AC line cord directly into a 120 V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1410, (50.7). With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milli-ampere. Reverse the instrument power cord plug in the outlet and repeat the test.

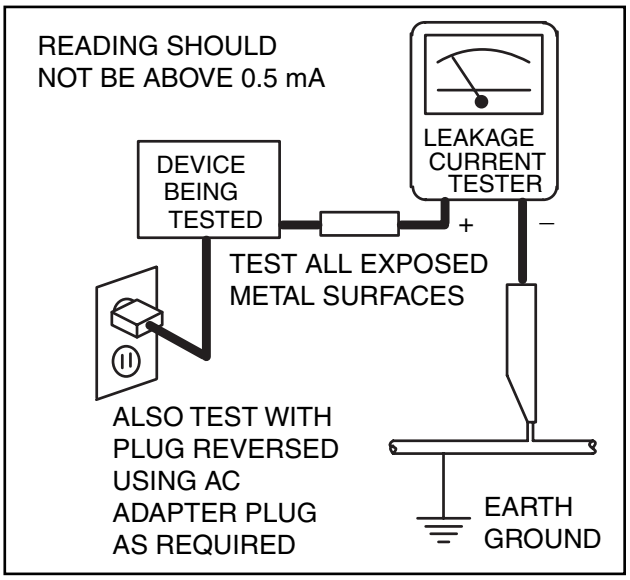

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the Liquid Crystal Panel.

3. **Design Alteration Warning -** Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.
4. **Hot Chassis Warning -**
   a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and maybe safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground.
   b. Some TV receiver chassis normally have 85V AC(RMS) between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.
   c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.
5. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and, e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.
6. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.
7. **Product Safety Notice -** Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc. Parts that have special safety characteristics are identified by a ⚠ on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The product's safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm they comply with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

A. Parts identified by the ⚠ symbol are critical for safety.
Replace only with part number specified.

B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.
Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.

C. Use specified internal wiring. Note especially:
1) Wires covered with PVC tubing
2) Double insulated wires
3) High voltage leads

D. Use specified insulating materials for hazardous live parts. Note especially:
1) Insulation Tape
2) PVC tubing
3) Spacers
4) Insulators for transistors.

E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.

F. Observe that the wires do not contact heat producing parts (heat sinks, oxide metal film resistors, fusible resistors, etc.)

G. Check that replaced wires do not contact sharp edged or pointed parts.

H. When a power cord has been replaced, check that 5~6 kg of force in any direction will not loosen it.

I. Also check areas surrounding repaired locations.

J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

K. Crimp type wire connector
The power transformer uses crimp type connectors which connect the power cord and the primary side of the transformer. When replacing the transformer, follow these steps carefully and precisely to prevent shock hazards.
Replacement procedure
1) Remove the old connector by cutting the wires at a point close to the connector.
Important: Do not re-use a connector (discard it).
2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

L. When connecting or disconnecting the internal connectors, first, disconnect the AC plug from the AC supply outlet.

M. When installing parts or assembling the cabinet parts, be sure to use the proper screws and tighten certainly.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1: Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d), (d')
110 to 130 V	U.S.A. or Canada	≥ 3.2 mm (0.126 inches)

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

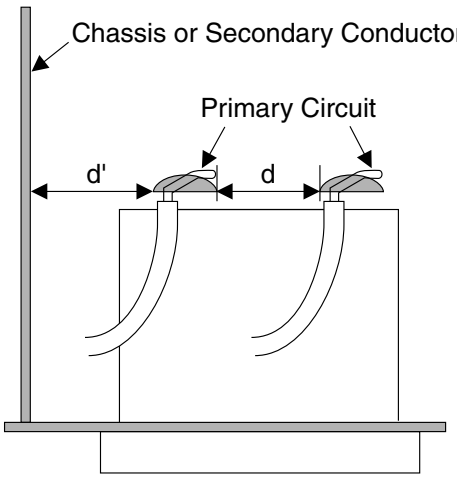

Fig. 1

2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.) is lower than or equal to the specified value in the table below.

Measuring Method: (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

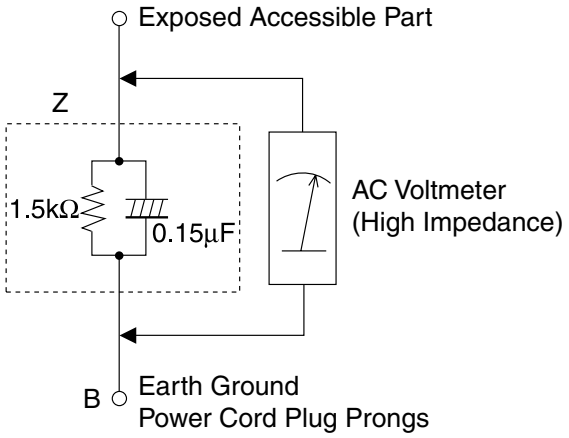

Fig. 2

Table 2: Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 130 V	U.S.A. or Canada	0.15 μF CAP. & 1.5 kΩ RES. Connected in parallel	i ≤ 0.5 mA rms	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

STANDARD NOTES FOR SERVICING

Circuit Board Indications

1. The output pin of the 3 pin Regulator ICs is indicated as shown.

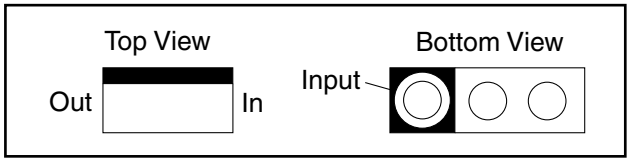

2. For other ICs, pin 1 and every fifth pin are indicated as shown.

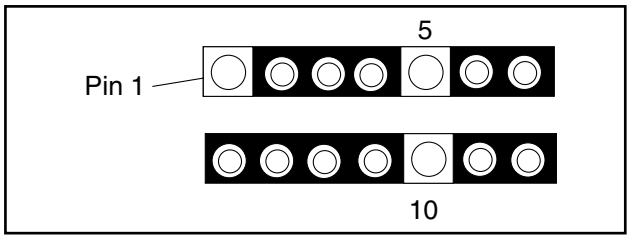

3. The 1st pin of every male connector is indicated as shown.

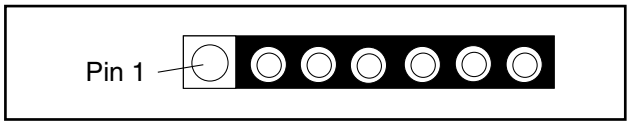

Pb (Lead) Free Solder

Pb free mark will be found on PCBs which use Pb free solder. (Refer to figure.) For PCBs with Pb free mark, be sure to use Pb free solder. For PCBs without Pb free mark, use standard solder.

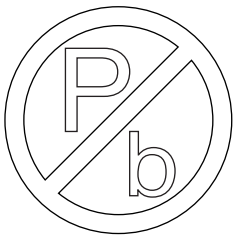

Pb free mark

How to Remove / Install Flat Pack-IC

1. Removal

With Hot-Air Flat Pack-IC Desoldering Machine:

1. Prepare the hot-air flat pack-IC desoldering machine, then apply hot air to the Flat Pack-IC (about 5 to 6 seconds). (Fig. S-1-1)

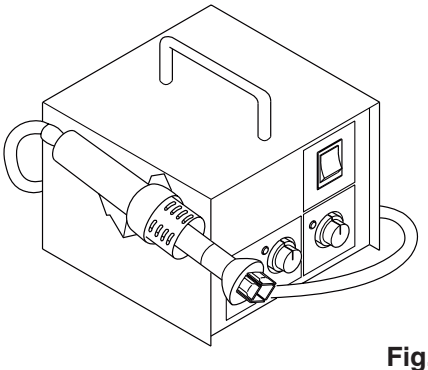

Fig. S-1-1

2. Remove the flat pack-IC with tweezers while applying the hot air.
3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

CAUTION:

1. The Flat Pack-IC shape may differ by models. Use an appropriate hot-air flat pack-IC desoldering machine, whose shape matches that of the Flat Pack-IC.
2. Do not supply hot air to the chip parts around the flat pack-IC for over 6 seconds because damage to the chip parts may occur. Put masking tape around the flat pack-IC to protect other parts from damage. (Fig. S-1-2)

3. The flat pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or the solder lands under the IC when removing it.

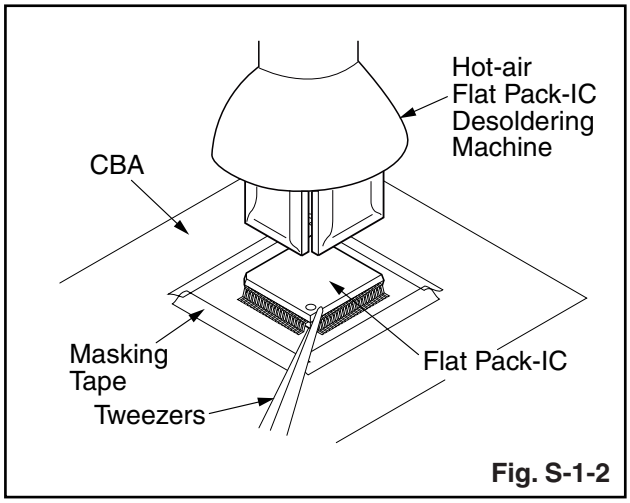

Fig. S-1-2

With Soldering Iron:

1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)

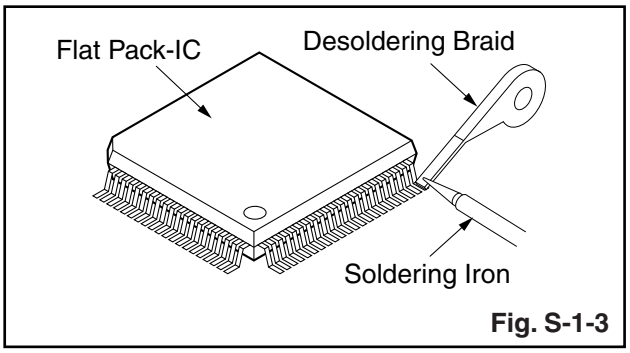

Fig. S-1-3

2. Lift each lead of the flat pack-IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air desoldering machine. (Fig. S-1-4)

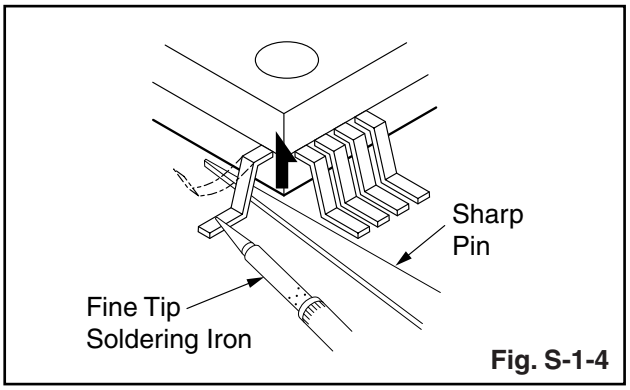

Fig. S-1-4

3. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
4. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

With Iron Wire:

1. Using desoldering braid, remove the solder from all pins of the flat pack-IC. When you use solder flux which is applied to all pins of the flat pack-IC, you can remove it easily. (Fig. S-1-3)
2. Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.
3. While heating the pins using a fine tip soldering iron or hot air blower, pull up the wire as the solder melts so as to lift the IC leads from the CBA contact pads as shown in Fig. S-1-5.
4. Bottom of the flat pack-IC is fixed with glue to the CBA; when removing entire flat pack-IC, first apply soldering iron to center of the flat pack-IC and heat up. Then remove (glue will be melted). (Fig. S-1-6)
5. Release the flat pack-IC from the CBA using tweezers. (Fig. S-1-6)

Note: When using a soldering iron, care must be taken to ensure that the flat pack-IC is not being held by glue. When the flat pack-IC is removed from the CBA, handle it gently because it may be damaged if force is applied.

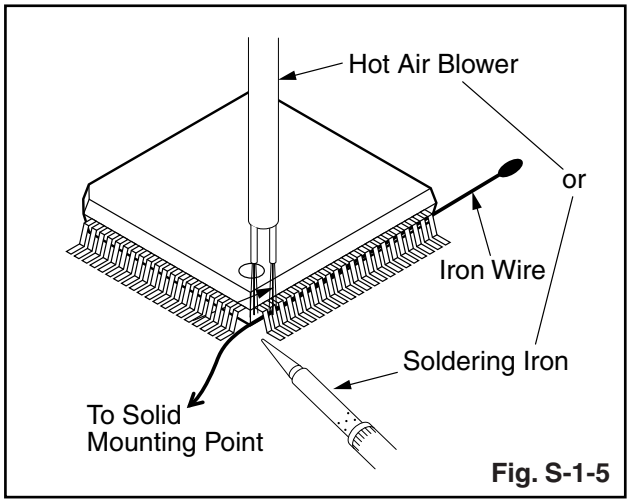

Fig. S-1-5

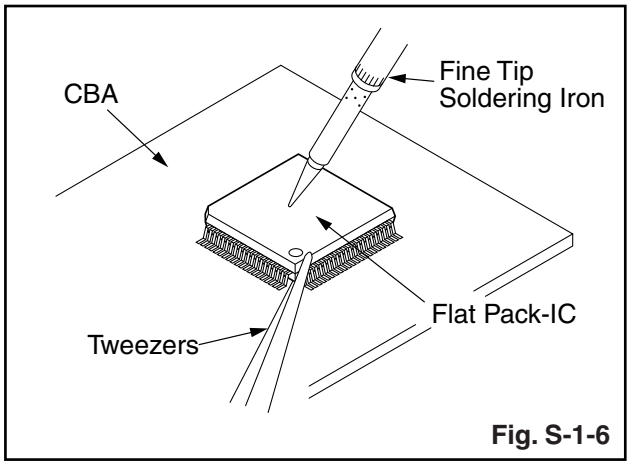

Fig. S-1-6

2. Installation

1. Using desoldering braid, remove the solder from the foil of each pin of the flat pack-IC on the CBA so you can install a replacement flat pack-IC more easily.
2. The "●" mark on the flat pack-IC indicates pin 1. (See Fig. S-1-7.) Be sure this mark matches the 1 on the PCB when positioning for installation. Then presolder the four corners of the flat pack-IC. (See Fig. S-1-8.)
3. Solder all pins of the flat pack-IC. Be sure that none of the pins have solder bridges.

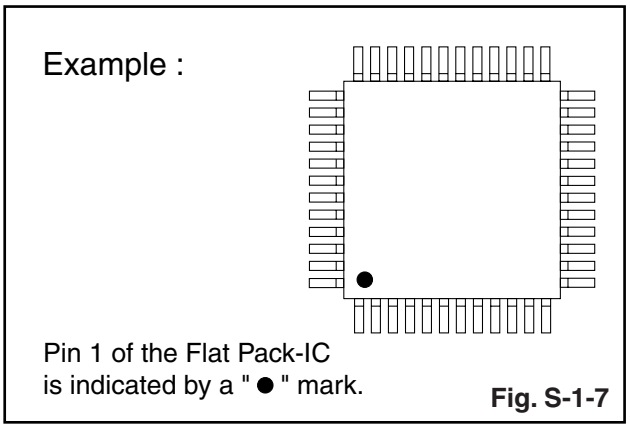

Fig. S-1-7

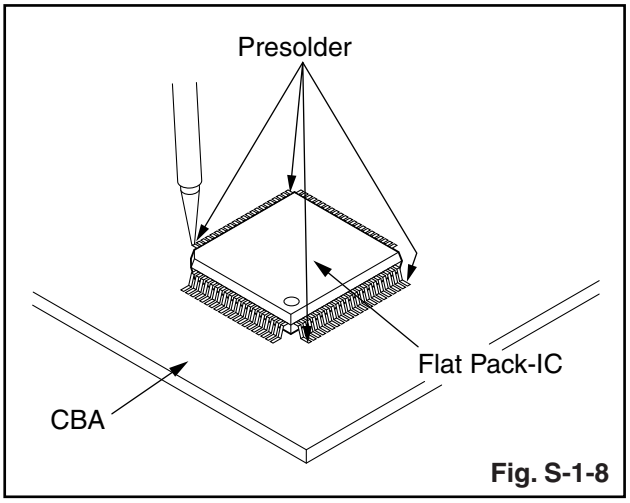

Fig. S-1-8

Instructions for Handling Semi-conductors

Electrostatic breakdown of the semi-conductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

1. Ground for Human Body

Be sure to wear a grounding band (1 MΩ) that is properly grounded to remove any static electricity that may be charged on the body.

2. Ground for Workbench

Be sure to place a conductive sheet or copper plate with proper grounding (1 MΩ) on the workbench or other surface, where the semi-conductors are to be placed. Because the static electricity charge on clothing will not escape through the body grounding band, be careful to avoid contacting semi-conductors with your clothing.

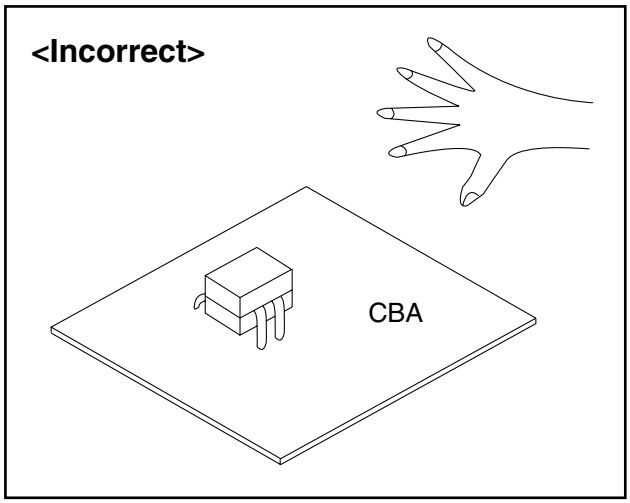

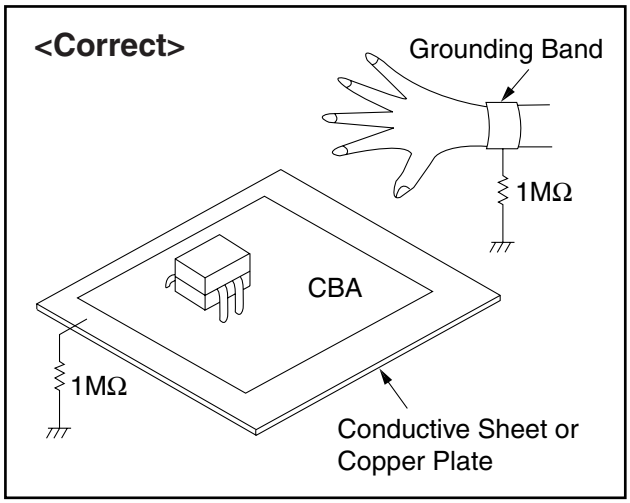

CABINET DISASSEMBLY INSTRUCTIONS

1. Disassembly Flowchart

This flowchart indicates the disassembly steps for the cabinet parts, and the CBA in order to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route and dress the cables as they were.

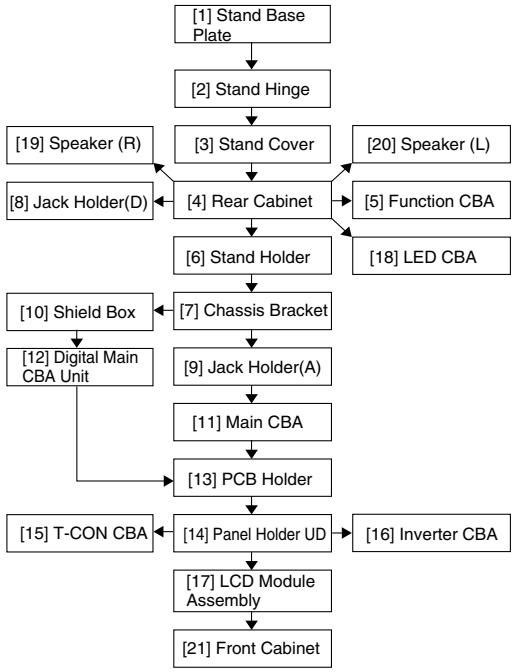

2. Disassembly Method

Step/ Loc. No.	Part	Removal		
		Fig. No.	Remove/*Unhook/ Unlock/Release/ Unplug/Unclamp/ Desolder	Note
[1]	Stand Base Plate	D1	4(S-1), 6(S-2), 5(S-3)	---
[2]	Stand Hinge	D1	----------	---
[3]	Stand Cover	D1	----------	---
[4]	Rear Cabinet	D1	10(S-4), 4(S-5)	---
[5]	Function CBA	D1 D5	3(S-6), *CN101	---
[6]	Stand Holder	D2	2(S-7), 2(S-8)	---
[7]	Chassis Bracket	D2	10(S-9)	---
[8]	Jack Holder(D)	D2	(S-10)	---
[9]	Jack Holder(A)	D2	4(S-11)	---
[10]	Shield Box	D2	7(S-12), (N-1)	---
[11]	Main CBA	D3 D5	4(S-13), *CN151, *CN253, *CN1111, *CN1112, *CN1113, *CN1116	---
[12]	Digital Main CBA Unit	D3 D5	4(S-14), *CN1121	---
[13]	PCB Holder	D3	2(S-15), 3(S-16)	---
[14]	Panel Holder UD	D4	6(S-17), 6(S-18)	---
[15]	T-CON CBA	D4	6(S-19), *CN1210, *CN1211, Shield Plate	---
[16]	Inverter CBA	D4	6(S-20), *CN1050, *CN1100, *CN1150, *CN1200, *CN1250, *CN1300, *CN1350, *CN1400	---
[17]	LCD Module Assembly	D4	4(S-21)	---
[18]	LED CBA	D4	2(S-22), *CN803, *CN804	---
[19]	Speaker (R)	D4	4(S-23)	---
[20]	Speaker (L)	D4	4(S-24)	---
[21]	Front Cabinet	D4	----------	---
↓ (1)	↓ (2)	↓ (3)	↓ (4)	↓ (5)

Note:

(1) Order of steps in procedure. When reassembling, follow the steps in reverse order. These numbers are also used as the Identification (location) No. of parts in figures.

(2) Parts to be removed or installed.

(3) Fig. No. showing procedure of part location

(4) Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
N = Nut, L = Locking Tab, S = Screw,
CN = Connector
* = Unhook, Unlock, Release, Unplug, or Desolder
e.g. 2(S-2) = two Screws (S-2),
2(L-2) = two Locking Tabs (L-2)

(5) Refer to the following "Reference Notes in the Table."

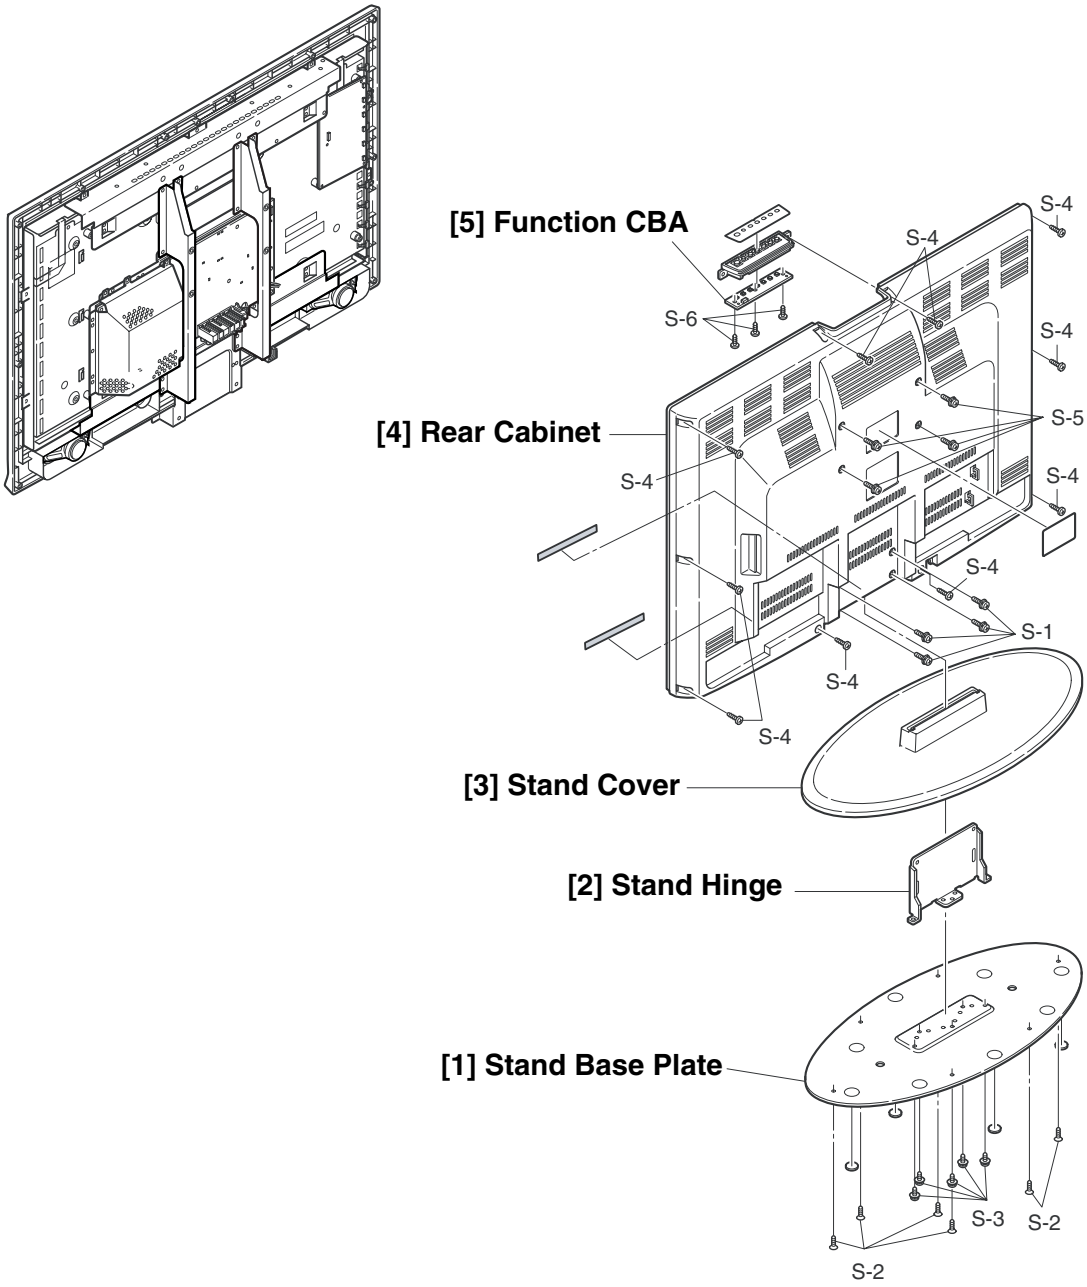
[5] Function CBA
[4] Rear Cabinet
[3] Stand Cover
[2] Stand Hinge
[1] Stand Base Plate
S-1
S-2
S-3
S-4
S-5
S-6

Fig. D1

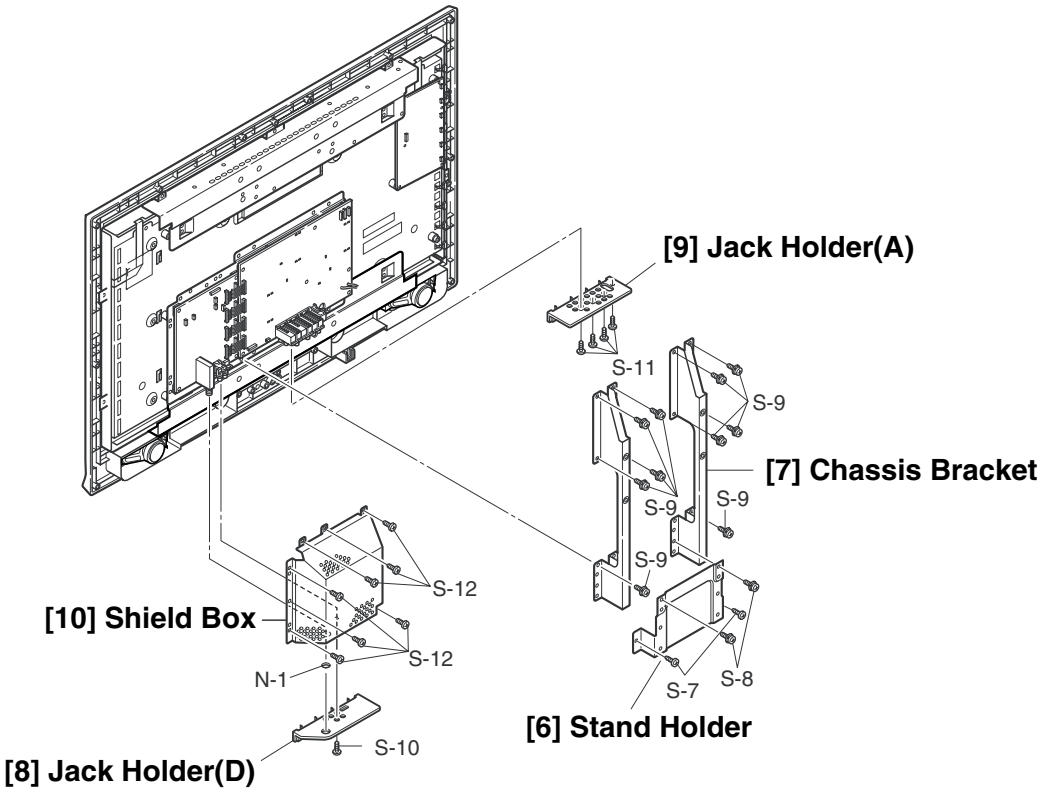
[9] Jack Holder(A)
S-11
S-9
[7] Chassis Bracket
S-9
S-9
S-9
S-12
[10] Shield Box
S-12
N-1
S-7
S-8
[6] Stand Holder
S-10
[8] Jack Holder(D)

Fig. D2

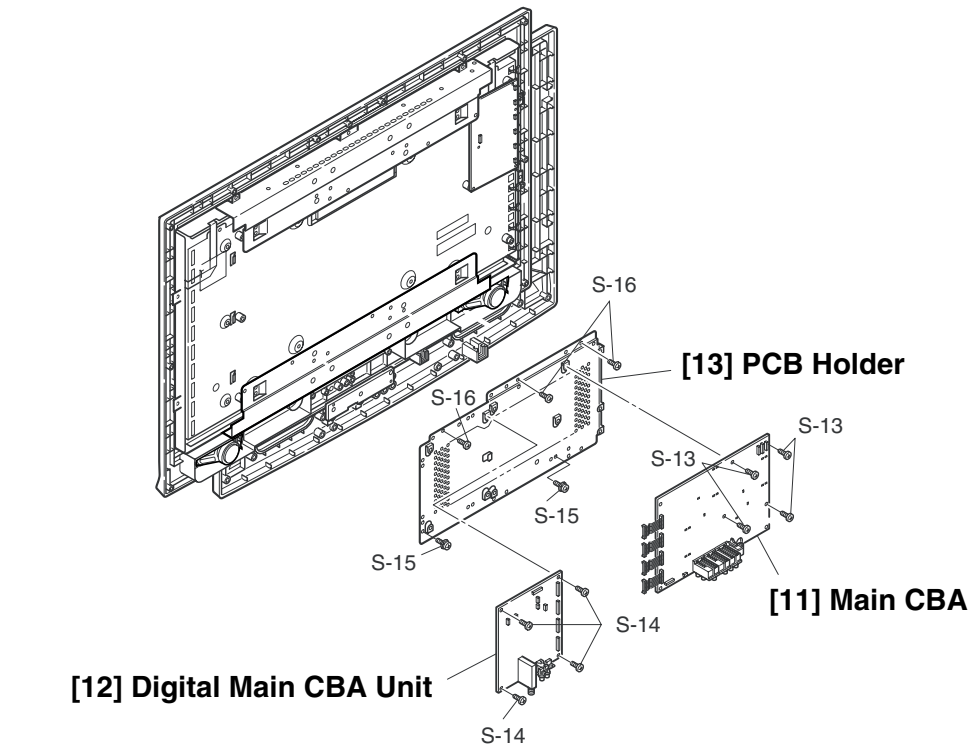
S-16
[13] PCB Holder
S-16
S-13
S-13
S-15
S-15
[11] Main CBA
S-14
[12] Digital Main CBA Unit
S-14

Fig. D3

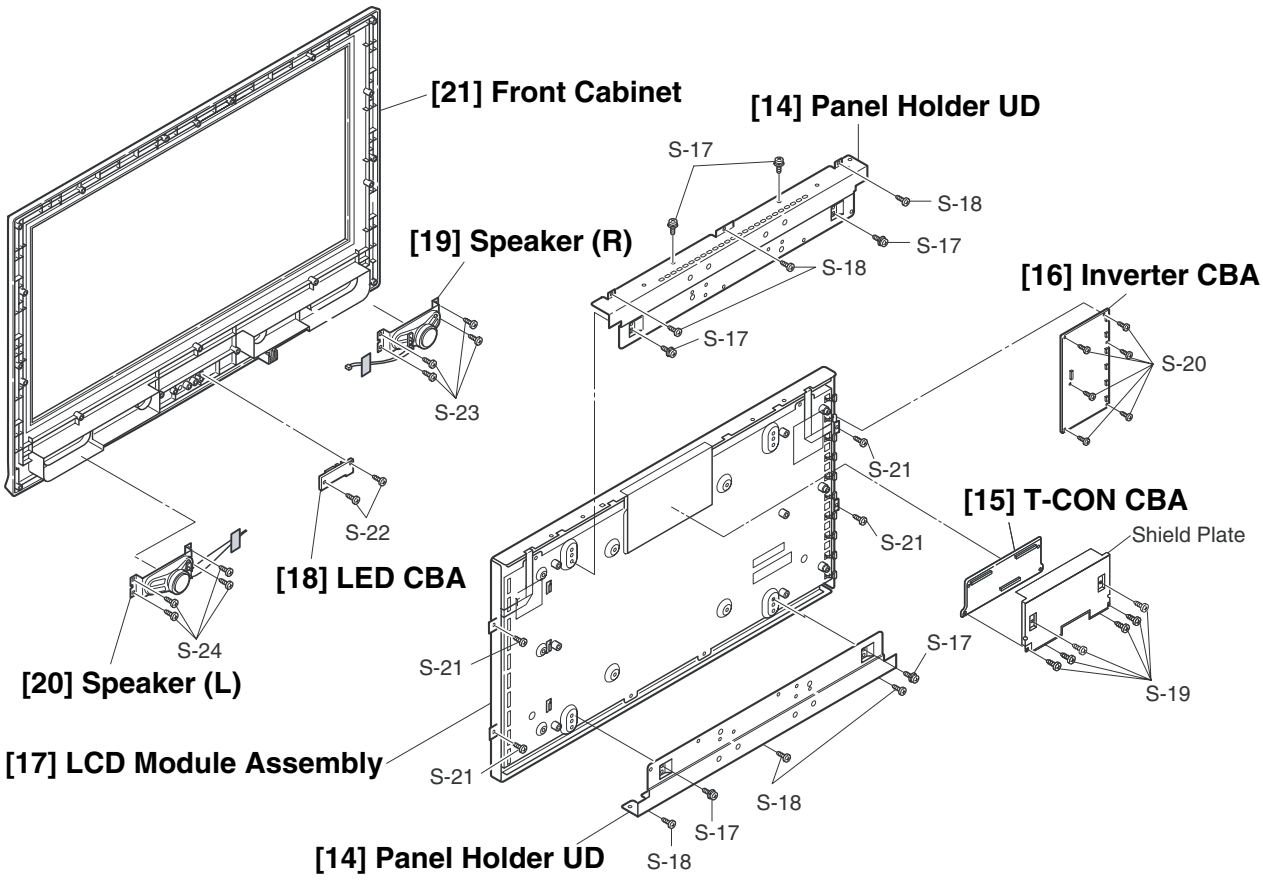
[21] Front Cabinet
[14] Panel Holder UD
S-17
S-18
S-17
[19] Speaker (R)
S-18
S-17
[16] Inverter CBA
S-20
S-23
S-21
[15] T-CON CBA
S-22
S-21
Shield Plate
[18] LED CBA
S-24
S-17
S-21
[20] Speaker (L)
S-19
[17] LCD Module Assembly
S-21
S-18
S-17
[14] Panel Holder UD
S-18

Fig. D4

TV Cable Wiring Diagram

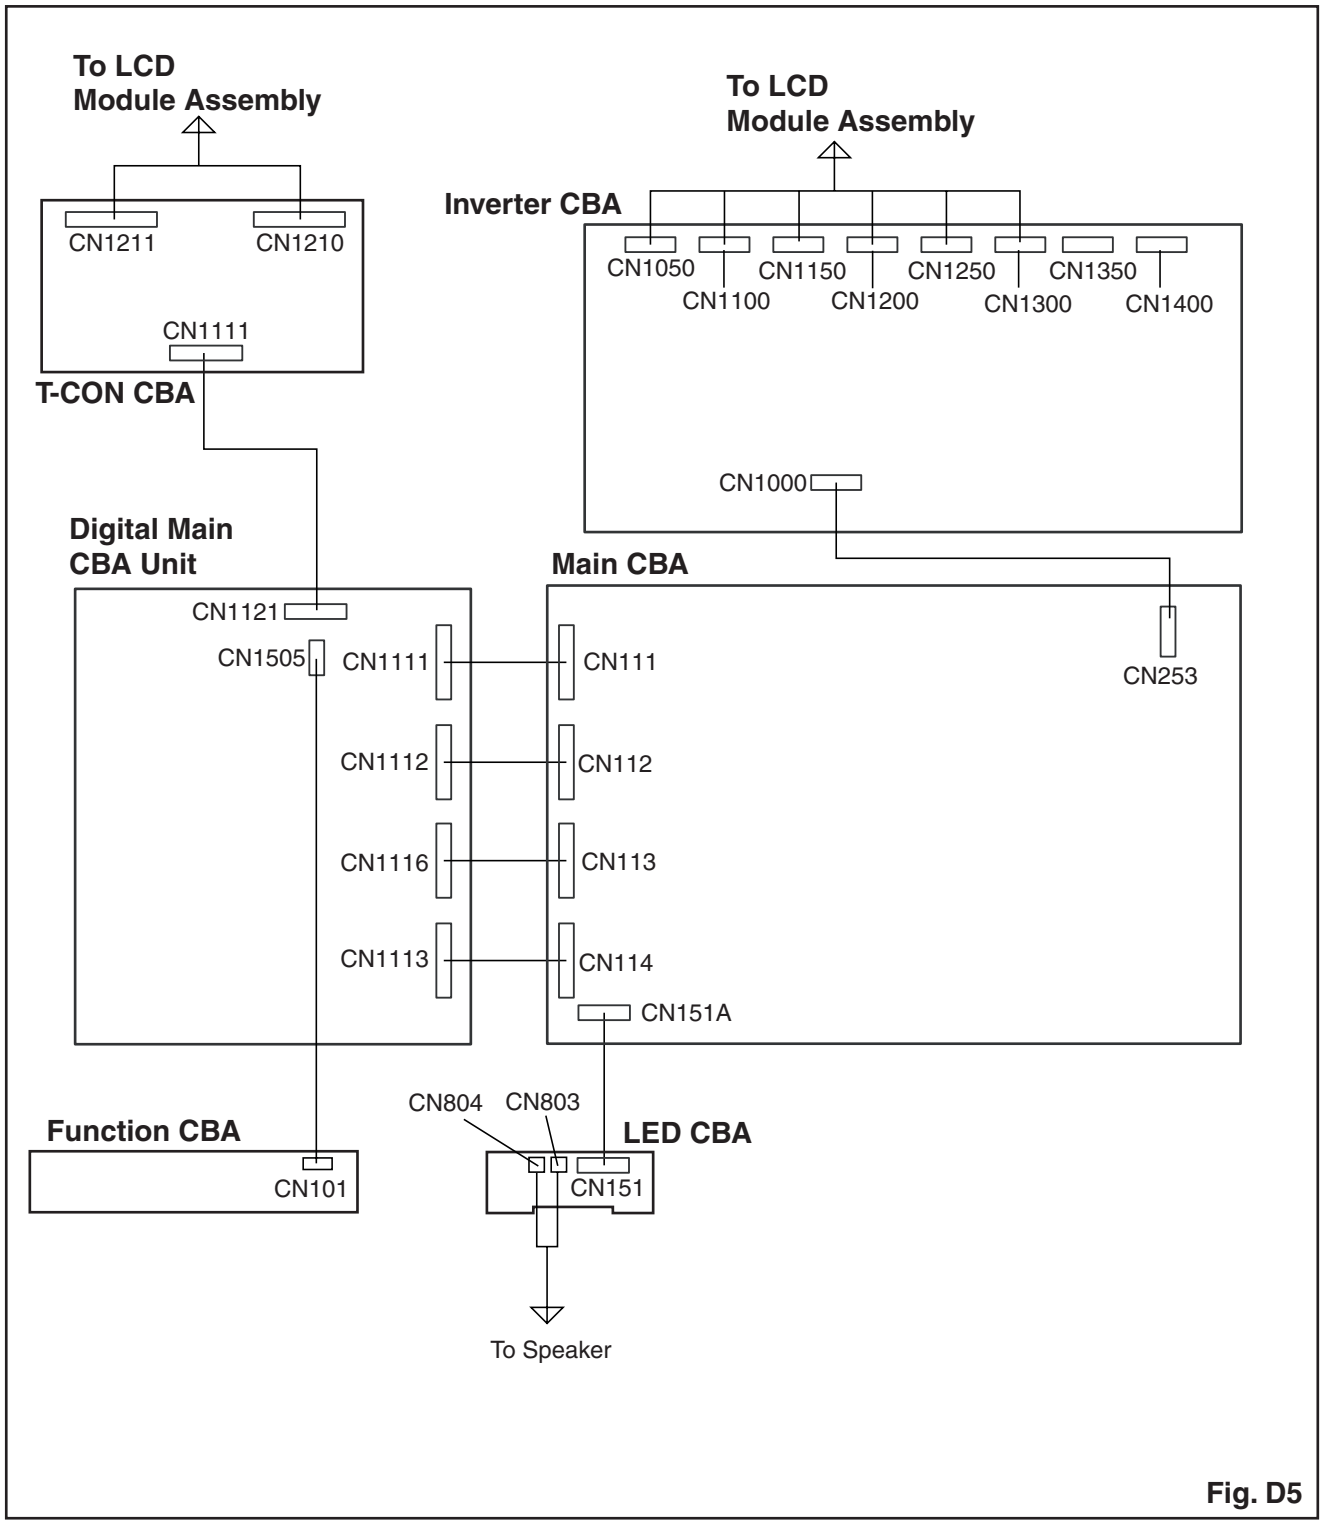

Fig. D5

ELECTRICAL ADJUSTMENT INSTRUCTIONS

General Note: "CBA" is abbreviation for "Circuit Board Assembly."

Note: Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed.
Also, do not attempt these adjustments unless the proper equipment is available.

Test Equipment Required

1. DC Voltmeter
2. NTSC Pattern Generator (Color Bar W/White Window, Red Color, Dot Pattern, Gray Scale, Monoscope, Multi-Burst)
3. Remote control unit: Part No. N0105UD or N0127UD
4. Color Analyzer

How to make Service remote control unit:

1. Prepare normal remote control unit.
   (Part No. N0105UD or N0127UD)
   Remove 3 Screws from the back lid. (Fig. 1-1)

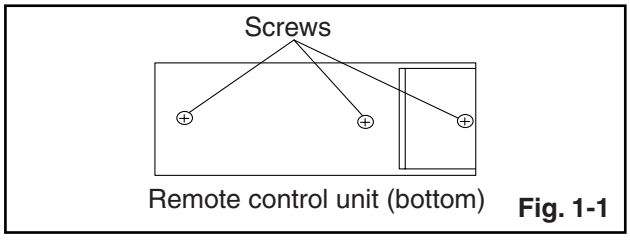

Fig. 1-1

2. Add J1 (Jumper Wire) to the remote control CBA. (Fig. 1-2)

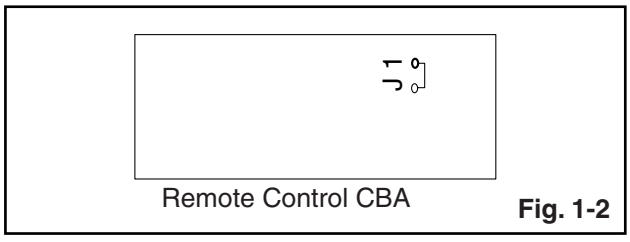

Fig. 1-2

How to set up the service mode:

Service mode:

1. Use the service remote control unit.
2. Turn the power on. (Use main power on the TV unit.)
3. Press [SLEEP] button on the service remote control unit. The following screen appears.

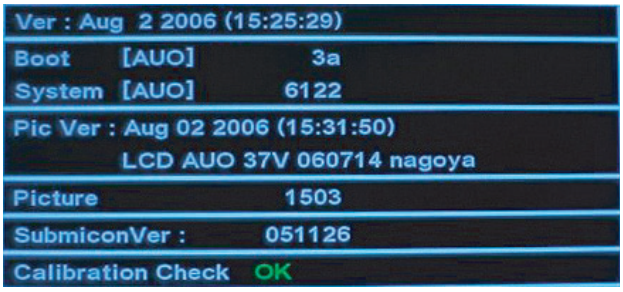
Ver : Aug 2 2006 (15:25:29)
Boot [AUO] 3a
System [AUO] 6122
Pic Ver : Aug 02 2006 (15:31:50)
LCD AUO 37V 060714 nagoya
Picture 1503
SubmiconVer : 051126
Calibration Check OK

1. Purity Check Mode

This mode cycles through full-screen displays of red, green, blue, and white to check for non-active pixels.

1. Enter the Service mode.
2. Each time pressing [7] button on the service remote control unit, the display changes as follows.

Purity Check Mode

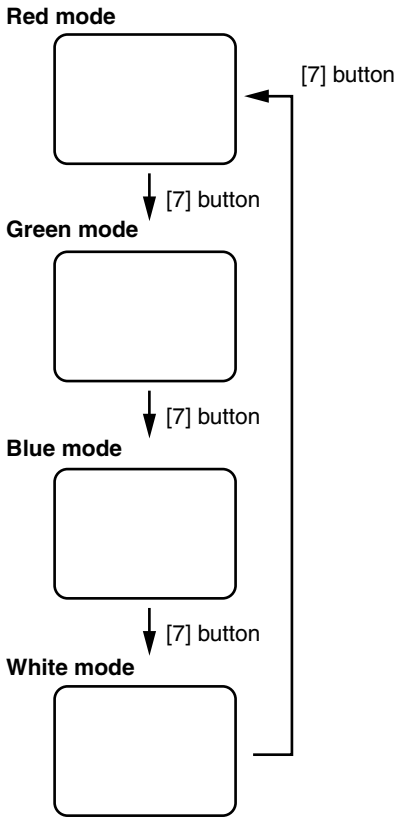

Note:
When entering this mode, the default setting is White mode.

The following adjustment normally are not attempted in the field. Only when replacing the LCD Panel then adjust as a preparation.

2. White Balance Adjustment

*This adjustment is required when reparing T-CON CBA.

Purpose: To mix red, green and blue beams correctly for pure white.

Symptom of Misadjustment: White becomes bluish or reddish.

Test Point	Adj. Point	Mode	Input
Screen	VOL. ▼ buttons	**[RF/VIDEO1]** C/D	White Purity (APL 80%) or (APL 20%)
M. EQ.		Spec.	
Pattern Generator, Color analyzer		x: 0.272 y: 0.278	
Figure			

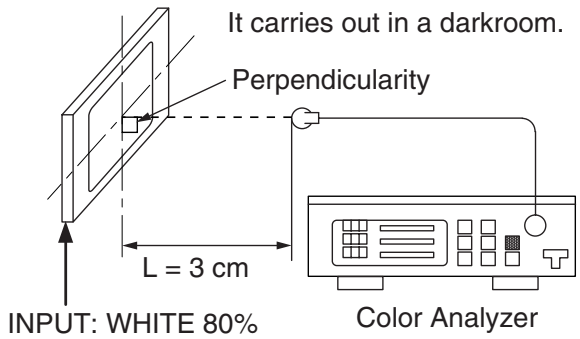

Note: Use service remote control unit

1. Operate the unit for more than 20 minutes.
2. Input the White Purity (APL 80% or APL 20%).
3. Set the color analyzer to the CHROMA mode and bring the optical receptor to the center on the LCD-Panel surface after zero point calibration as shown above.
   Note: The optical receptor must be set perpendicularly to the LCD Panel surface.
4. Enter the Service mode. Press [VOL ▼] button on the remote control unit and select “C/D” mode.
5. When “x” value and “y” value are not within specification, adjust “DB (C/D)” or “DR (C/D)”. Refer to “1. Initial Setting.”
   Note: “DB(C/D)” or “DR(C/D)” must be adjusted within ±3%.
6. Turn the power off and on again. (Main power button on the TV unit.)

3. Auto Calibration

Purpose: To bring the color adjustment of each component into standard alignment.

Symptom of Misadjustment: If this adjustment is incorrect, component signals do not reproduce the corresponding color.

1. Input 11step Gray Scale signal (0 IRE-100 IRE / step by 10 IRE) into only Y terminal of Component 1.

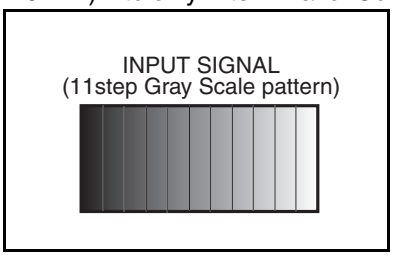

2. Enter the service mode.
3. To enter the Auto Calibration adjustment mode, press [6] button on the service remote control unit.
4. To start auto adjustment, press [CH ▲] button on the service remote control unit.
   - Upon completion, “Calibration Check OK” and “Push FCH UP key” appear on the screen.
   - If the auto adjustment failure, “Calibration Check NG” and “Push FCH UP key” appear on the screen.
5. Unplug AC cord and plug it in AC outlet again to reset then enter the service mode again.

4. Flicker Adjustment

*This adjustment is required when reparing T-CON CBA.

1. Enter the Service mode. (See page 5-1.)
2. Press [2] button on the remote control unit. The following screen appears.

3. If Flicker Adjustment is not fit, the screen become the following.

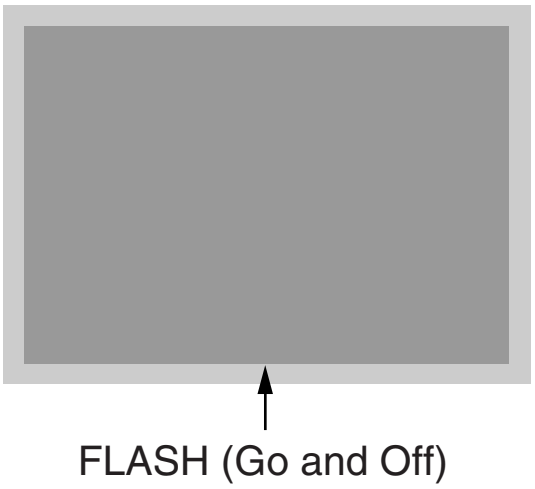

4. Turn the VR1 on the LCD Module so that flash stops.

HOW TO INITIALIZE THE LCD TELEVISION

How to initialize the LCD television:

1. To turn the power on, press [POWER] button on the normal remote control unit or the unit.
2. Use the service remote control unit. (Refer to “ELECTRICAL ADJUSTMENT INSTRUCTIONS” section.
3. To enter the service mode, press [SLEEP] button on the service remote control unit.
   - To cancel the service mode, press [TV POWER] button on the remote control.
4. To initialize the LCD television, press [DISPLAY] button on the normal remote control unit.
   - “INITIALIZED” (red) appears on the screen.
   - After few seconds (completion initialization), the screen is reset.

BLOCK DIAGRAMS

System Control Block Diagram

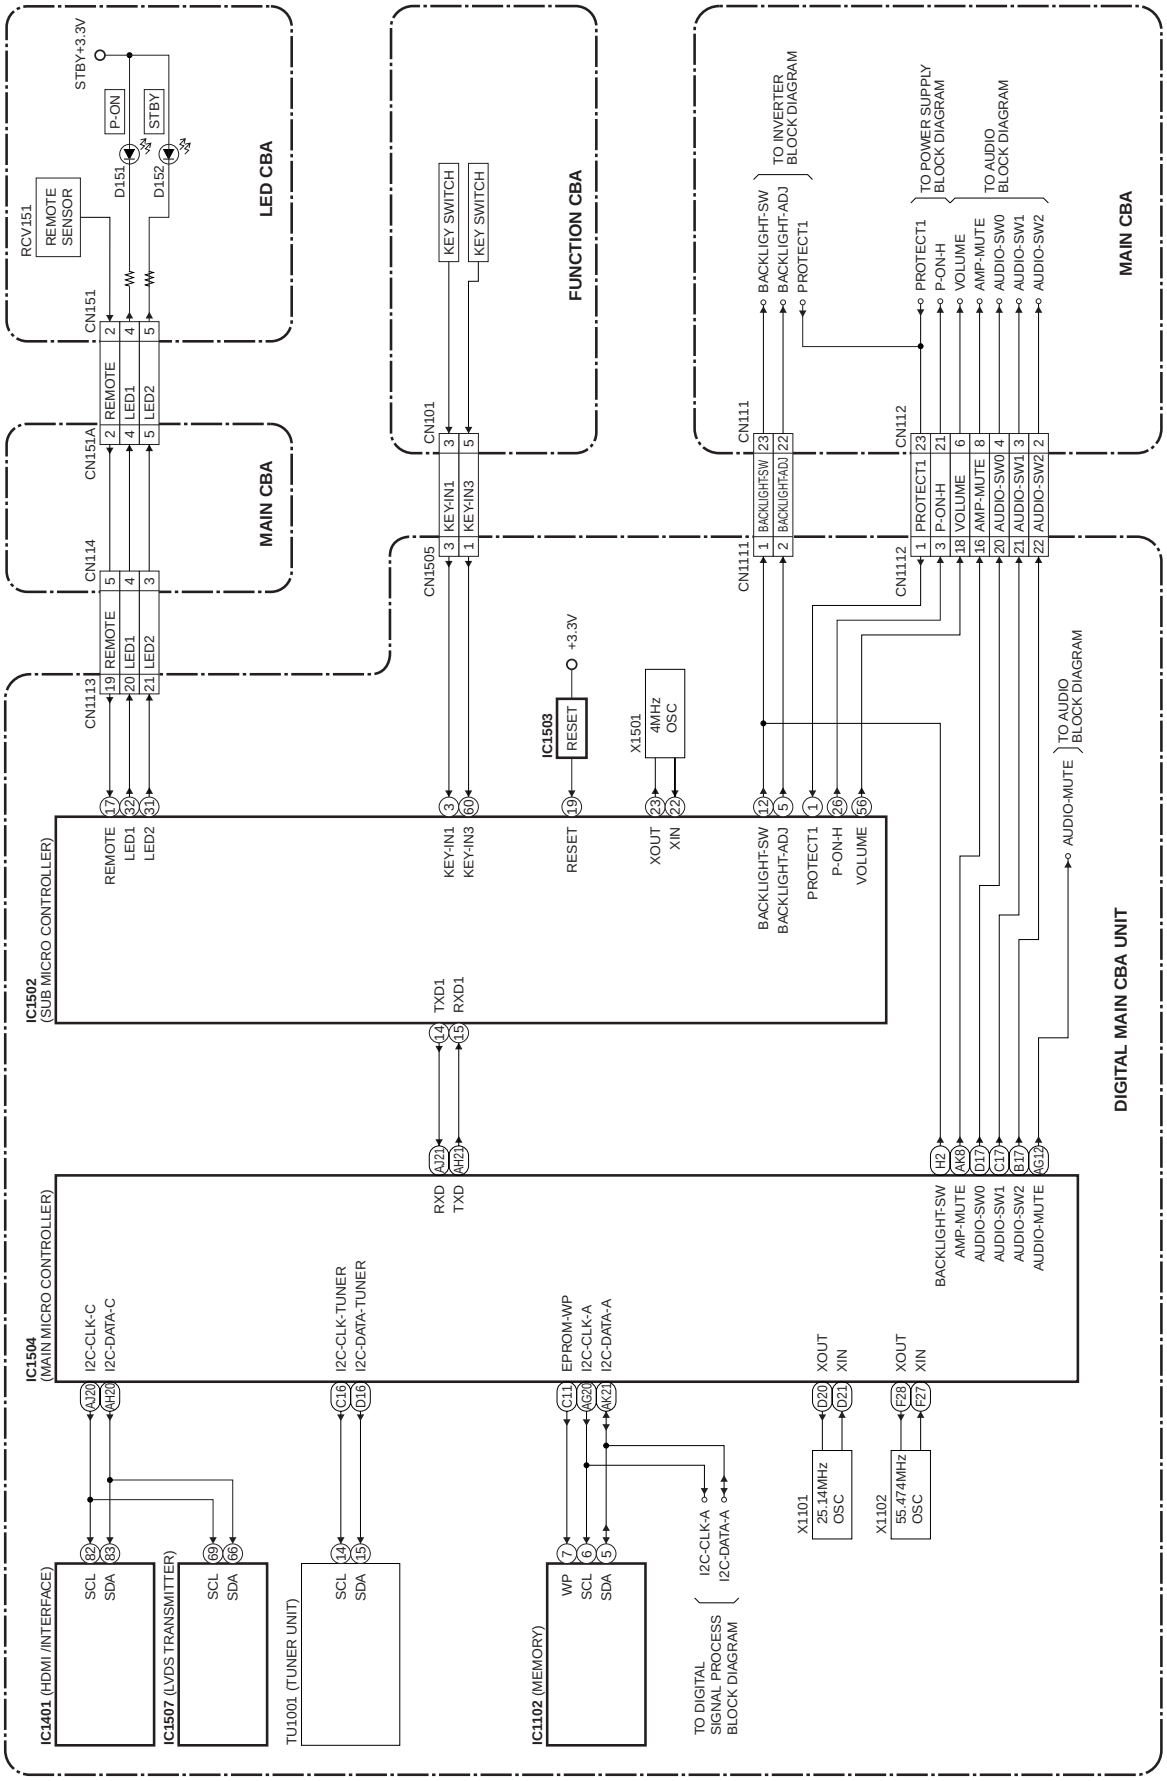

Video Block Diagram

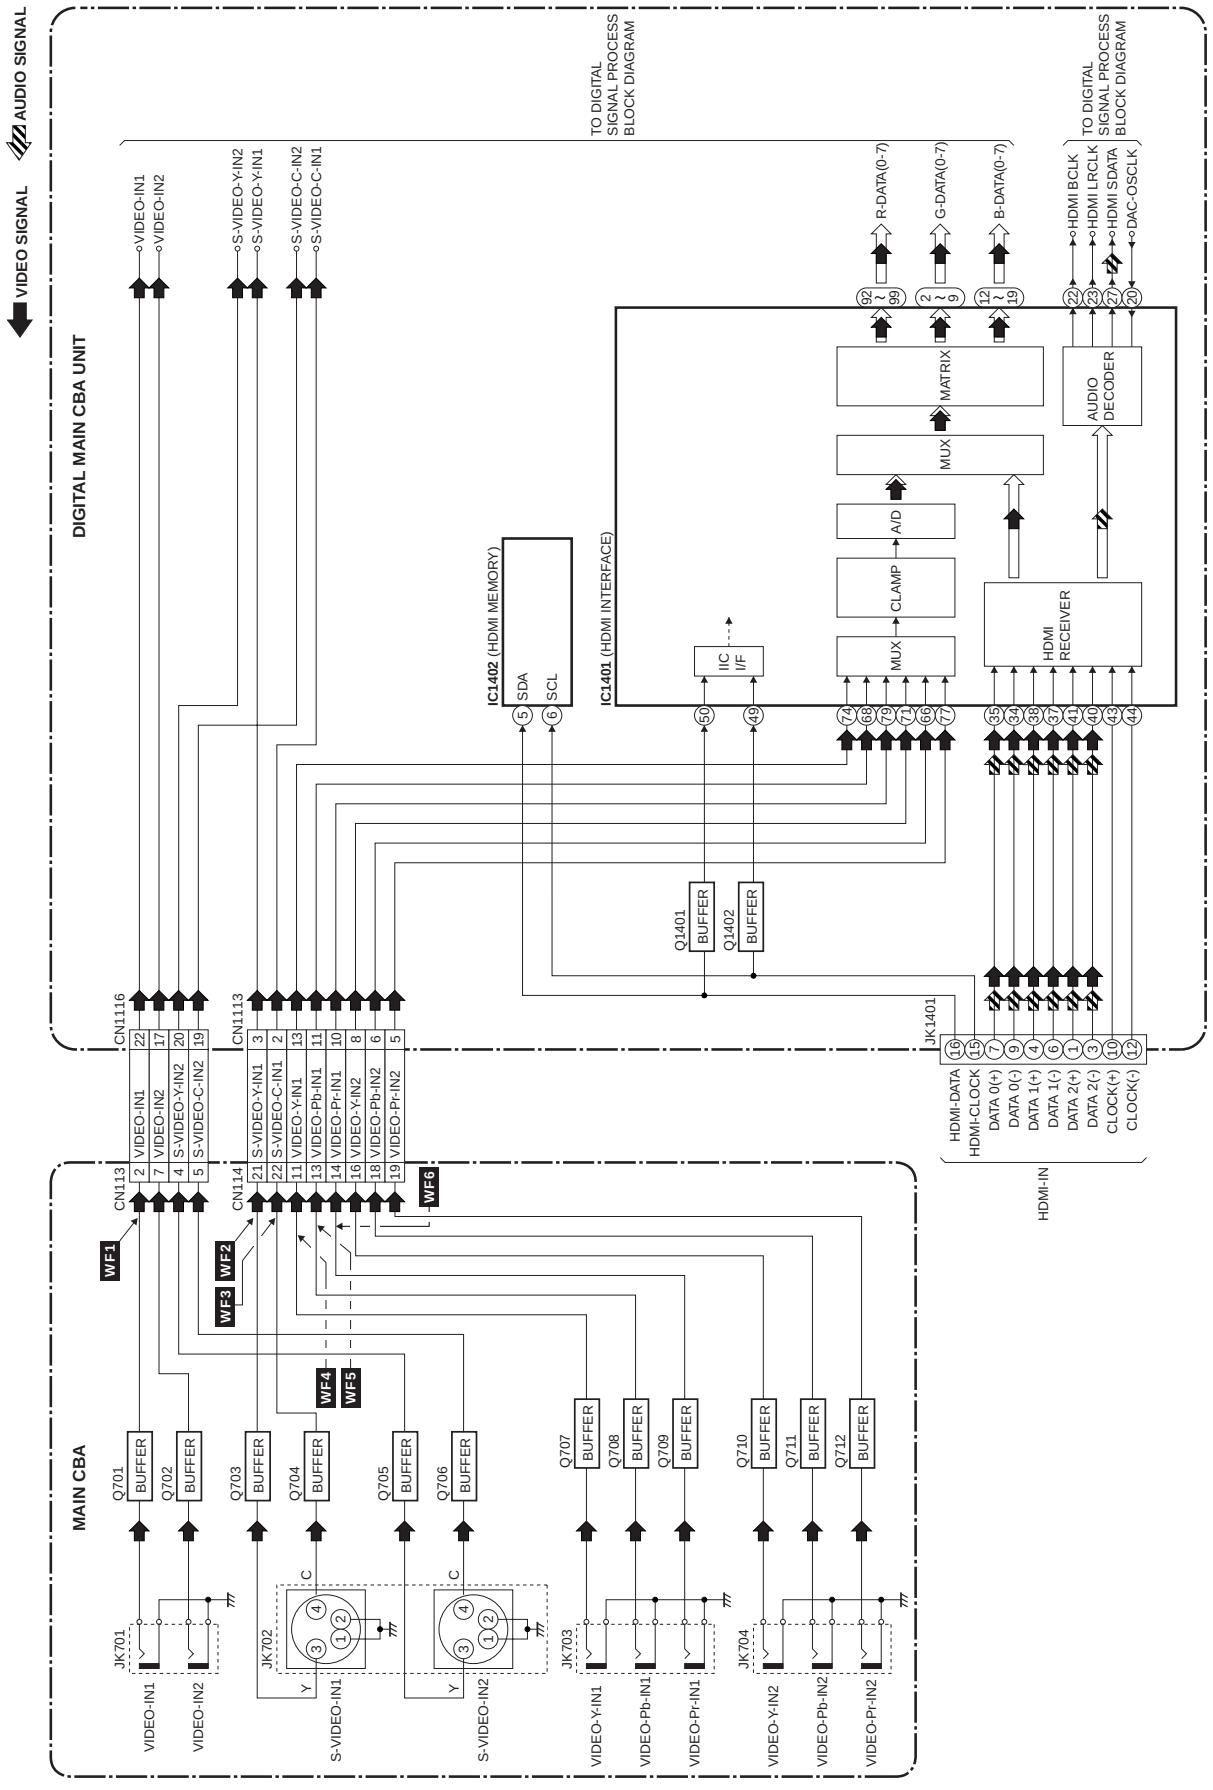

Digital Signal Process Block Diagram

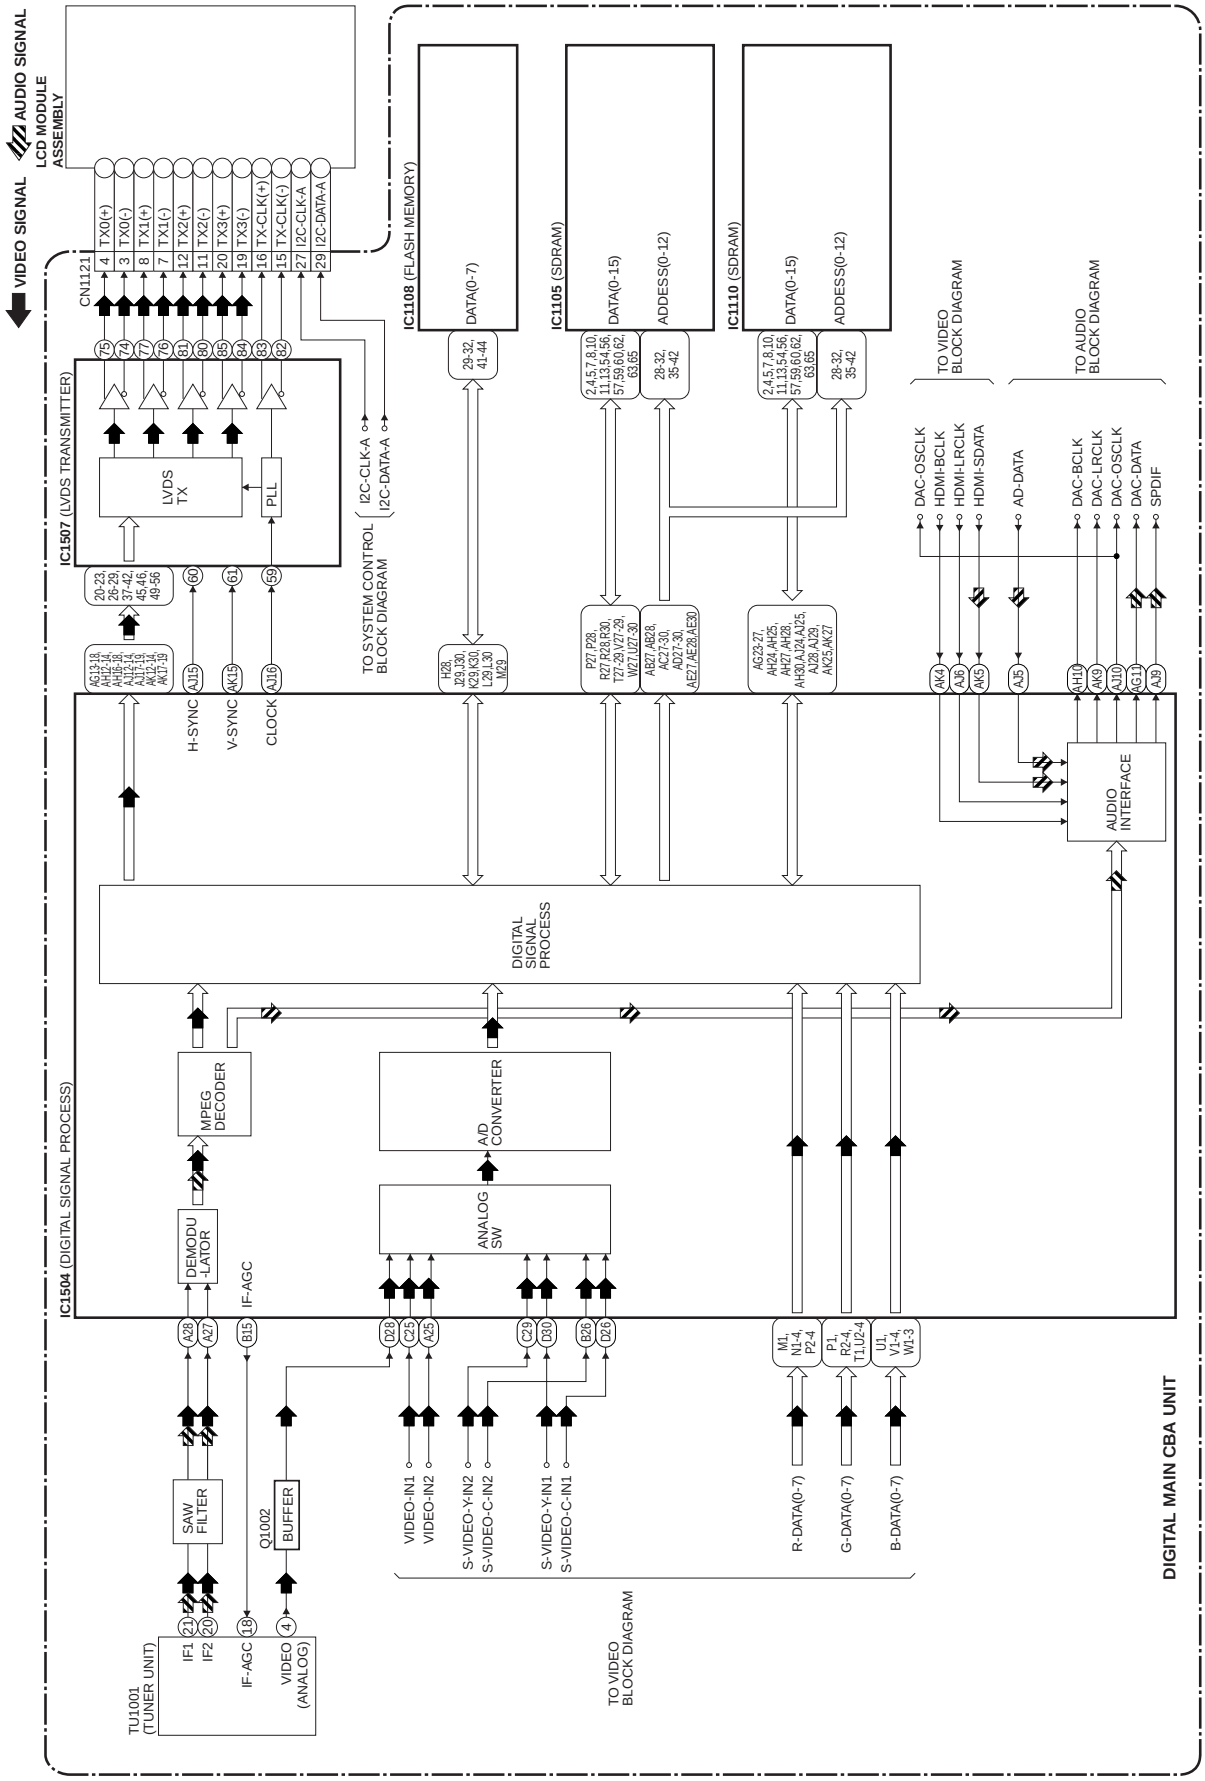

Audio Block Diagram

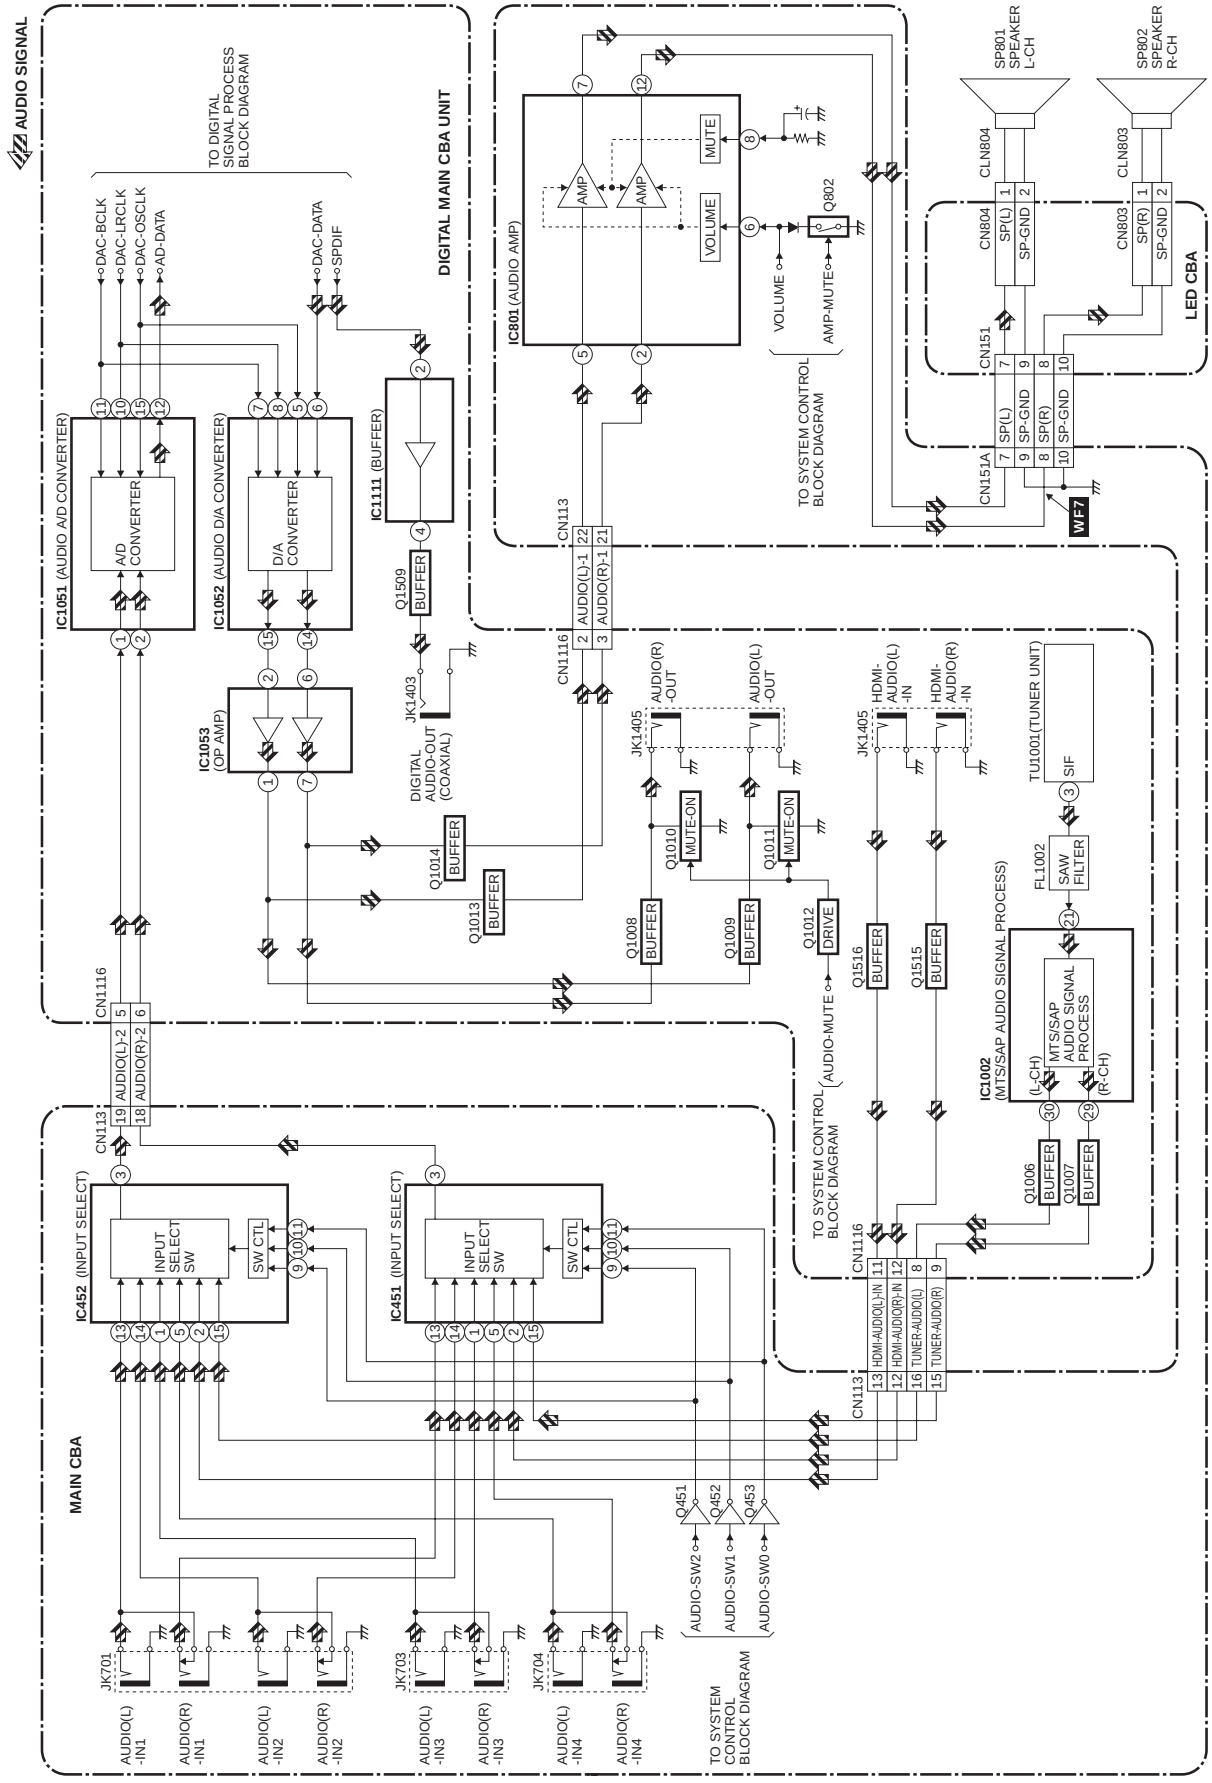

Inverter Block Diagram

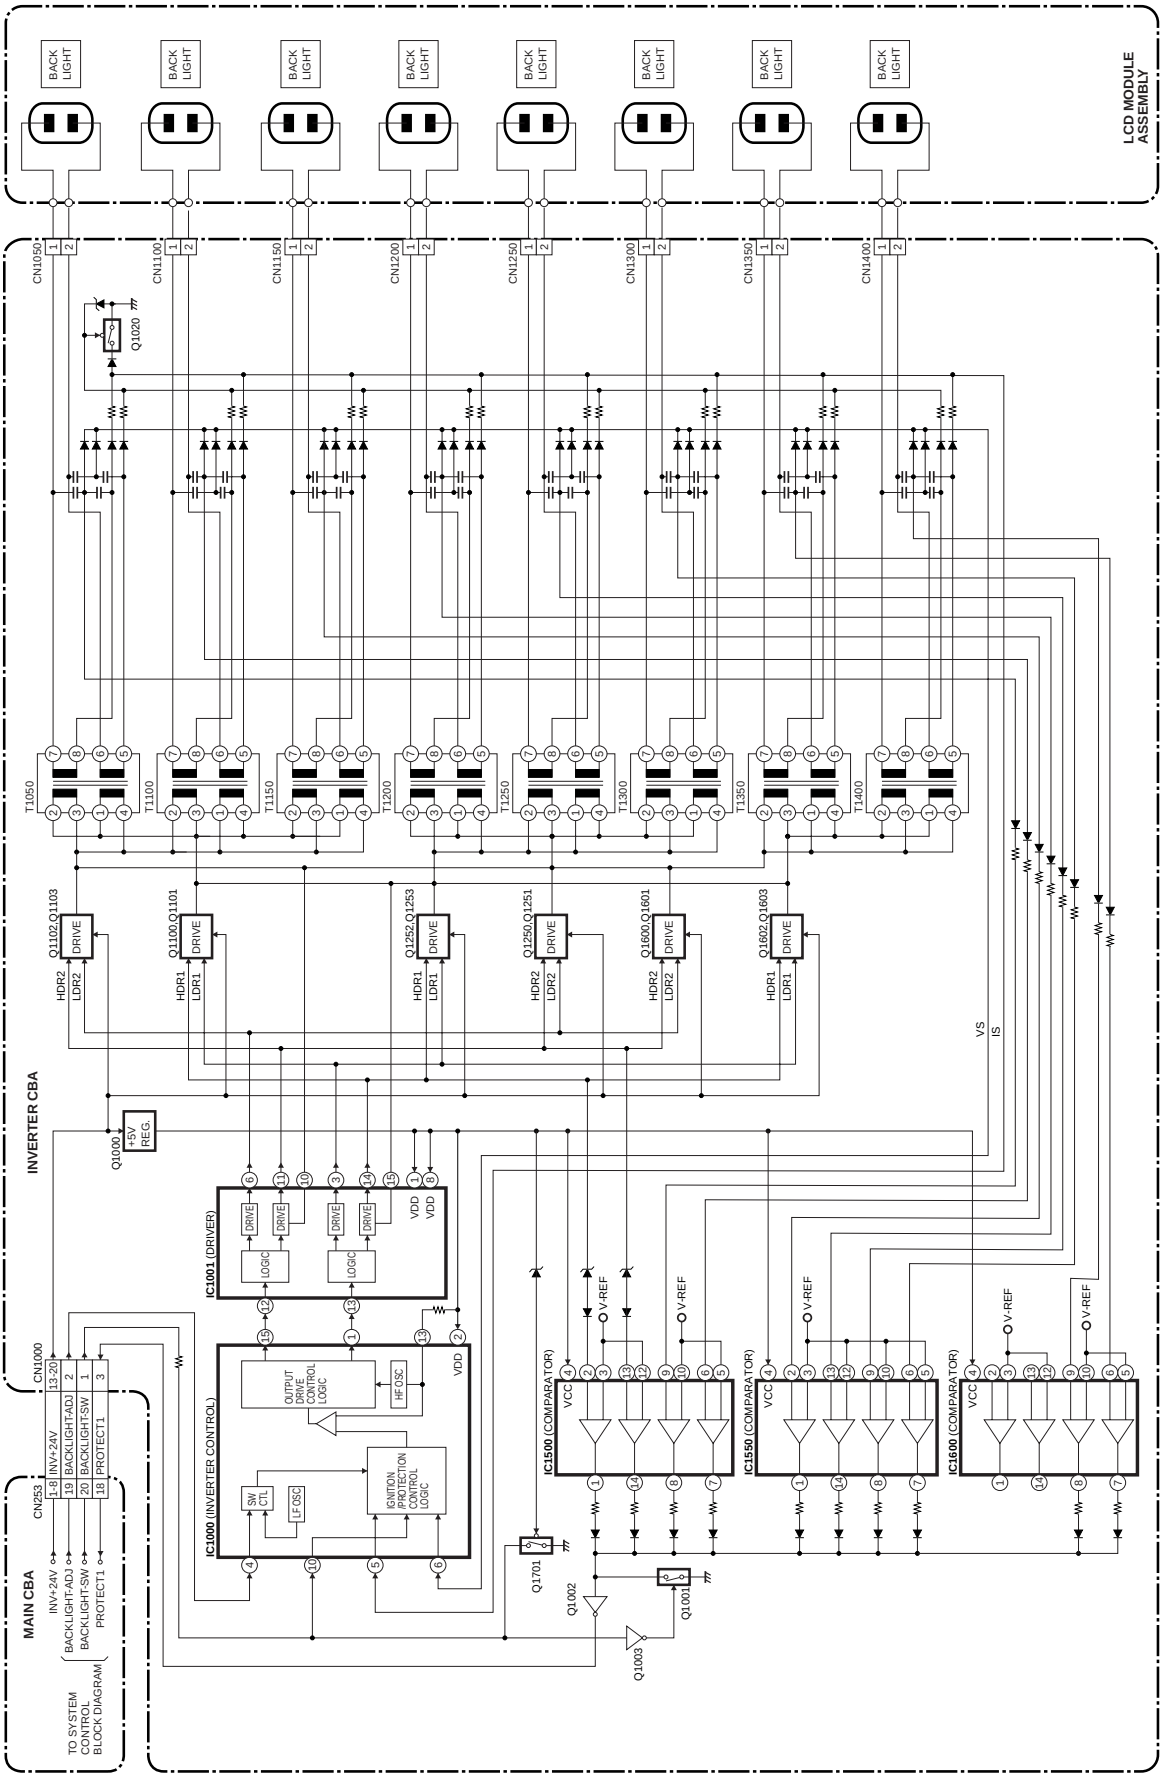

Power Supply Block Diagram

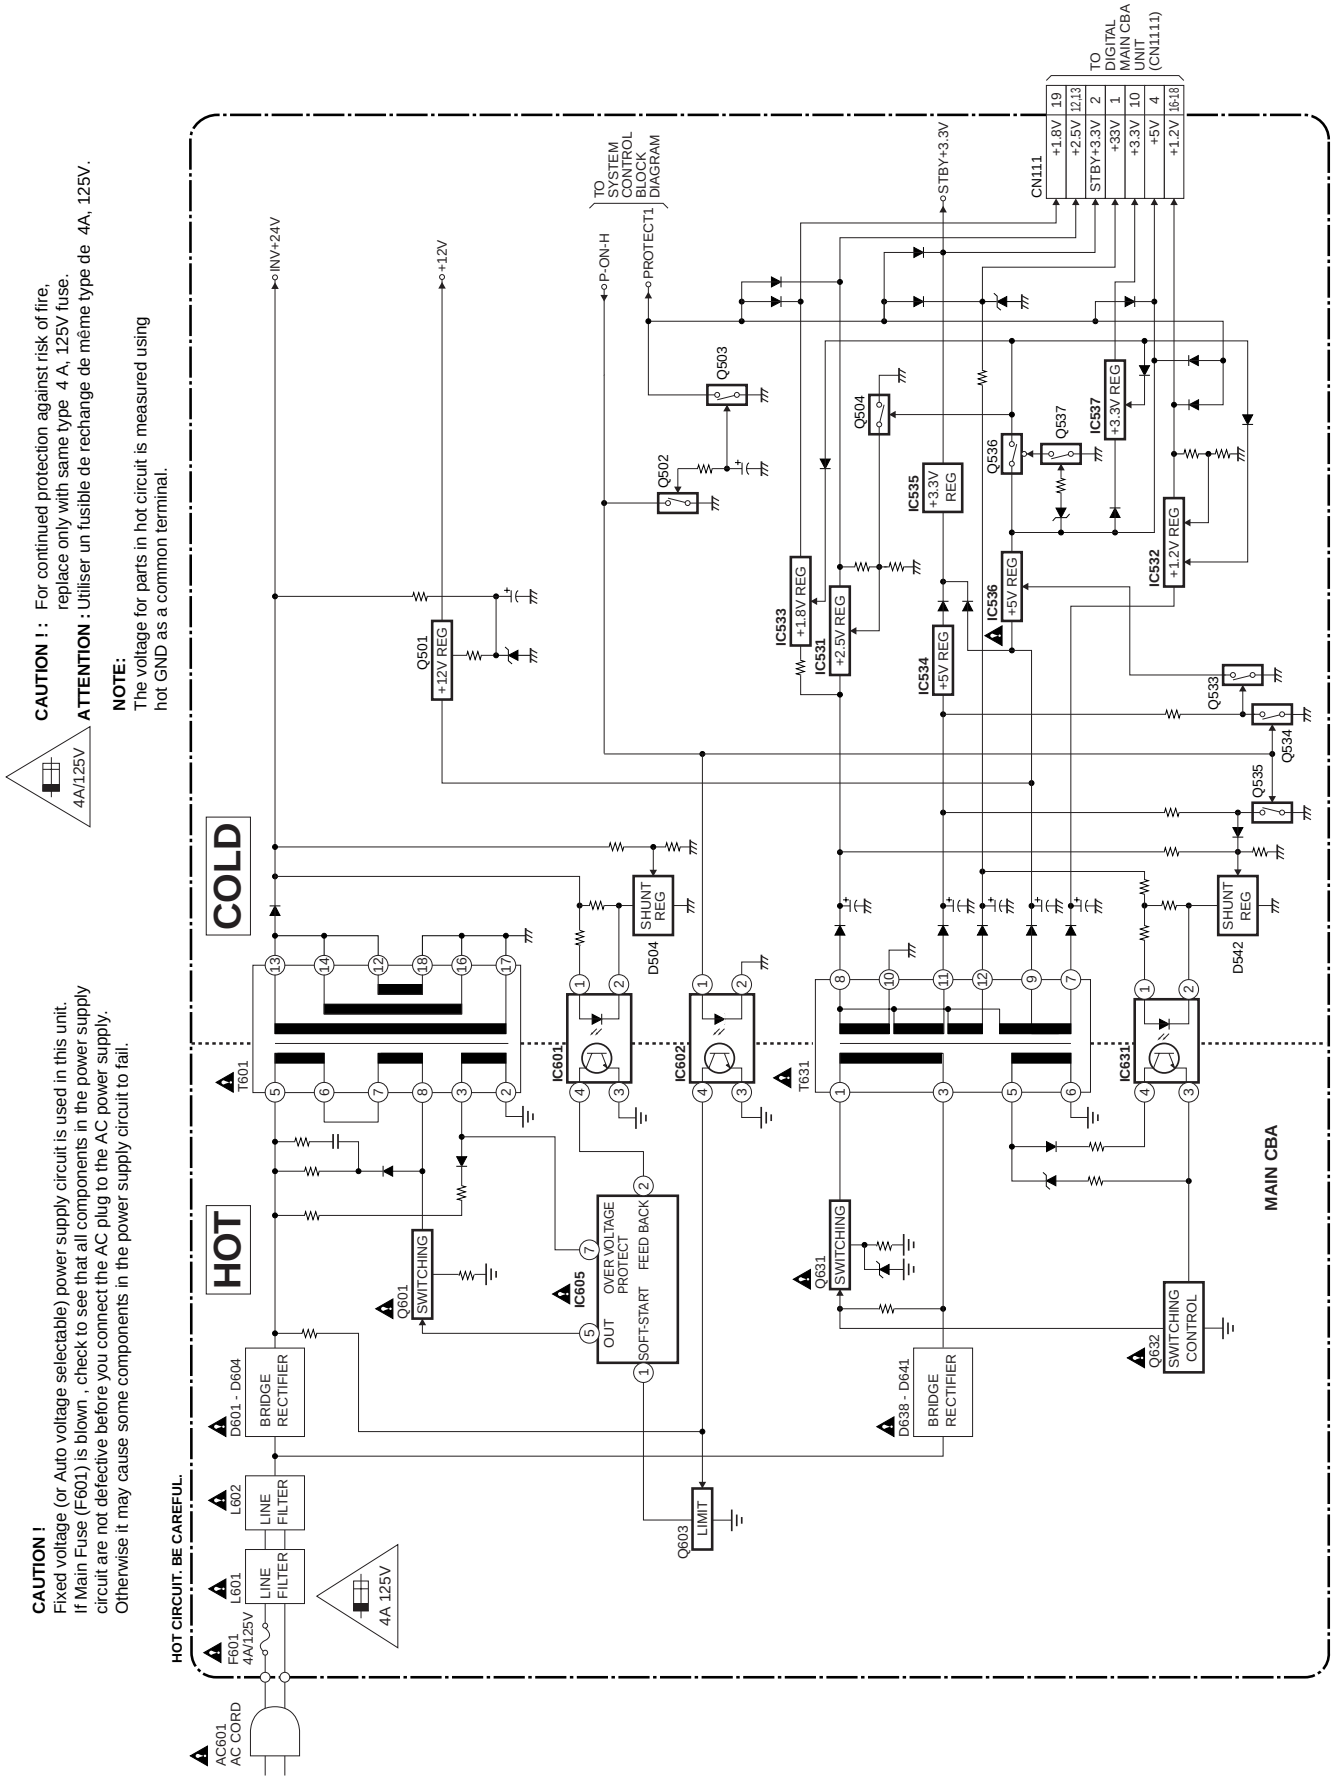

SCHEMATIC DIAGRAMS / CBA'S AND TEST POINTS

Standard Notes

Many electrical and mechanical parts in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark "⚠" in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.

Notes:

1. Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
2. All resistance values are indicated in ohms (K = 10^3, M = 10^6).
3. Resistor wattages are 1/4W or 1/6W unless otherwise specified.
4. All capacitance values are indicated in μF (P = 10^{-6} μF).
5. All voltages are DC voltages unless otherwise specified.

Note of Capacitors:

ML --- Mylar Cap. PP --- Metallized Film Cap. SC --- Semiconductor Cap. L --- Low Leakage type

Temperature Characteristics of Capacitors are noted with the following:

B --- ±10% CH --- 0±60 ppm/°C CSL --- +350~-1000 ppm/°C

Tolerance of Capacitors are noted with the following:

Z --- +80~-20%

Note of Resistors:

CEM --- Cement Res. MTL --- Metal Res. F --- Fuse Res.

Capacitors and transistors are represented by the following symbols.

CBA Symbols

(Top View) (Bottom View)



Electrolytic Capacitor

(Bottom View)



Transistor or Digital Transistor

(Top View)



NPN Transistor

(Top View)

PNP Transistor

(Top View)

NPN Digital Transistor

(Top View)

PNP Digital Transistor

Schematic Diagram Symbols

Digital Transistor

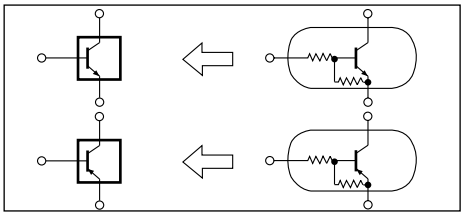

LIST OF CAUTION, NOTES, AND SYMBOLS USED IN THE SCHEMATIC DIAGRAMS ON THE FOLLOWING PAGES:

1. CAUTION:

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE_A,_V FUSE.

ATTENTION: UTILISER UN FUSIBLE DE RECHANGE DE MÊME TYPE DE_A,_V.

2. CAUTION:

Fixed Voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F601) is blown, first check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

3. Note:

1. Do not use the part number shown on the drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since the drawings were prepared.
2. To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Voltage indications on the schematics are as shown below:

Plug the TV power cord into a standard AC outlet.:

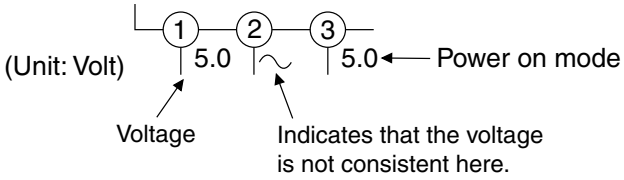

5. How to read converged lines



Examples:
1. "1-D3" means that line number "1" goes to the line number "1" of the area "D3".
2. "1-B1" means that line number "1" goes to the line number "1" of the area "B1".

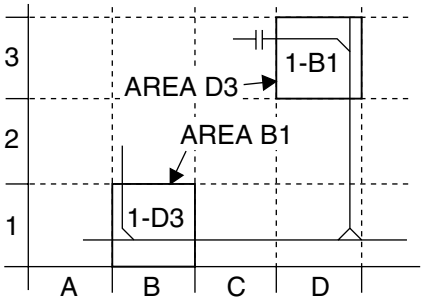

6. Test Point Information

: Indicates a test point with a jumper wire across a hole in the PCB.

: Used to indicate a test point with a component lead on foil side.

: Used to indicate a test point with no test pin.

: Used to indicate a test point with a test pin.

Main 1/5 Schematic Diagram

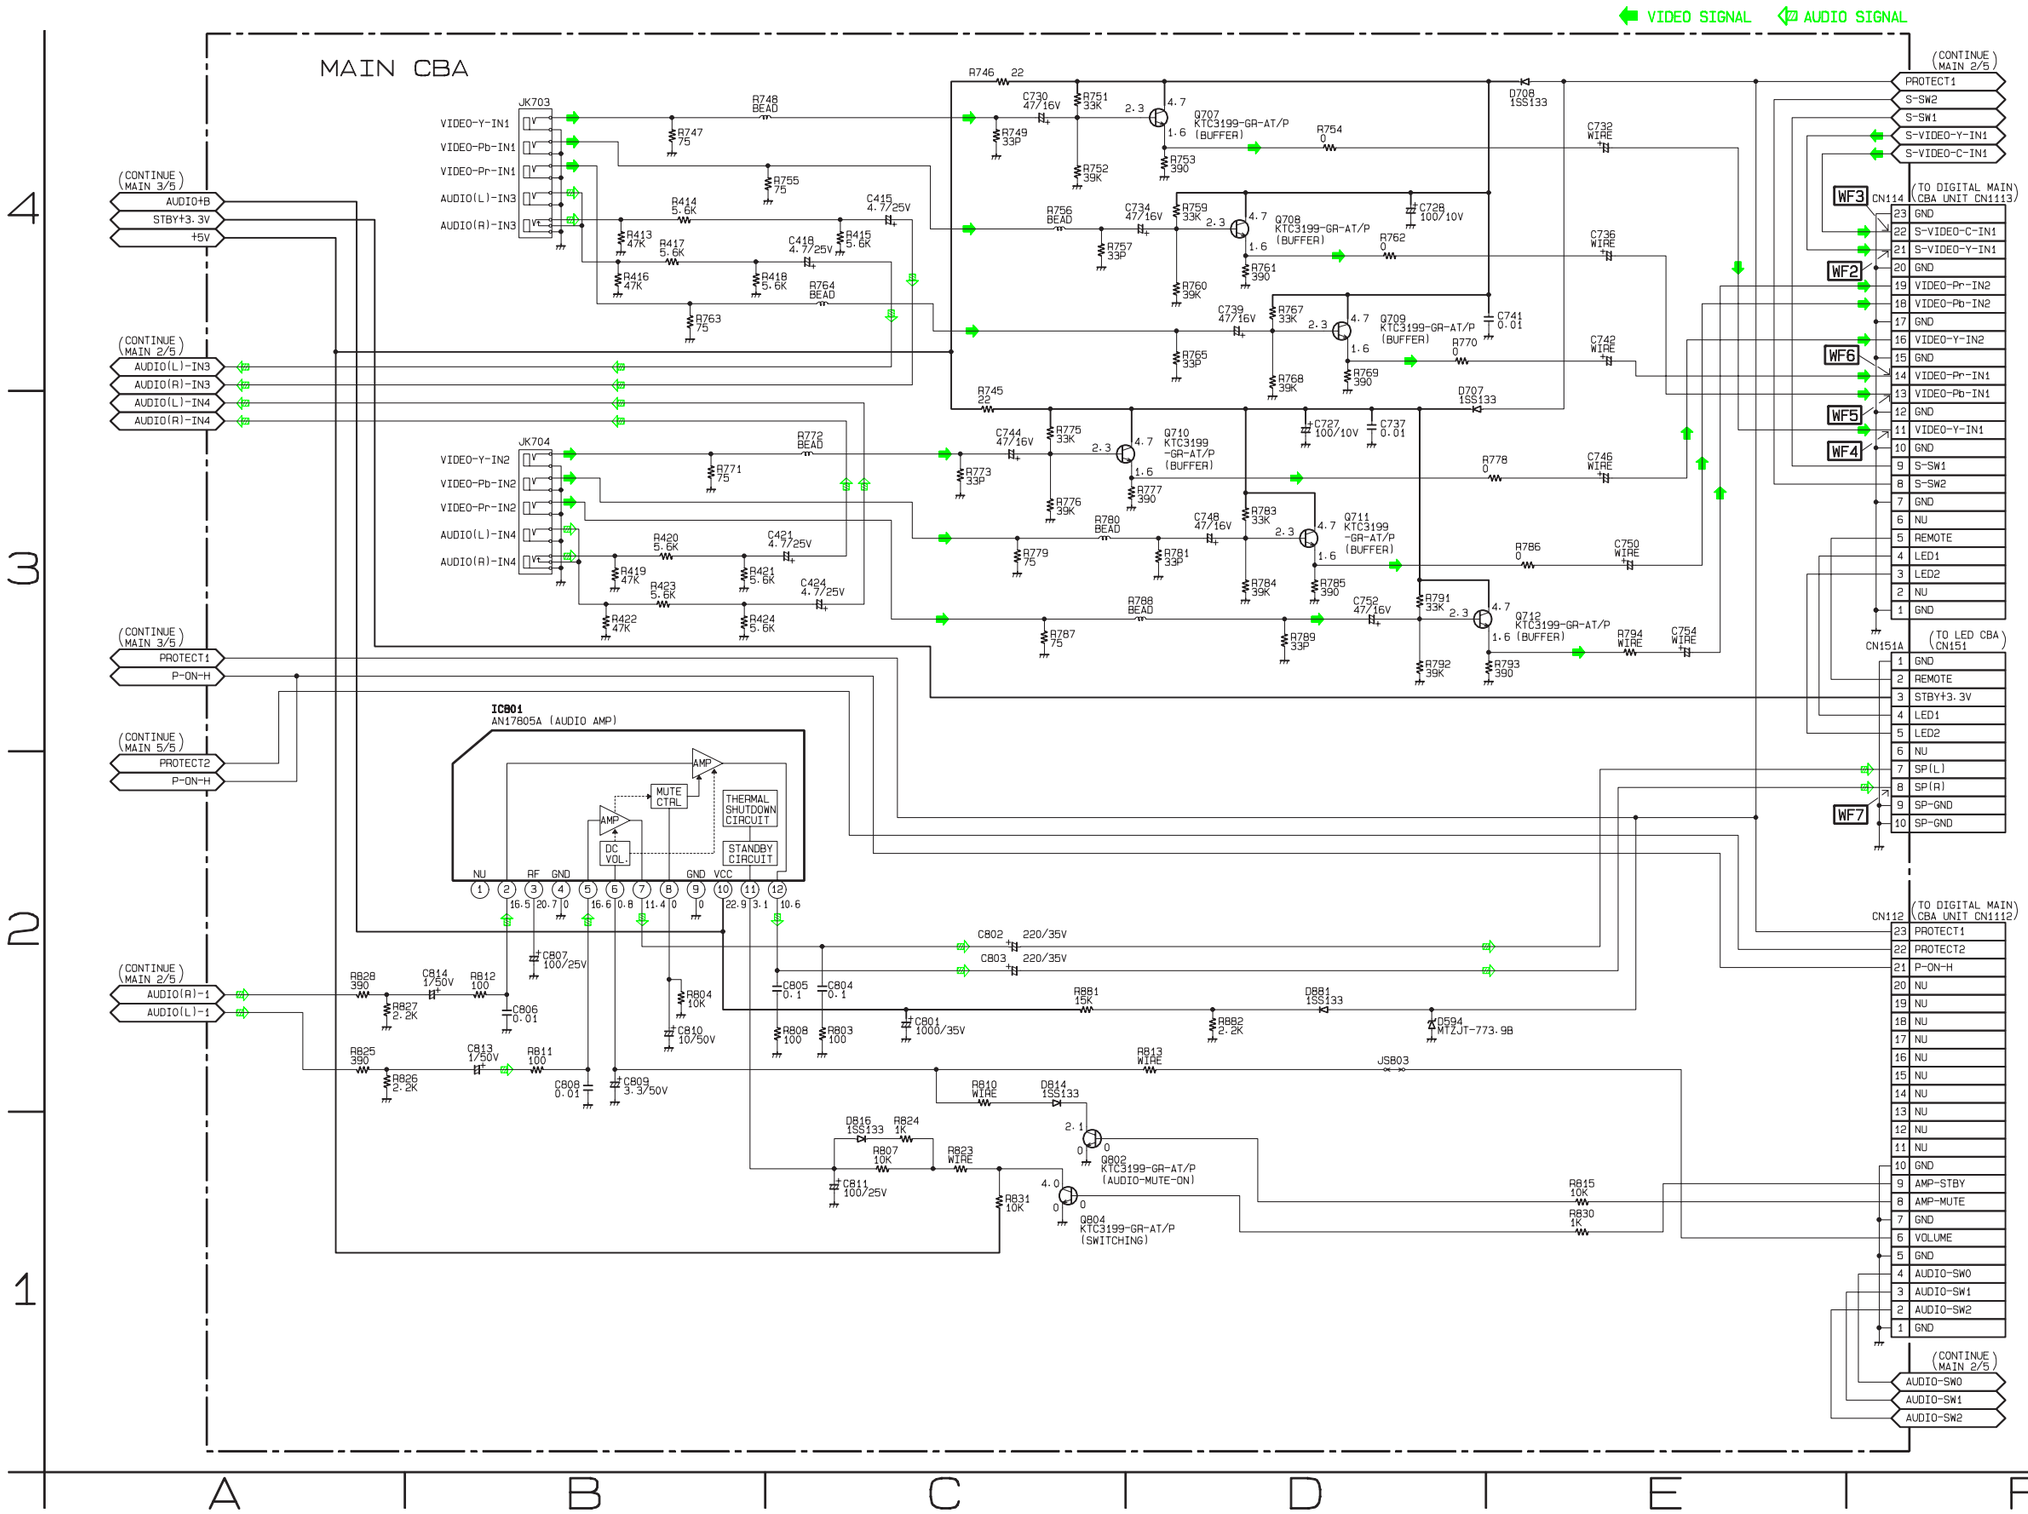

VOLTAGE CHART

CN114

Pin No.	Voltage
1	0
2	---
3	3.3
4	0.9
5	3.3
6	---
7	0
8	3.3
9	3.3
10	0
11	1.6
12	0
13	1.6
14	1.6
15	0
16	1.6
17	0
18	1.6
19	1.6
20	0
21	1.6
22	1.6
23	0

CN112

Pin No.	Voltage
1	0
2	3.2
3	3.2
4	3.2
5	0
6	0.8
7	0
8	0
9	0
10	0
11	---
12	---
13	---
14	---
15	---
16	---
17	---
18	---
19	---
20	---
21	3.1
22	0.7
23	2.3

Main 2/5 Schematic Diagram

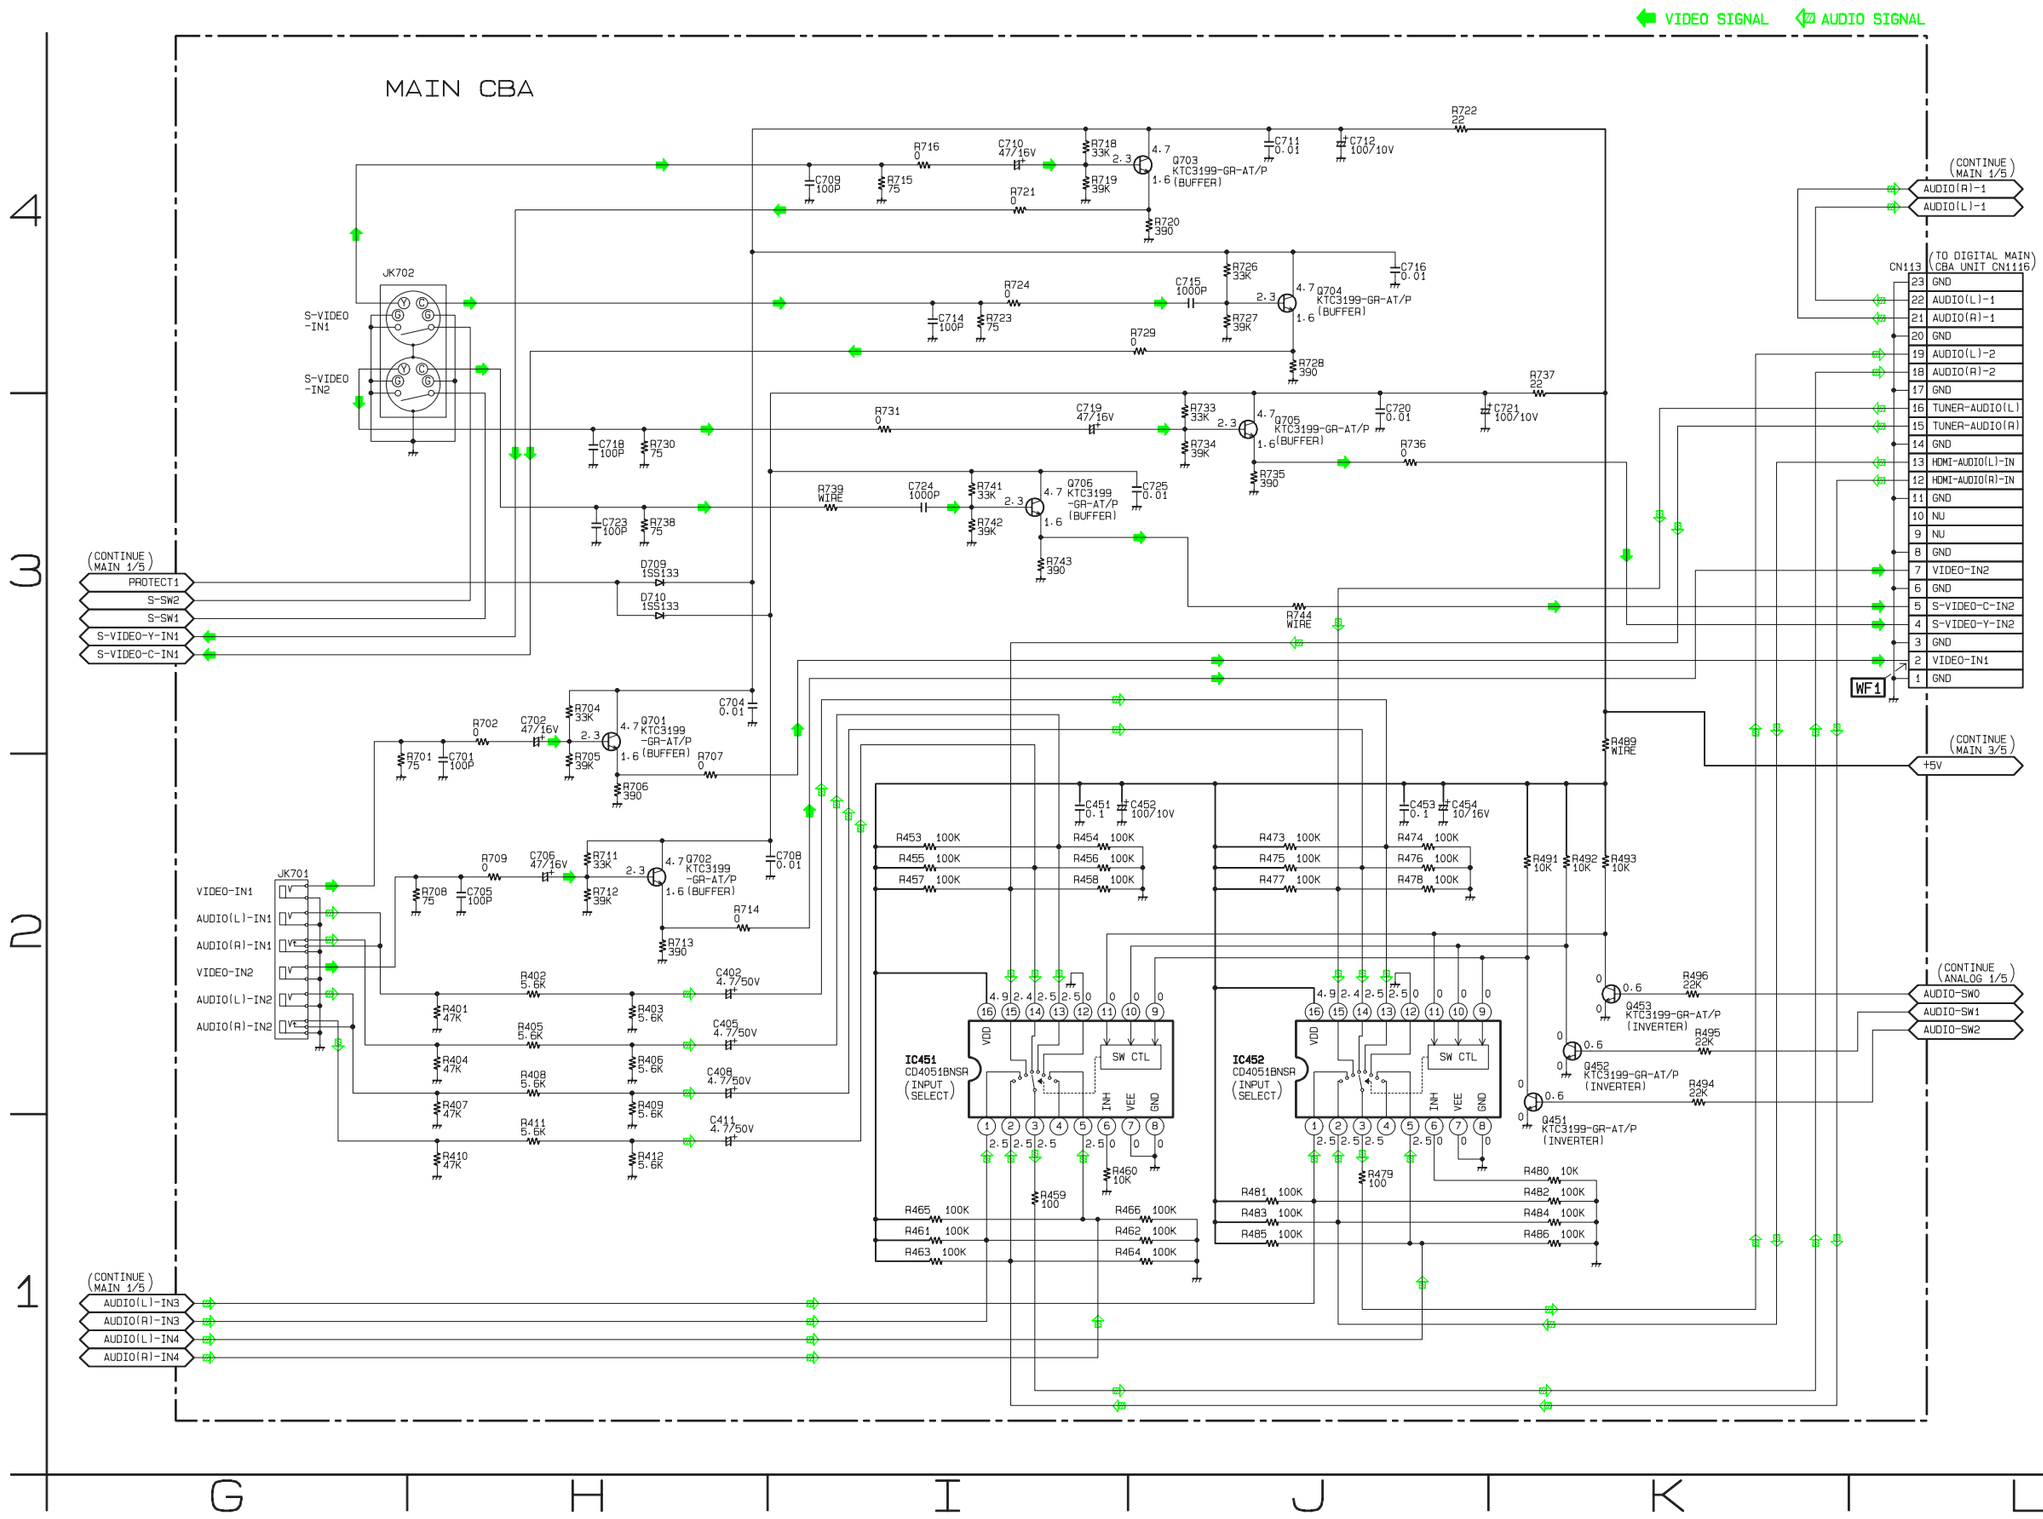

VOLTAGE CHART

CN113

Pin No.	Voltage
1	0
2	1.6
3	0
4	1.6
5	1.6
6	0
7	1.6
8	0
9	---
10	---
11	0
12	2.4
13	2.4
14	0
15	2.5
16	2.5
17	0
18	2.5
19	2.5
20	0
21	5.1
22	5.1
23	0

Main 3/5 Schematic Diagram

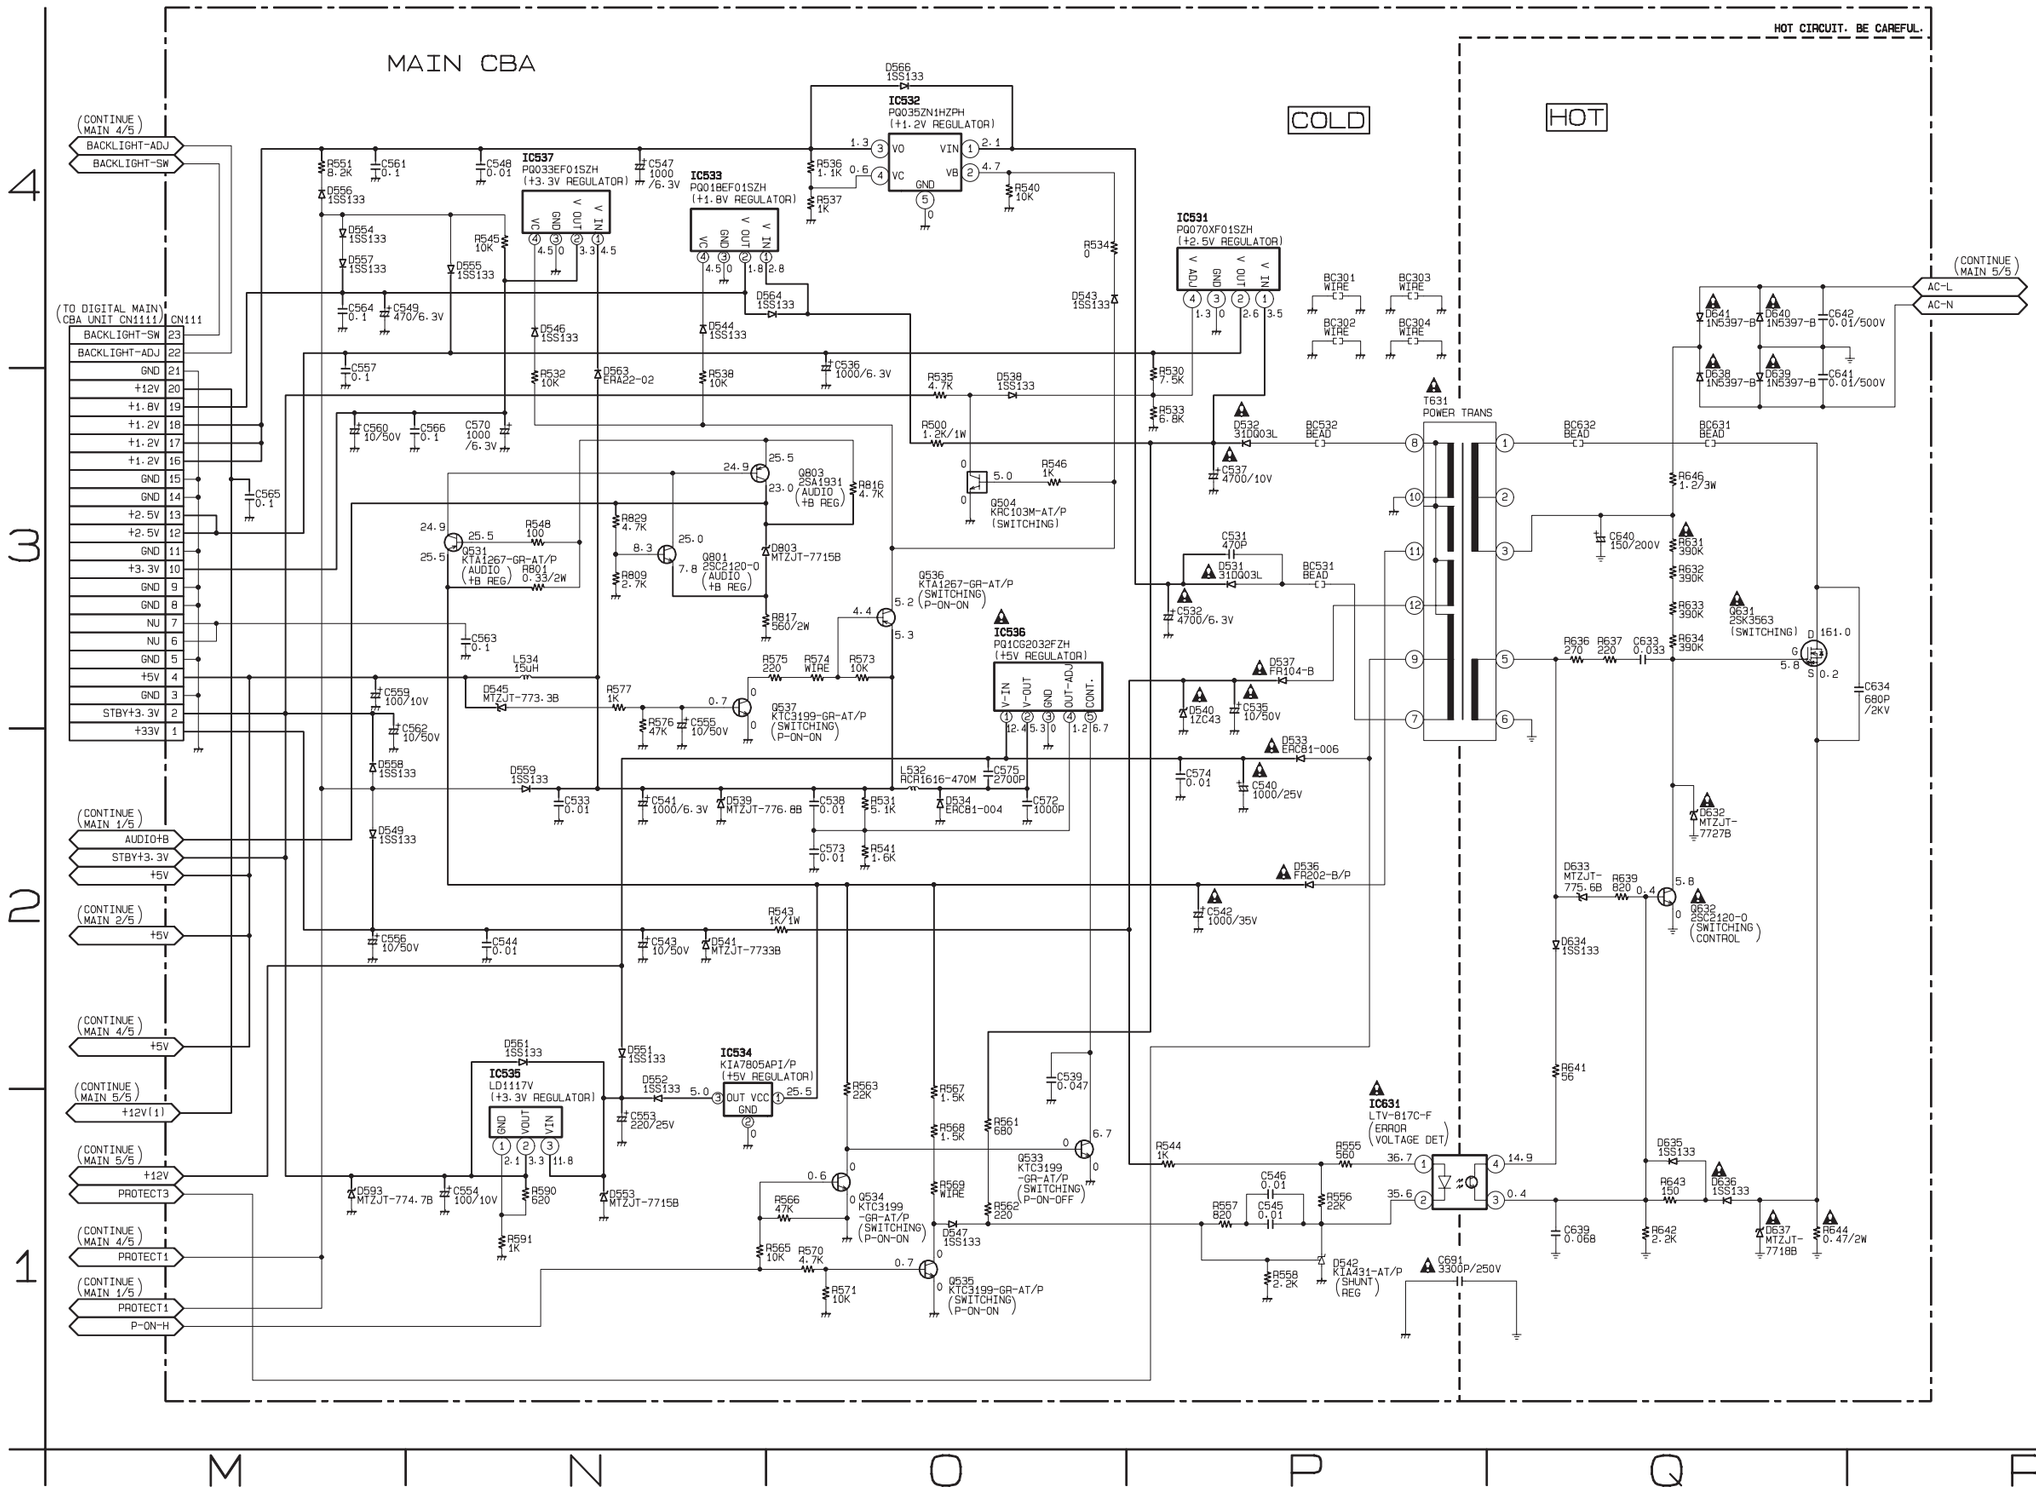

VOLTAGE CHART

CN111

Pin No.	Voltage
1	32.2
2	3.3
3	0
4	4.9
5	0
6	---
7	---
8	0
9	0
10	3.3
11	0
12	2.6
13	2.6
14	0
15	0
16	1.2
17	1.2
18	1.2
19	1.7
20	11.5
21	0
22	3.3
23	3.3

Main 4/5 Schematic Diagram

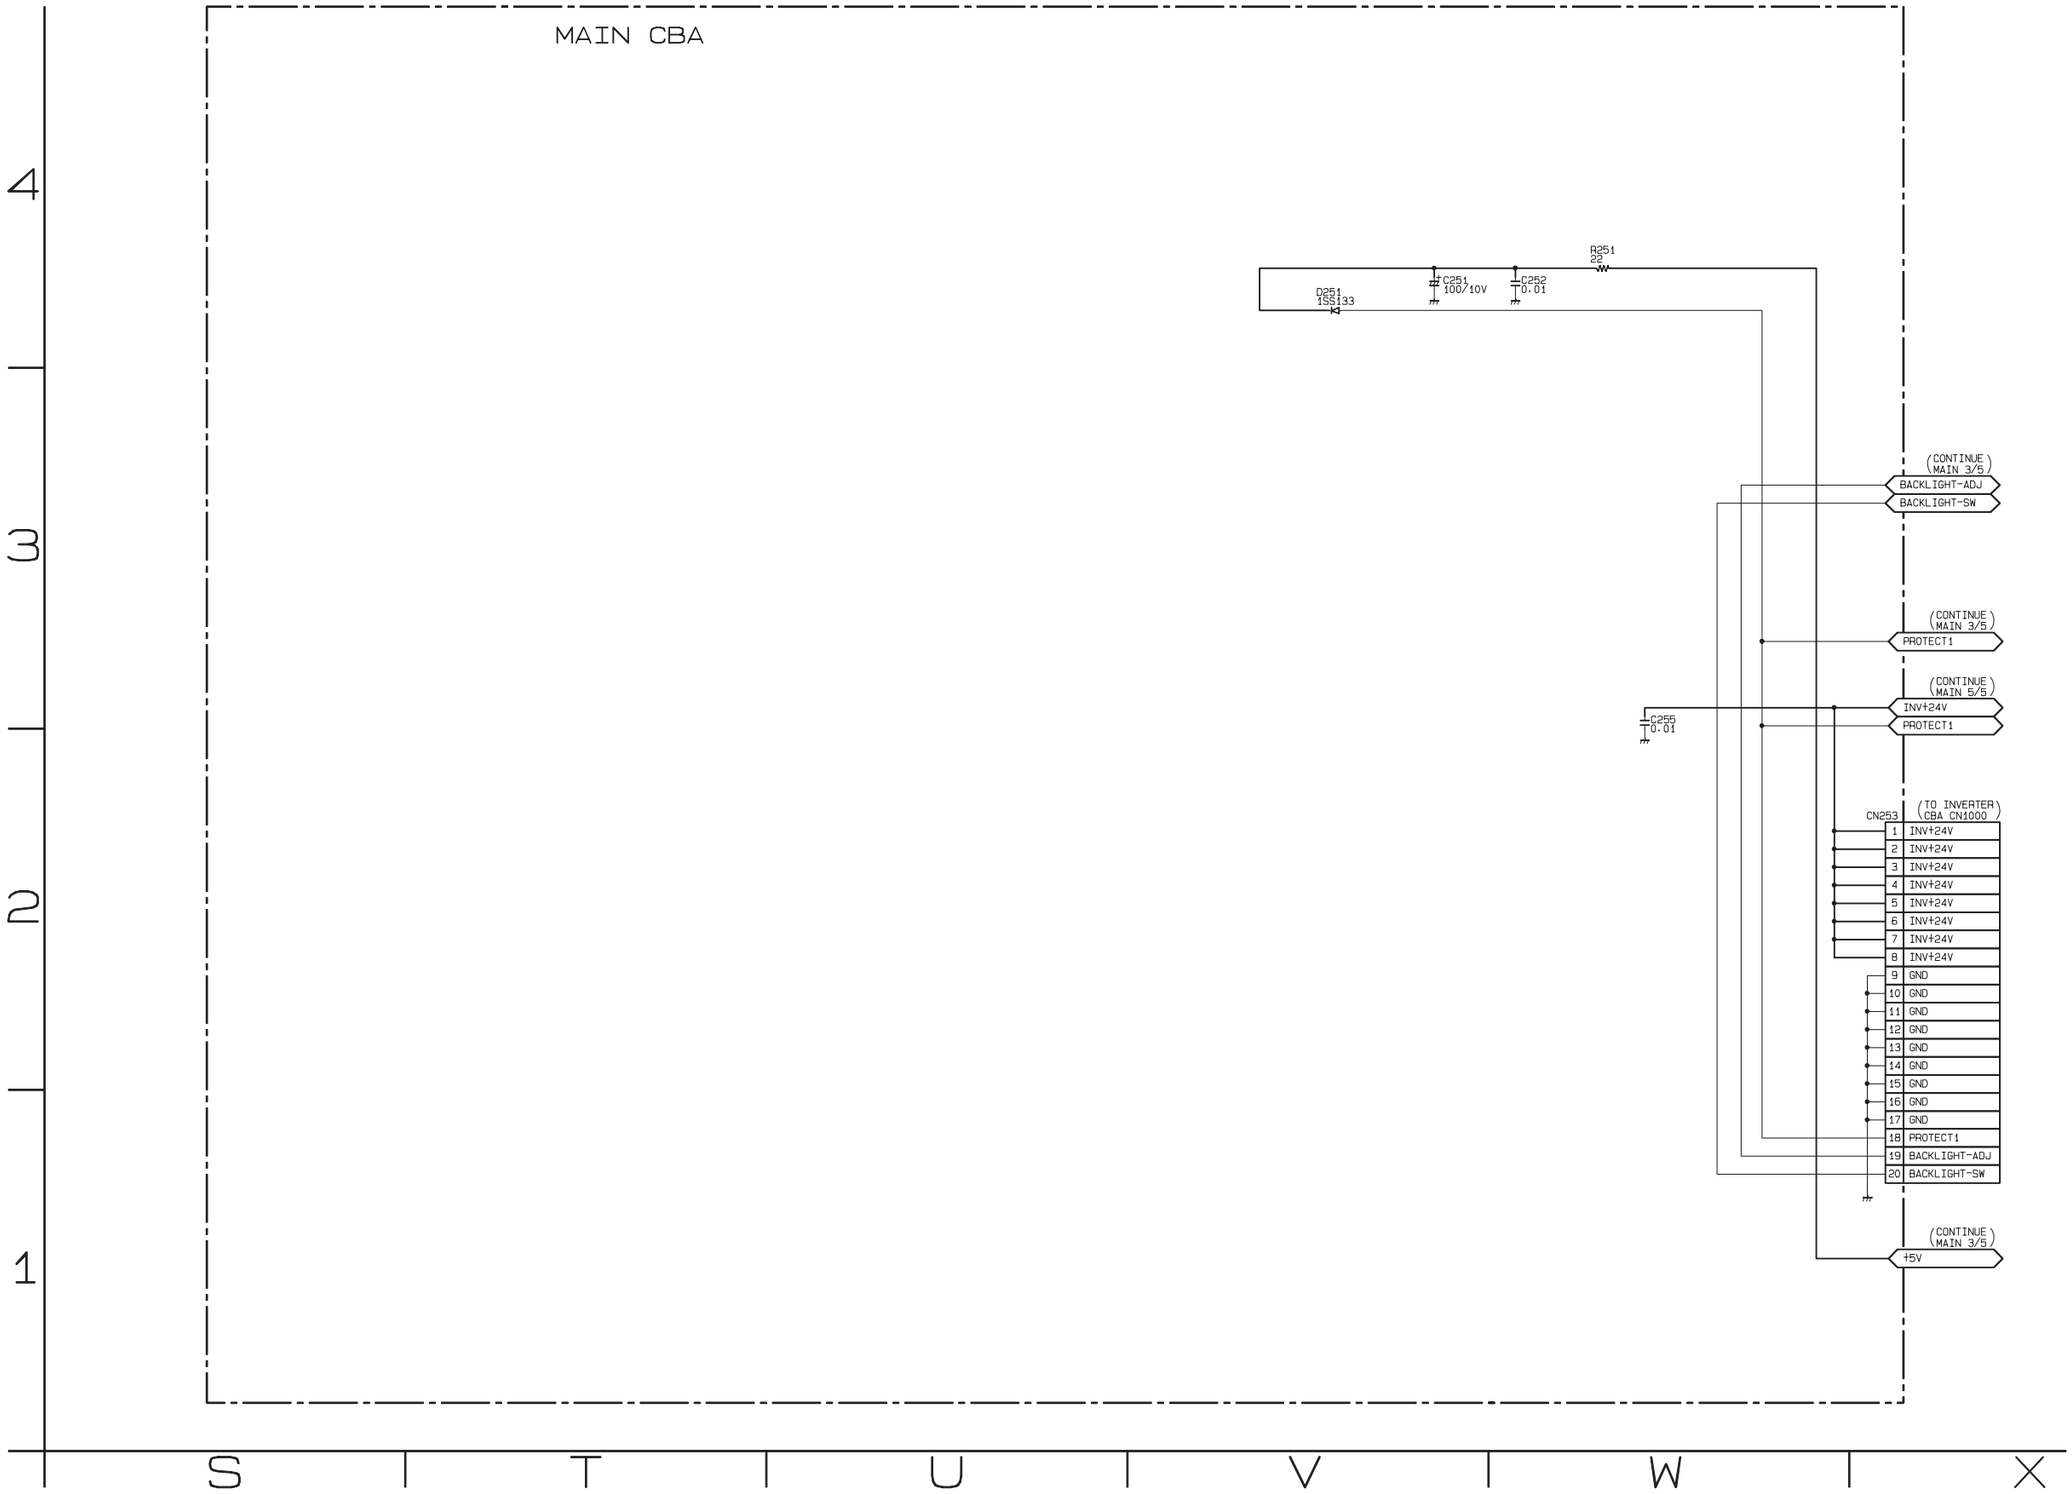

Main 5/5 Schematic Diagram

CAUTION !
Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F601) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.



CAUTION ! : For continued protection against risk of fire, replace only with same type 4 A, 125V fuse.
ATTENTION : Utiliser un fusible de rechange de même type de 4A, 125V.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

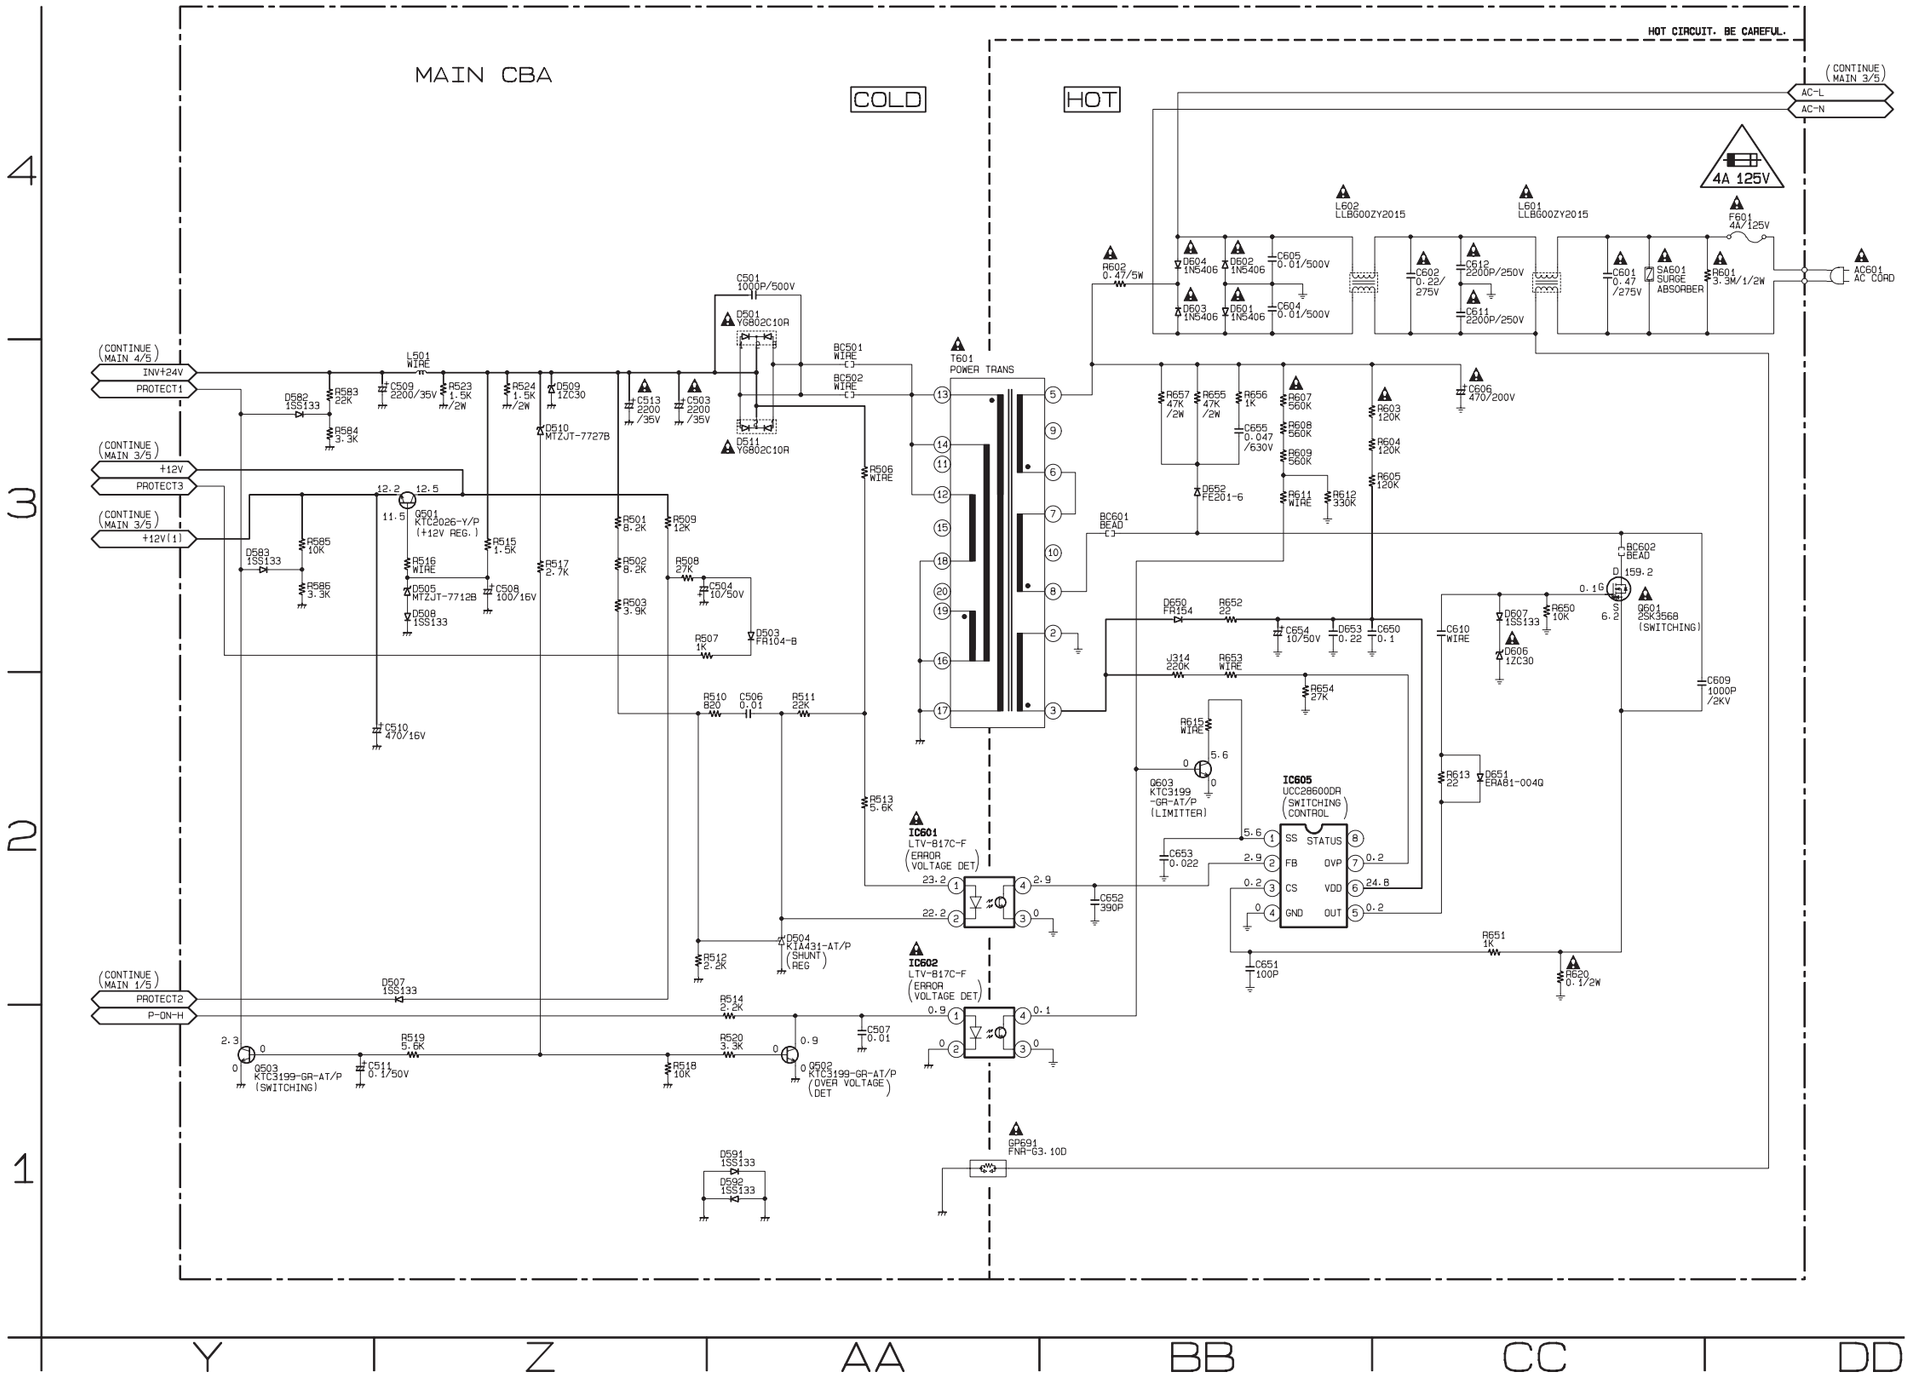

L5005SCM5

Function Schematic Diagram

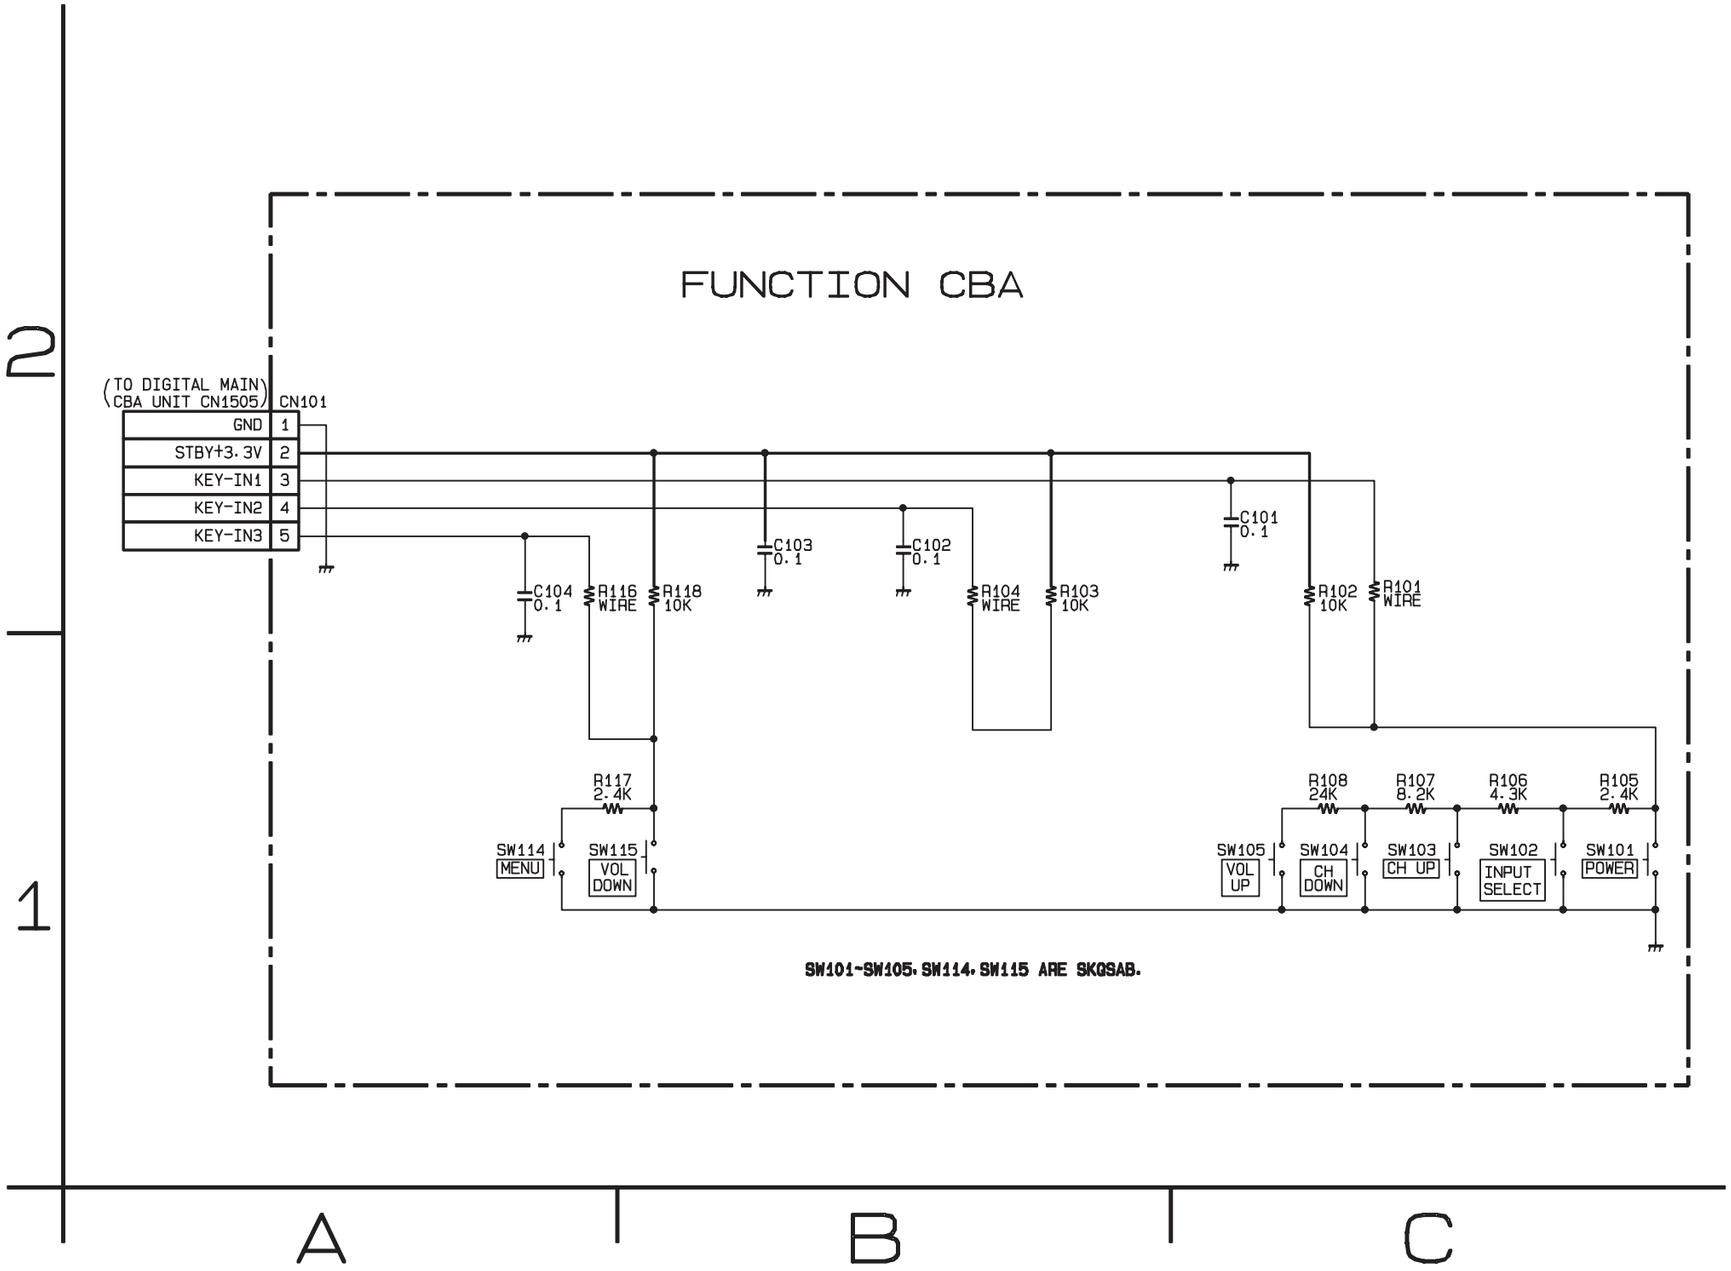

VOLTAGE CHART

CN101

Pin No.	Voltage
1	0
2	3.3
3	3.3
4	3.3
5	3.3

LED Schematic Diagram

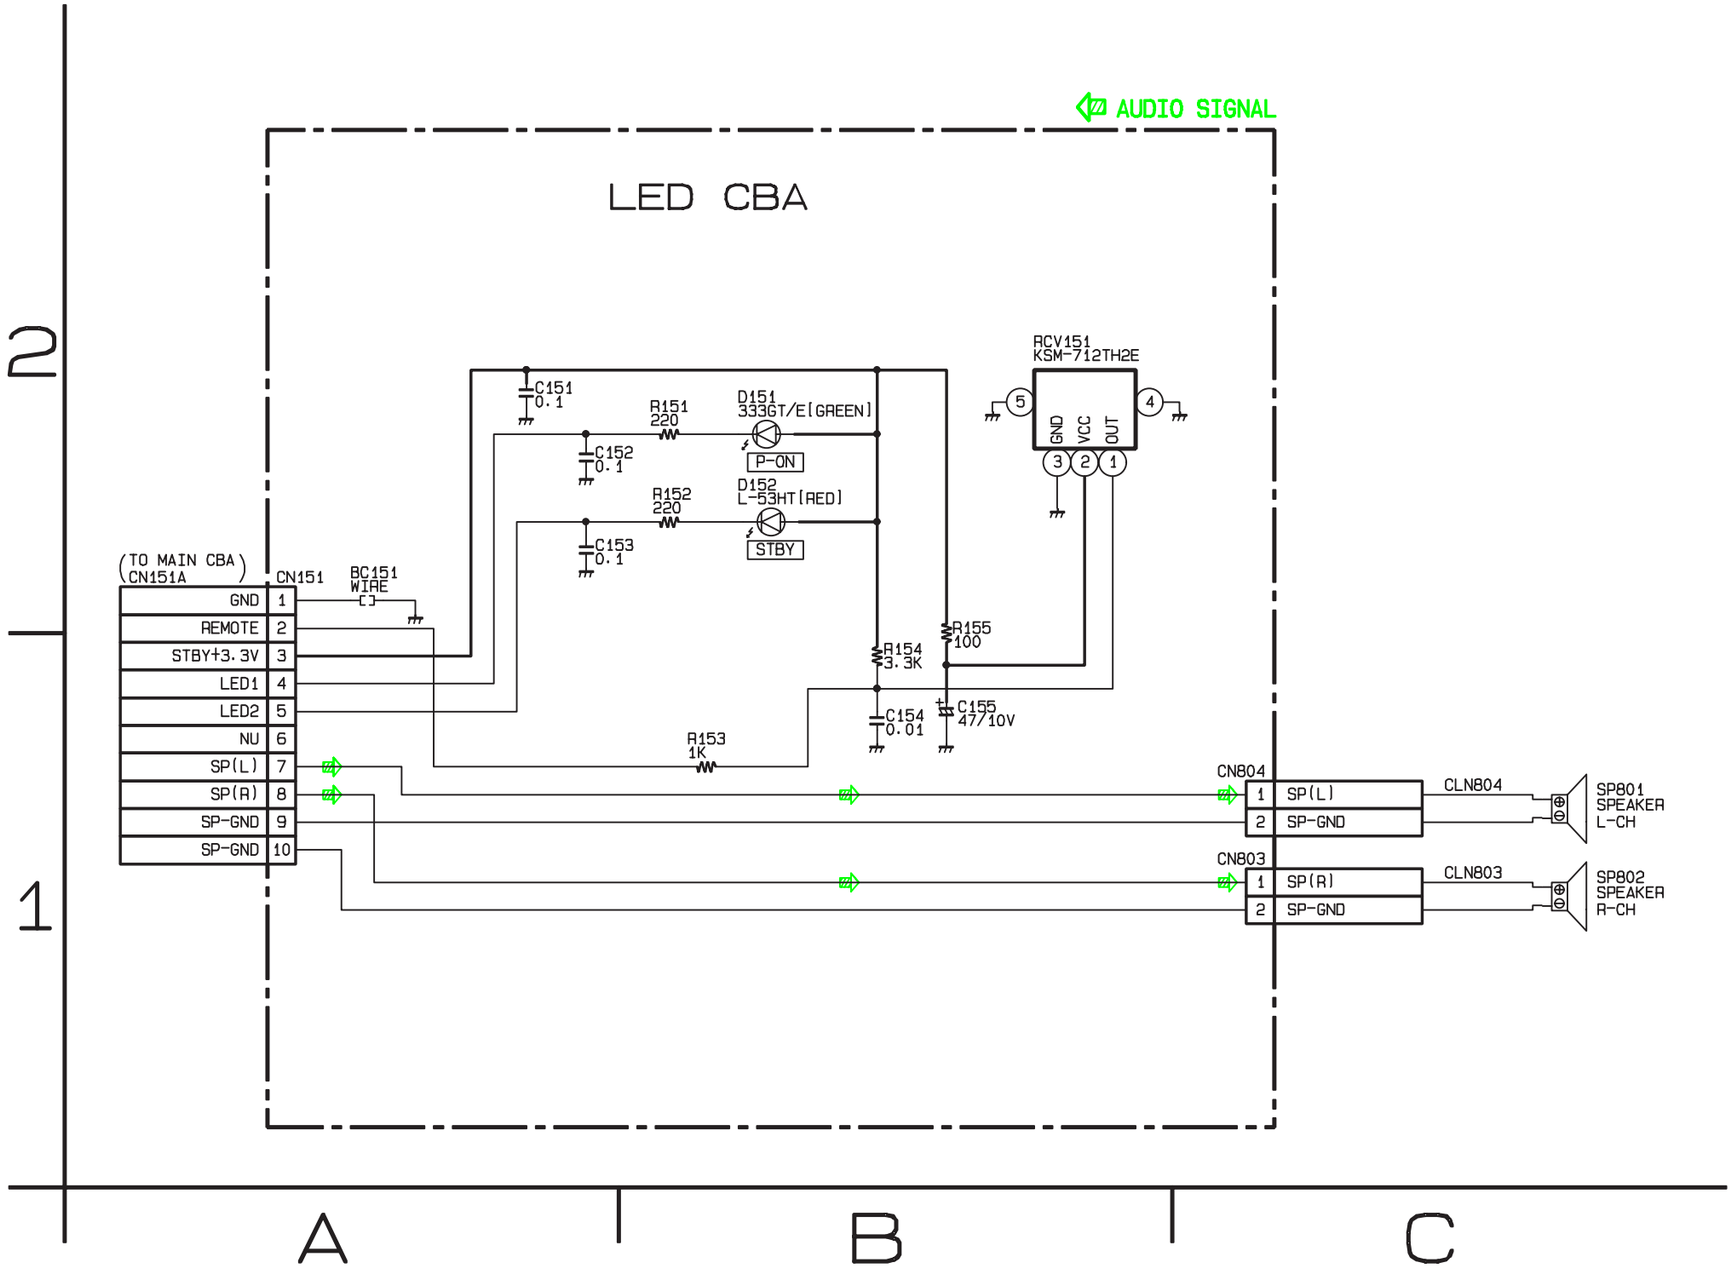

Inverter Schematic Diagram

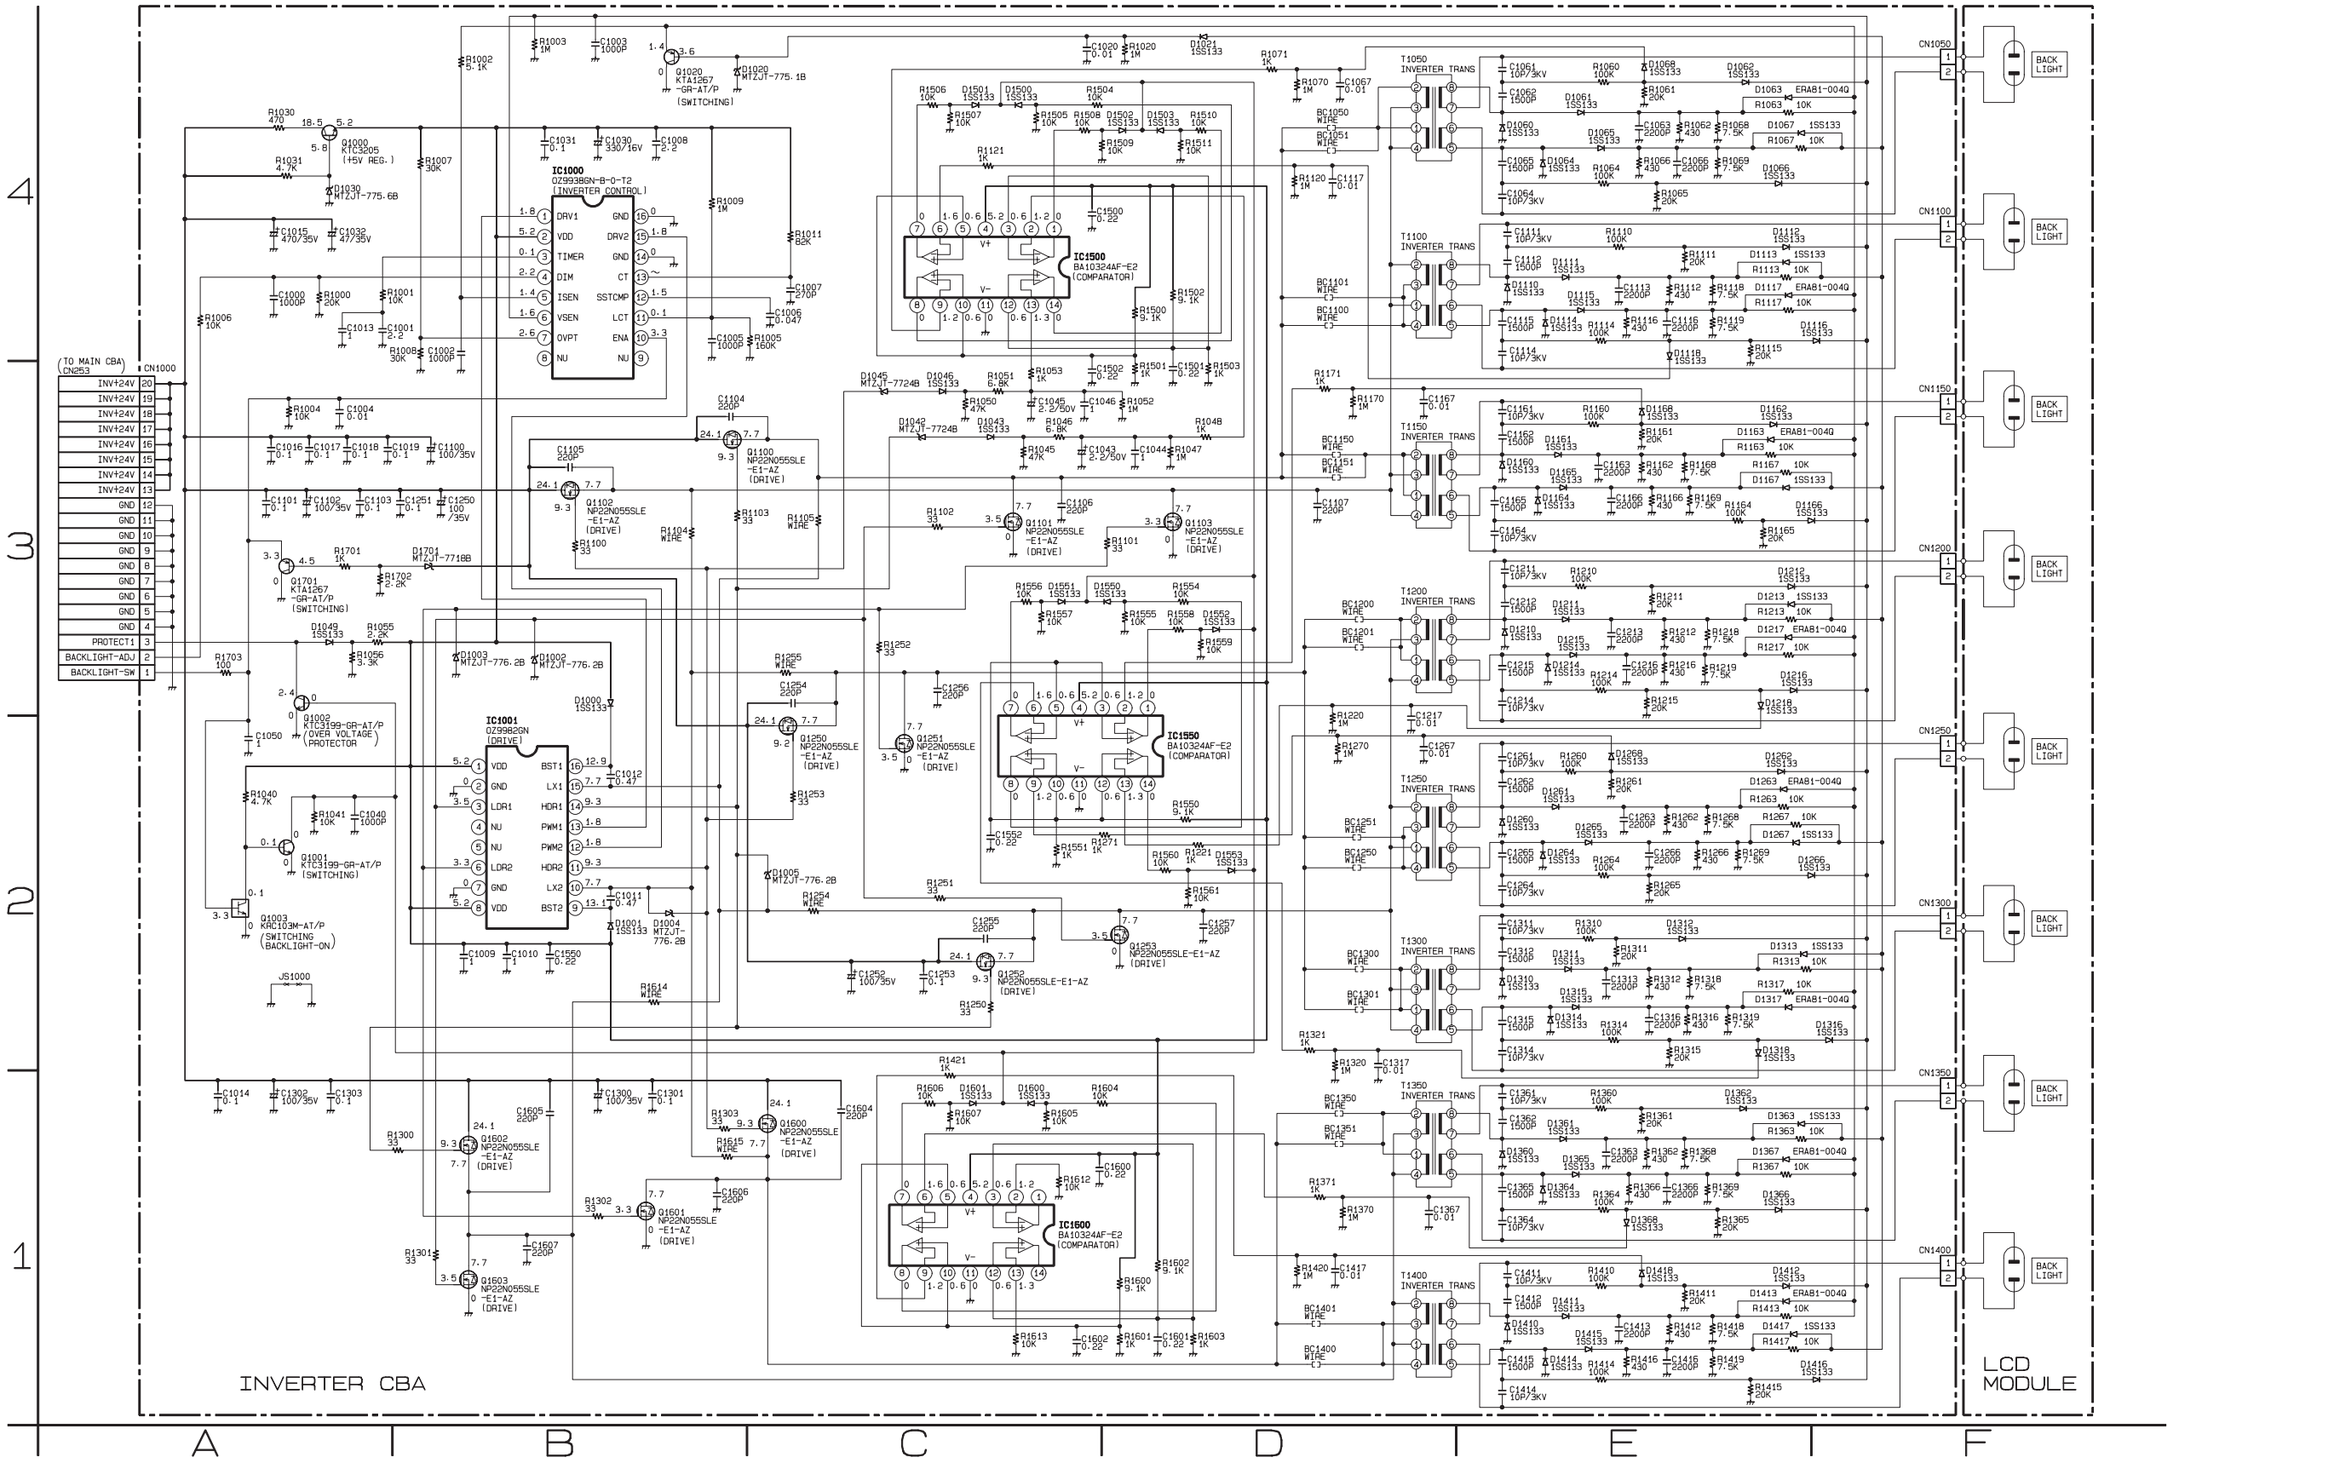

Digital Main 1/8 Schematic Diagram

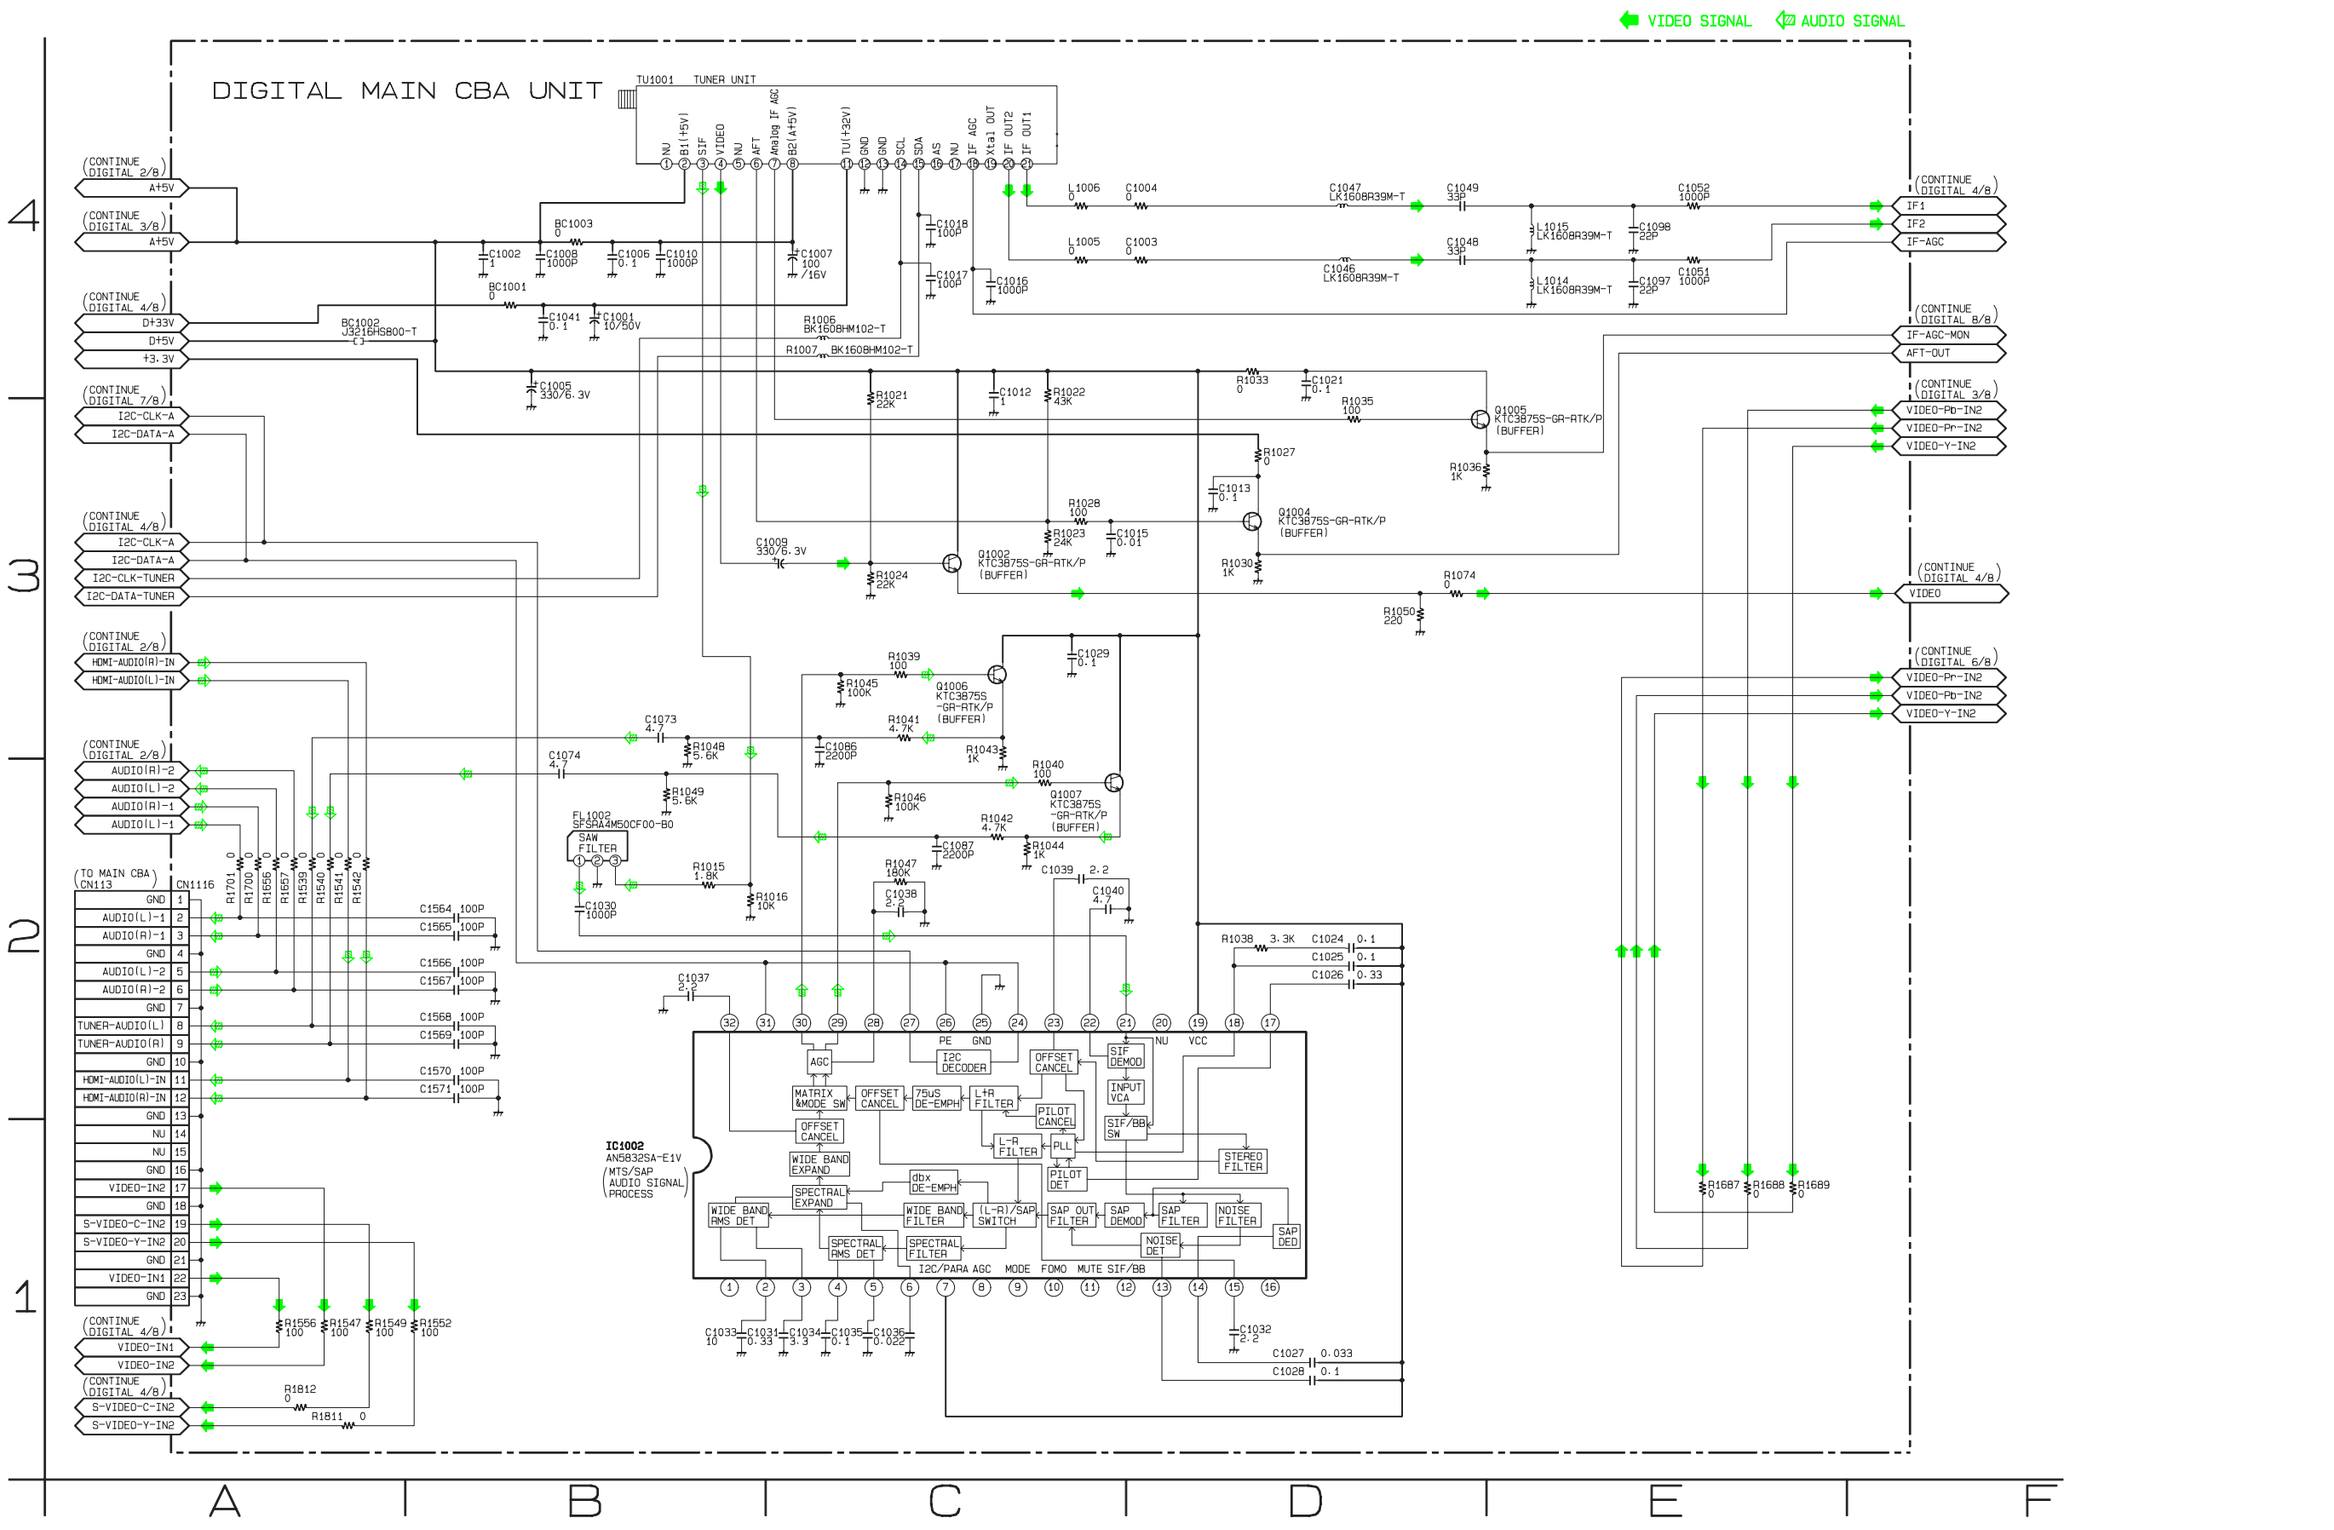

Digital Main 2/8 Schematic Diagram

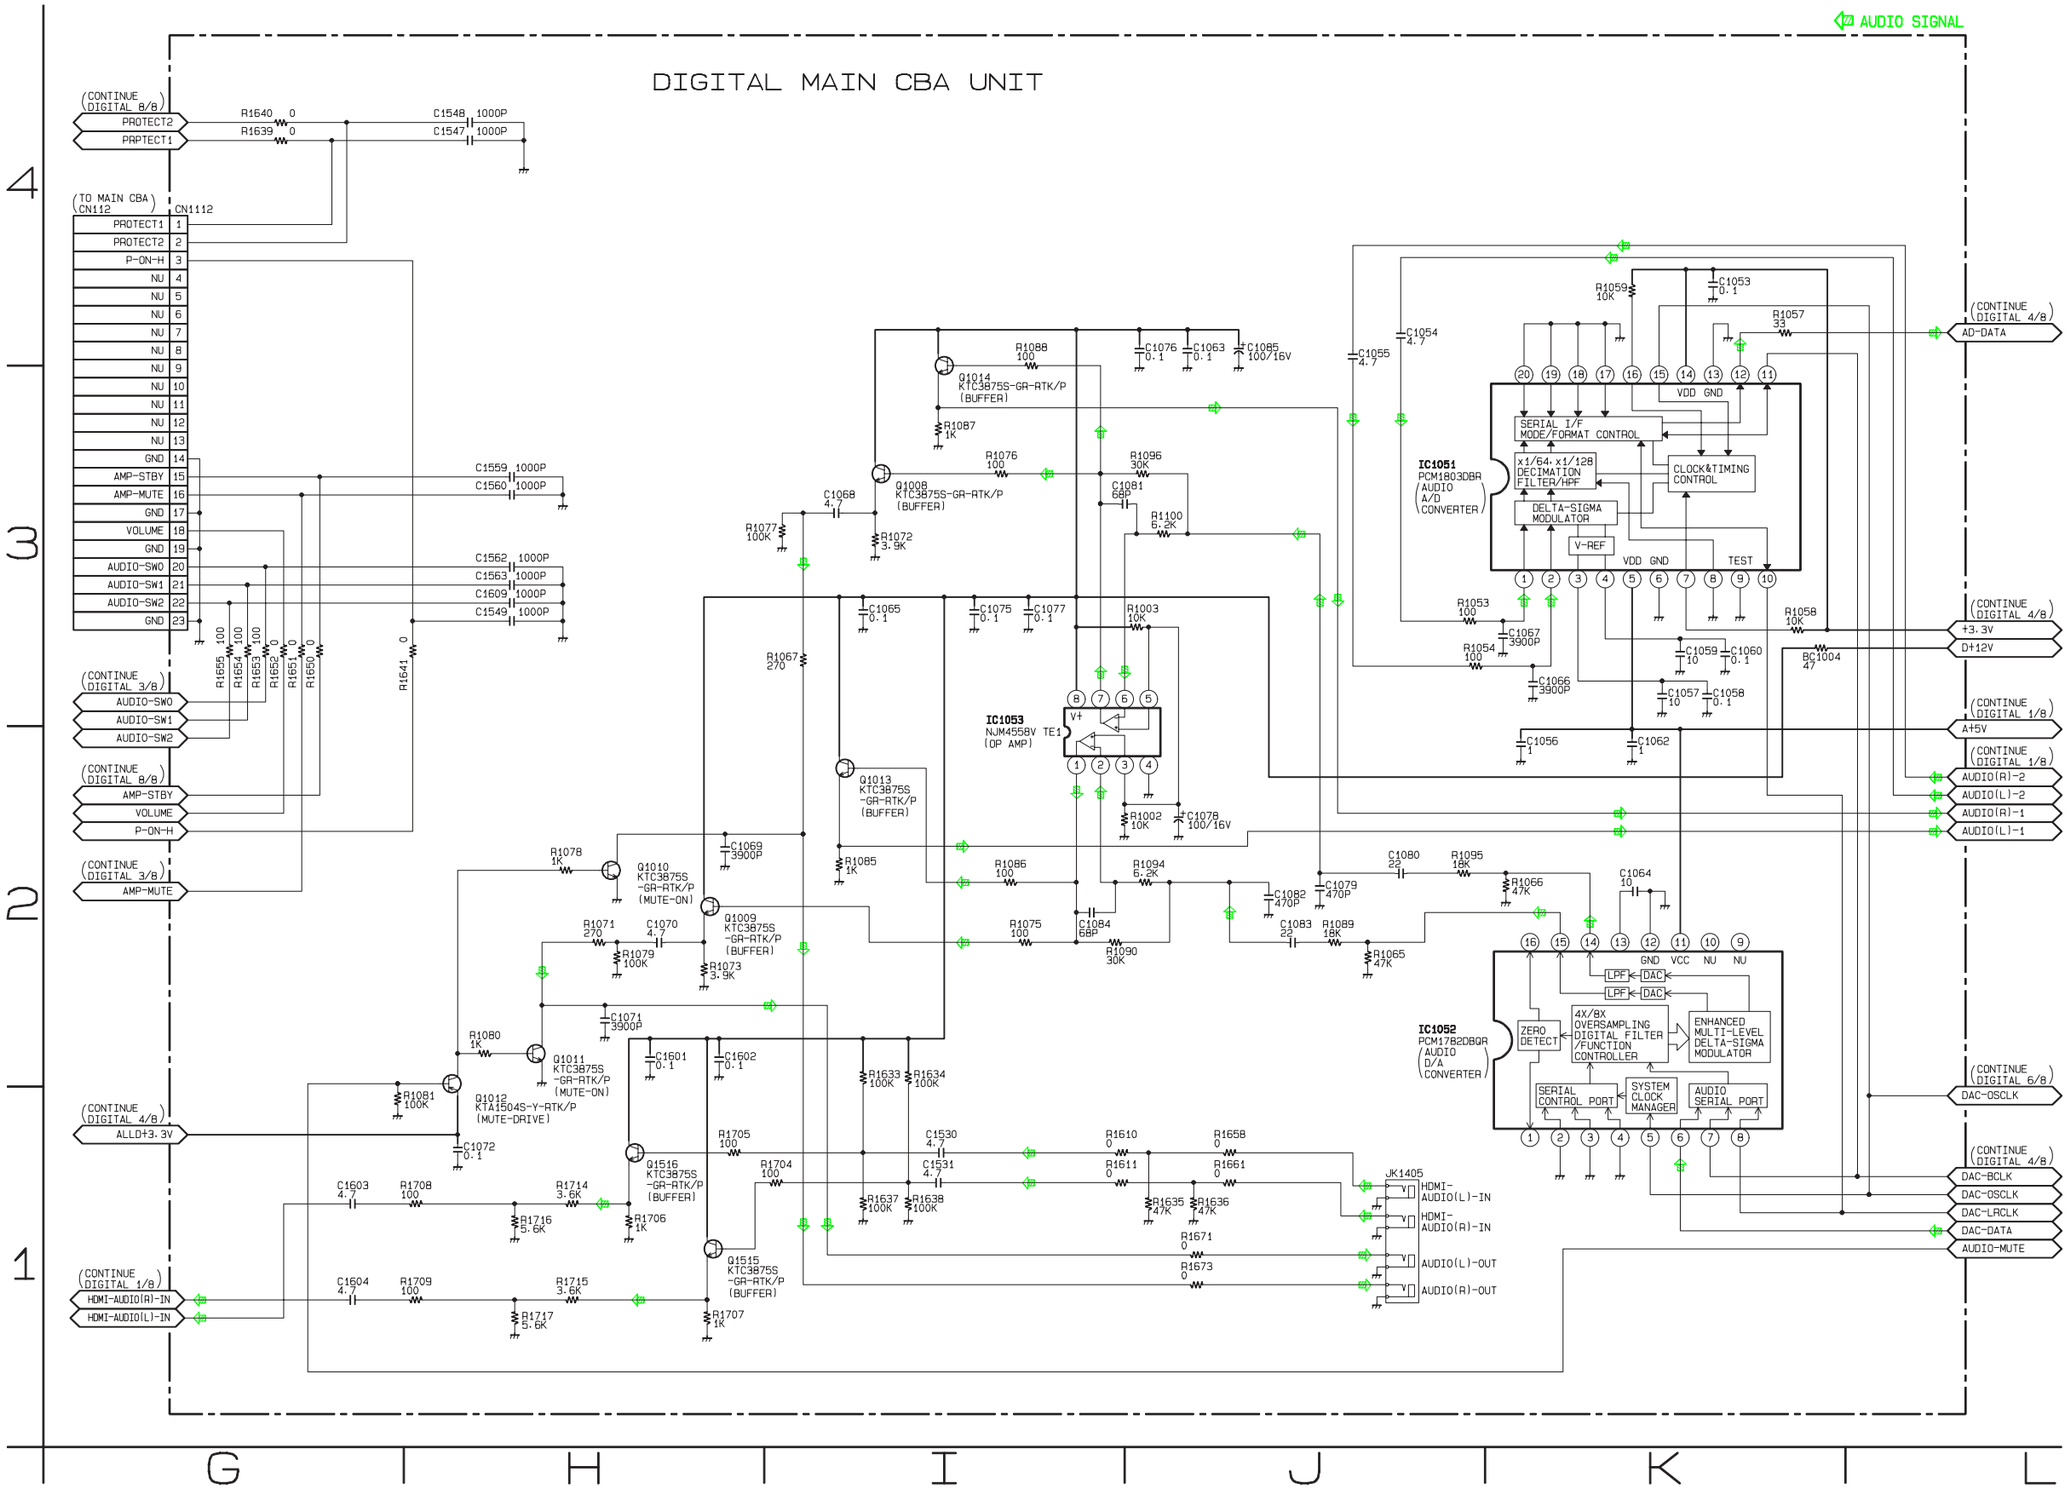

L5005SCD2

Digital Main 3/8 Schematic Diagram

***1 NOTE:**
The order of pins shown in this diagram is different from that of actual IC1504.
IC1504 is divided into four and shown as IC1504 (1/4) ~ IC1504 (4/4) in this Digital Main Schematic Diagram Section.

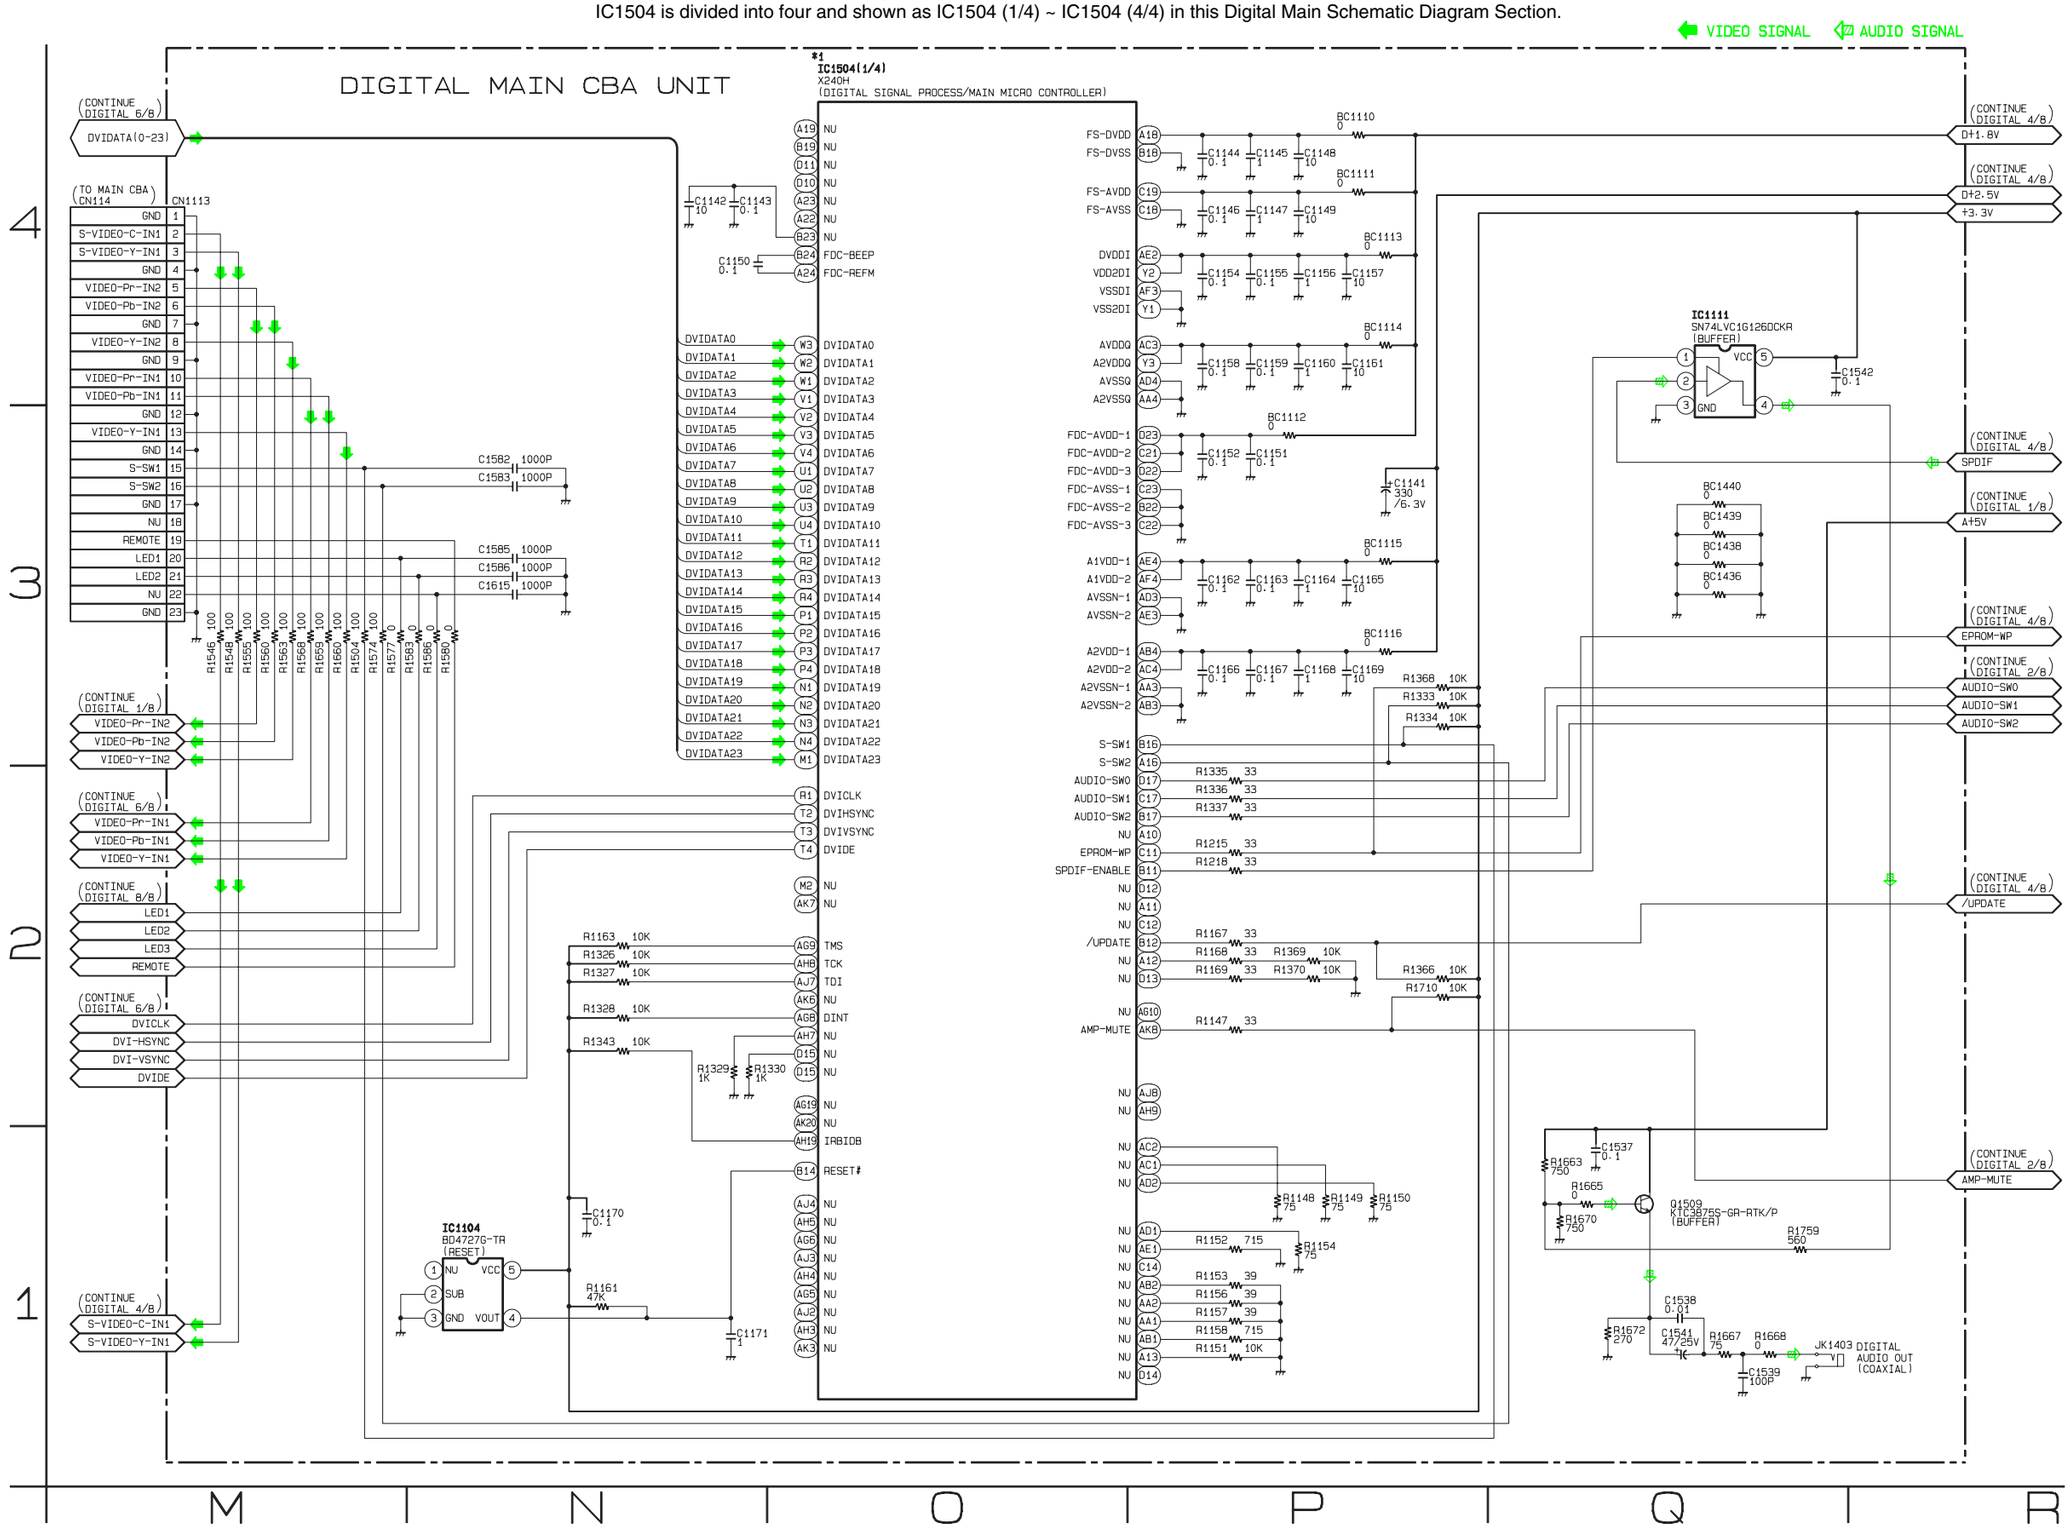

L5005SCD3

Digital Main 4/8 Schematic Diagram

∗1 NOTE:
The order of pins shown in this diagram is different from that of actual IC1504.
IC1504 is divided into four and shown as IC1504 (1/4) ~ IC1504 (4/4) in this Digital Main Schematic Diagram Section.

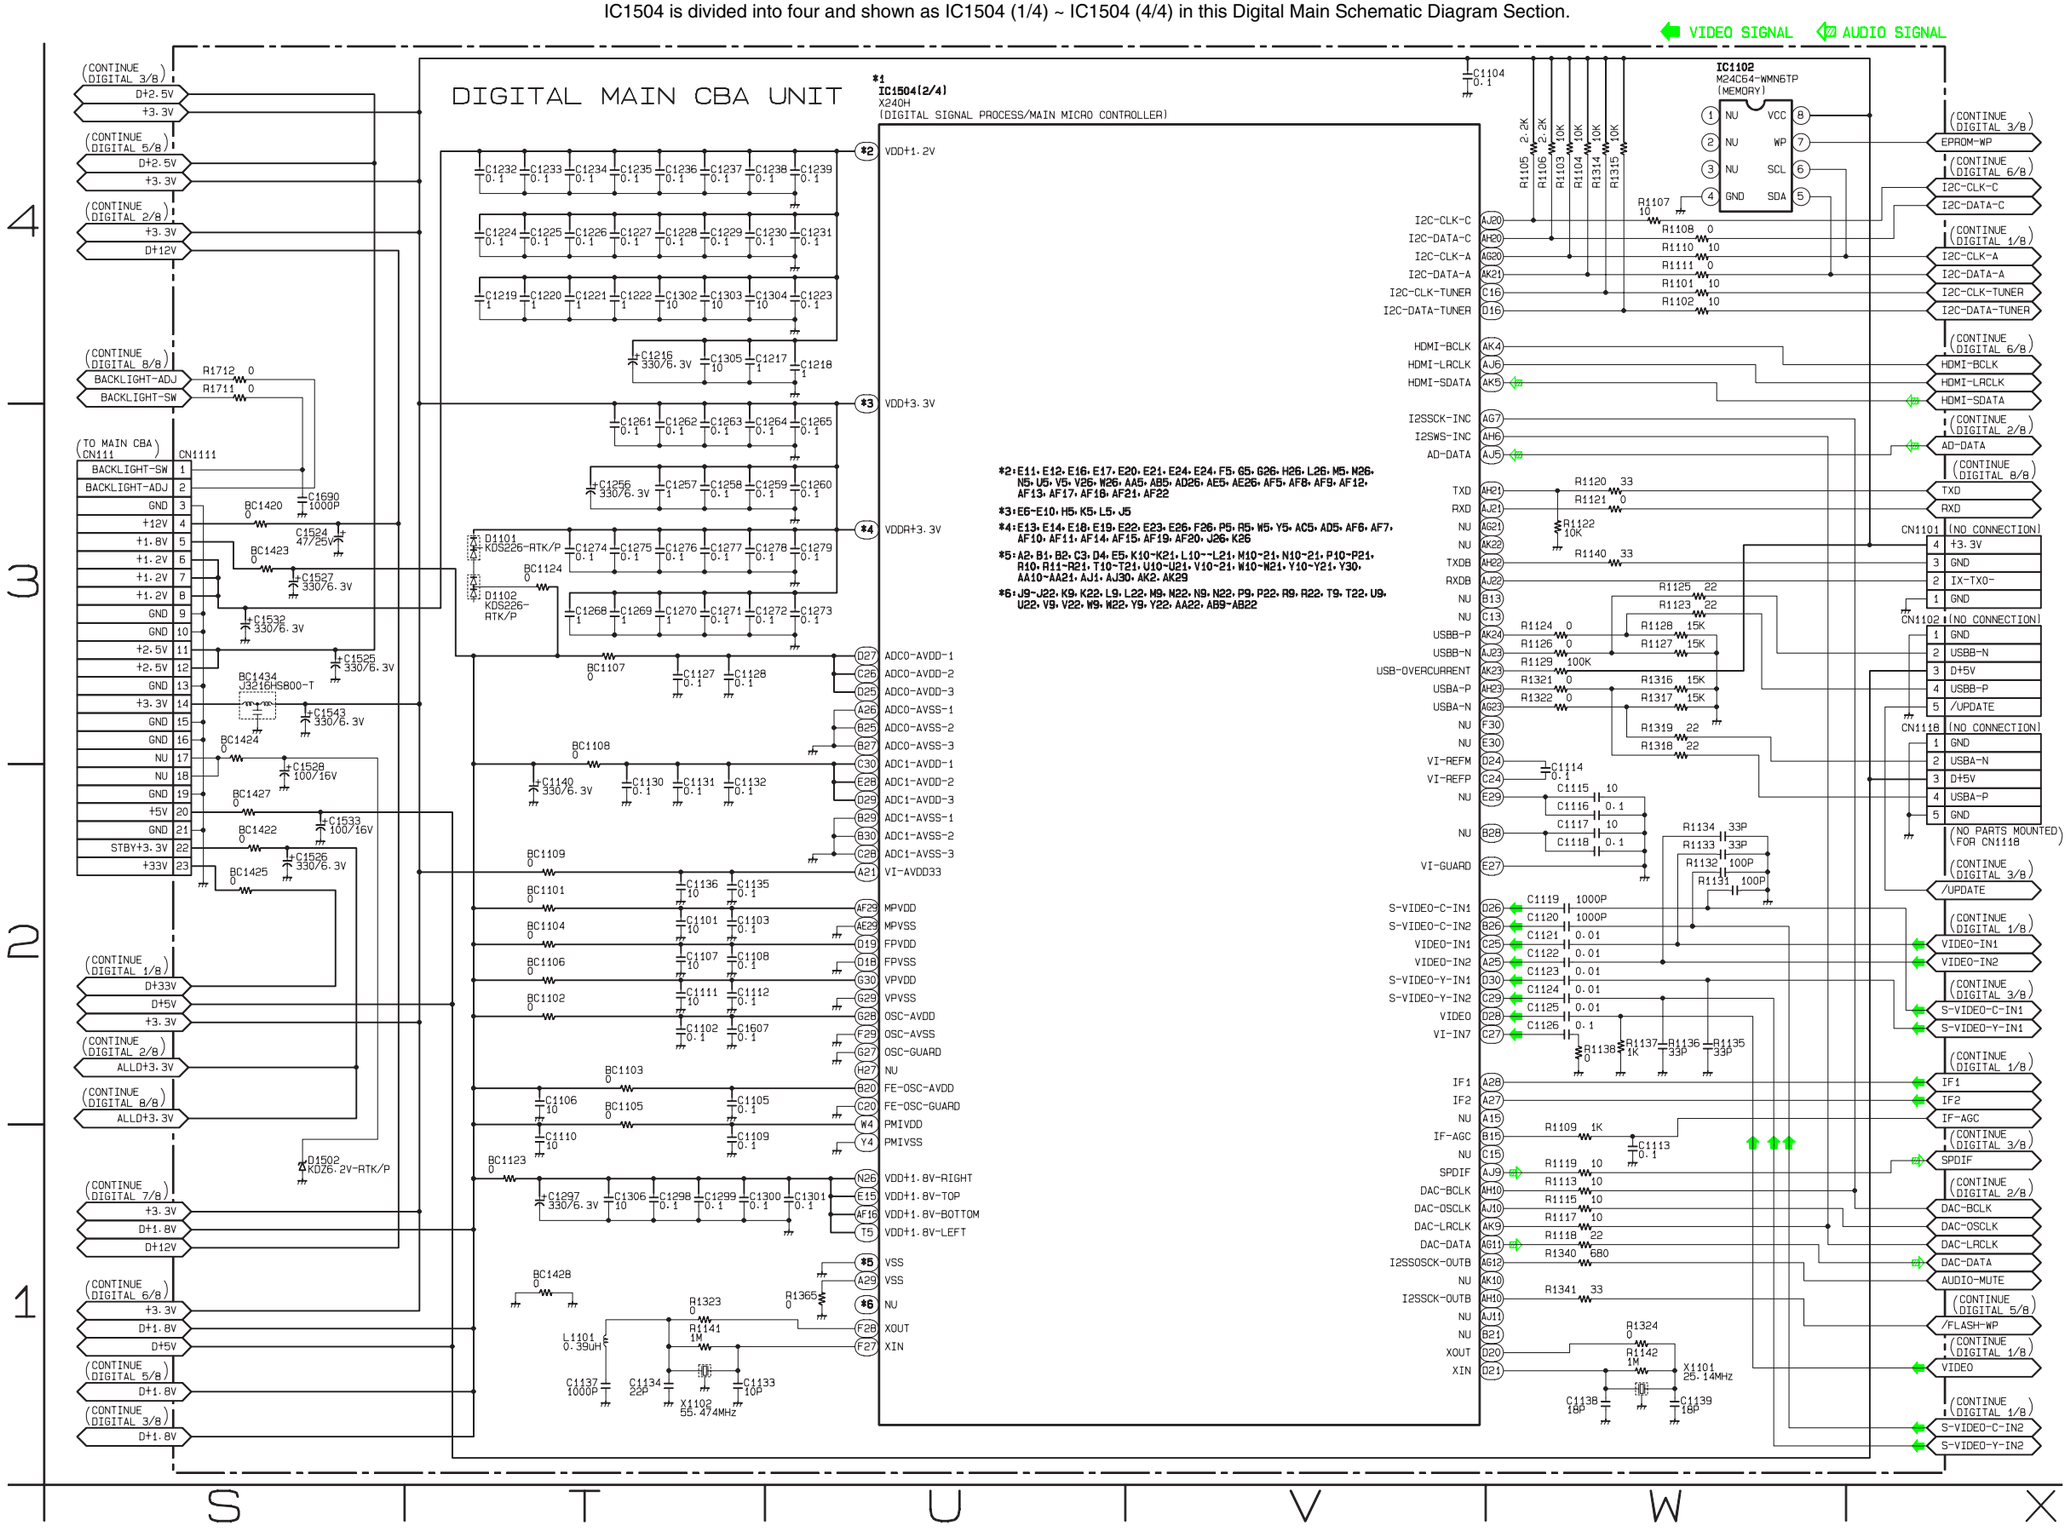
VIDEO SIGNAL
AUDIO SIGNAL
DIGITAL MAIN CBA UNIT
∗1
IC1504(2/4)
X240H
(DIGITAL SIGNAL PROCESS/MAIN MICRO CONTROLLER)
IC1102
M24C64-WMN6TP
(MEMORY)
∗2 E11, E12, E16, E17, E20, E21, E24, E24, F5, G5, G26, H26, L26, M5, N26, N5, U5, V5, V26, W26, AA5, AB5, AD26, AE5, AE26, AF5, AF8, AF9, AF12, AF13, AF17, AF18, AF21, AF22
∗3 E6-E10, H5, K5, L5, J5
∗4 E13, E14, E18, E19, E22, E23, E26, F26, P5, R5, W5, Y5, AC5, AD5, AF6, AF7, AF10, AF11, AF14, AF15, AF19, AF20, J26, K26
∗5 A2, B1, B2, C3, D4, E5, K10-K21, L10~L21, M10-21, N10-21, P10-P21, R10, R11-R21, T10-T21, U10-U21, V10-21, W10-M21, Y10-Y21, Y30, AA10-AA21, AJ1, AJ30, AK2, AK29
∗6 J9-J22, K9, K22, L9, L22, M9, M22, N9, N22, P9, P22, R9, R22, T9, T22, U9, U22, V9, V22, W9, W22, Y9, Y22, AA22, AB9-AB22
CN1111
CN1101 (NO CONNECTION)
CN1102 (NO CONNECTION)
CN1118 (NO CONNECTION)
(NO PARTS MOUNTED FOR CN1118)
D1101 KDS226-RTK/P
D1102 KDS226-RTK/P
D1502 KDZ6.2V-RTK/P
X1102 55.474MHz
X1101 25.14MHz
L1101 0.39uH
BC1434 J3216HS800-T

L5005SCD4

Digital Main 5/8 Schematic Diagram

∗1 NOTE:
The order of pins shown in this diagram is different from that of actual IC1504.
IC1504 is divided into four and shown as IC1504 (1/4) ~ IC1504 (4/4) in this Digital Main Schematic Diagram Section.

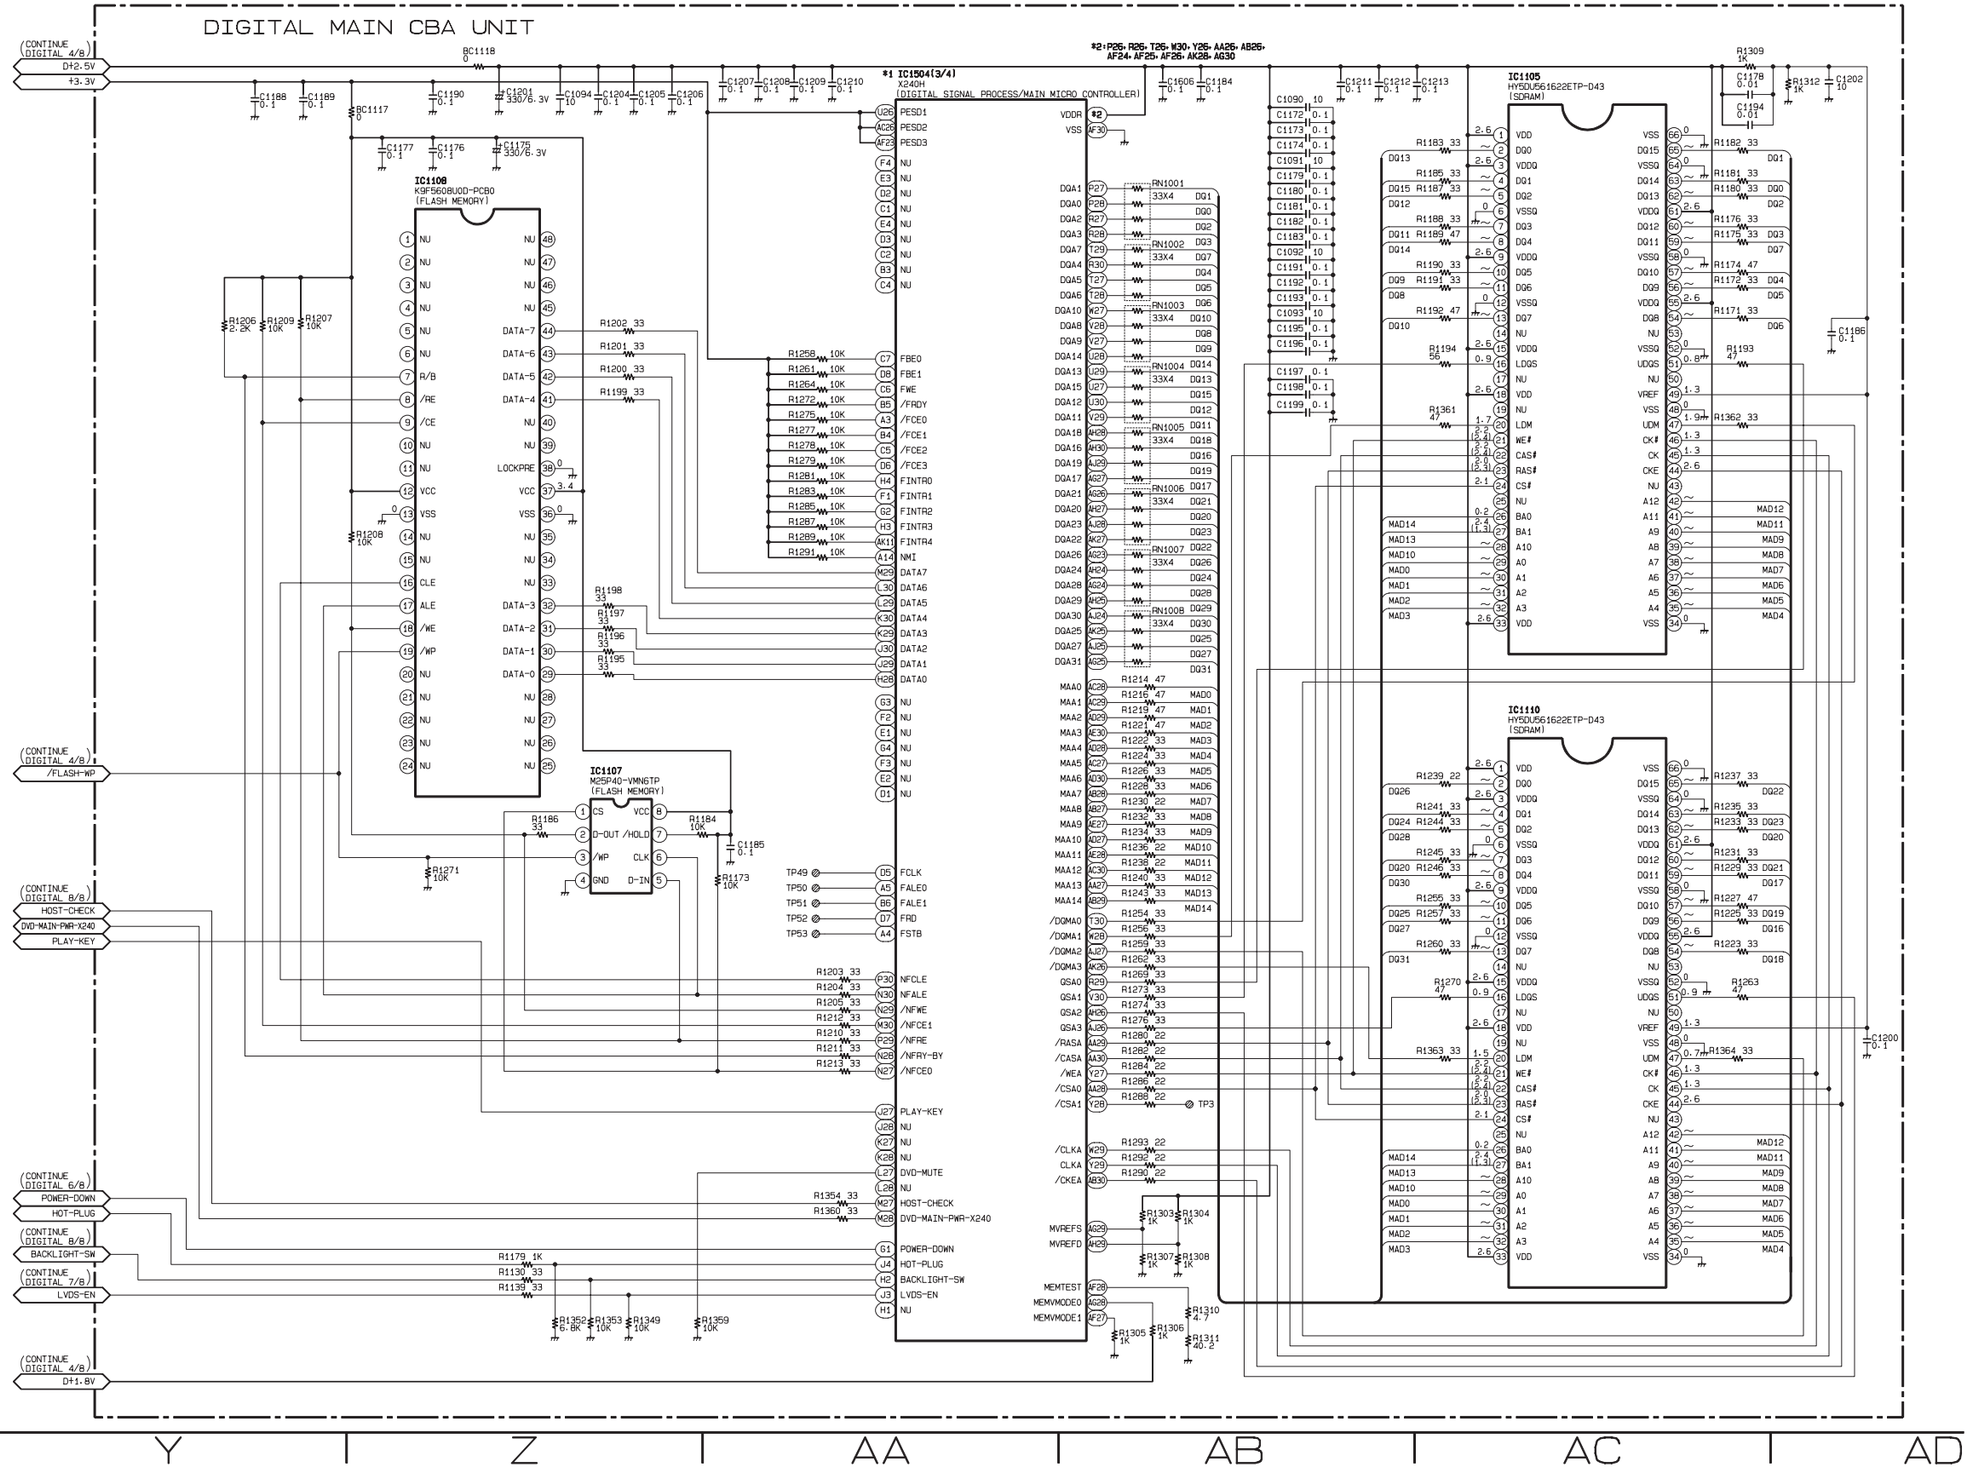

Digital Main 6/8 Schematic Diagram

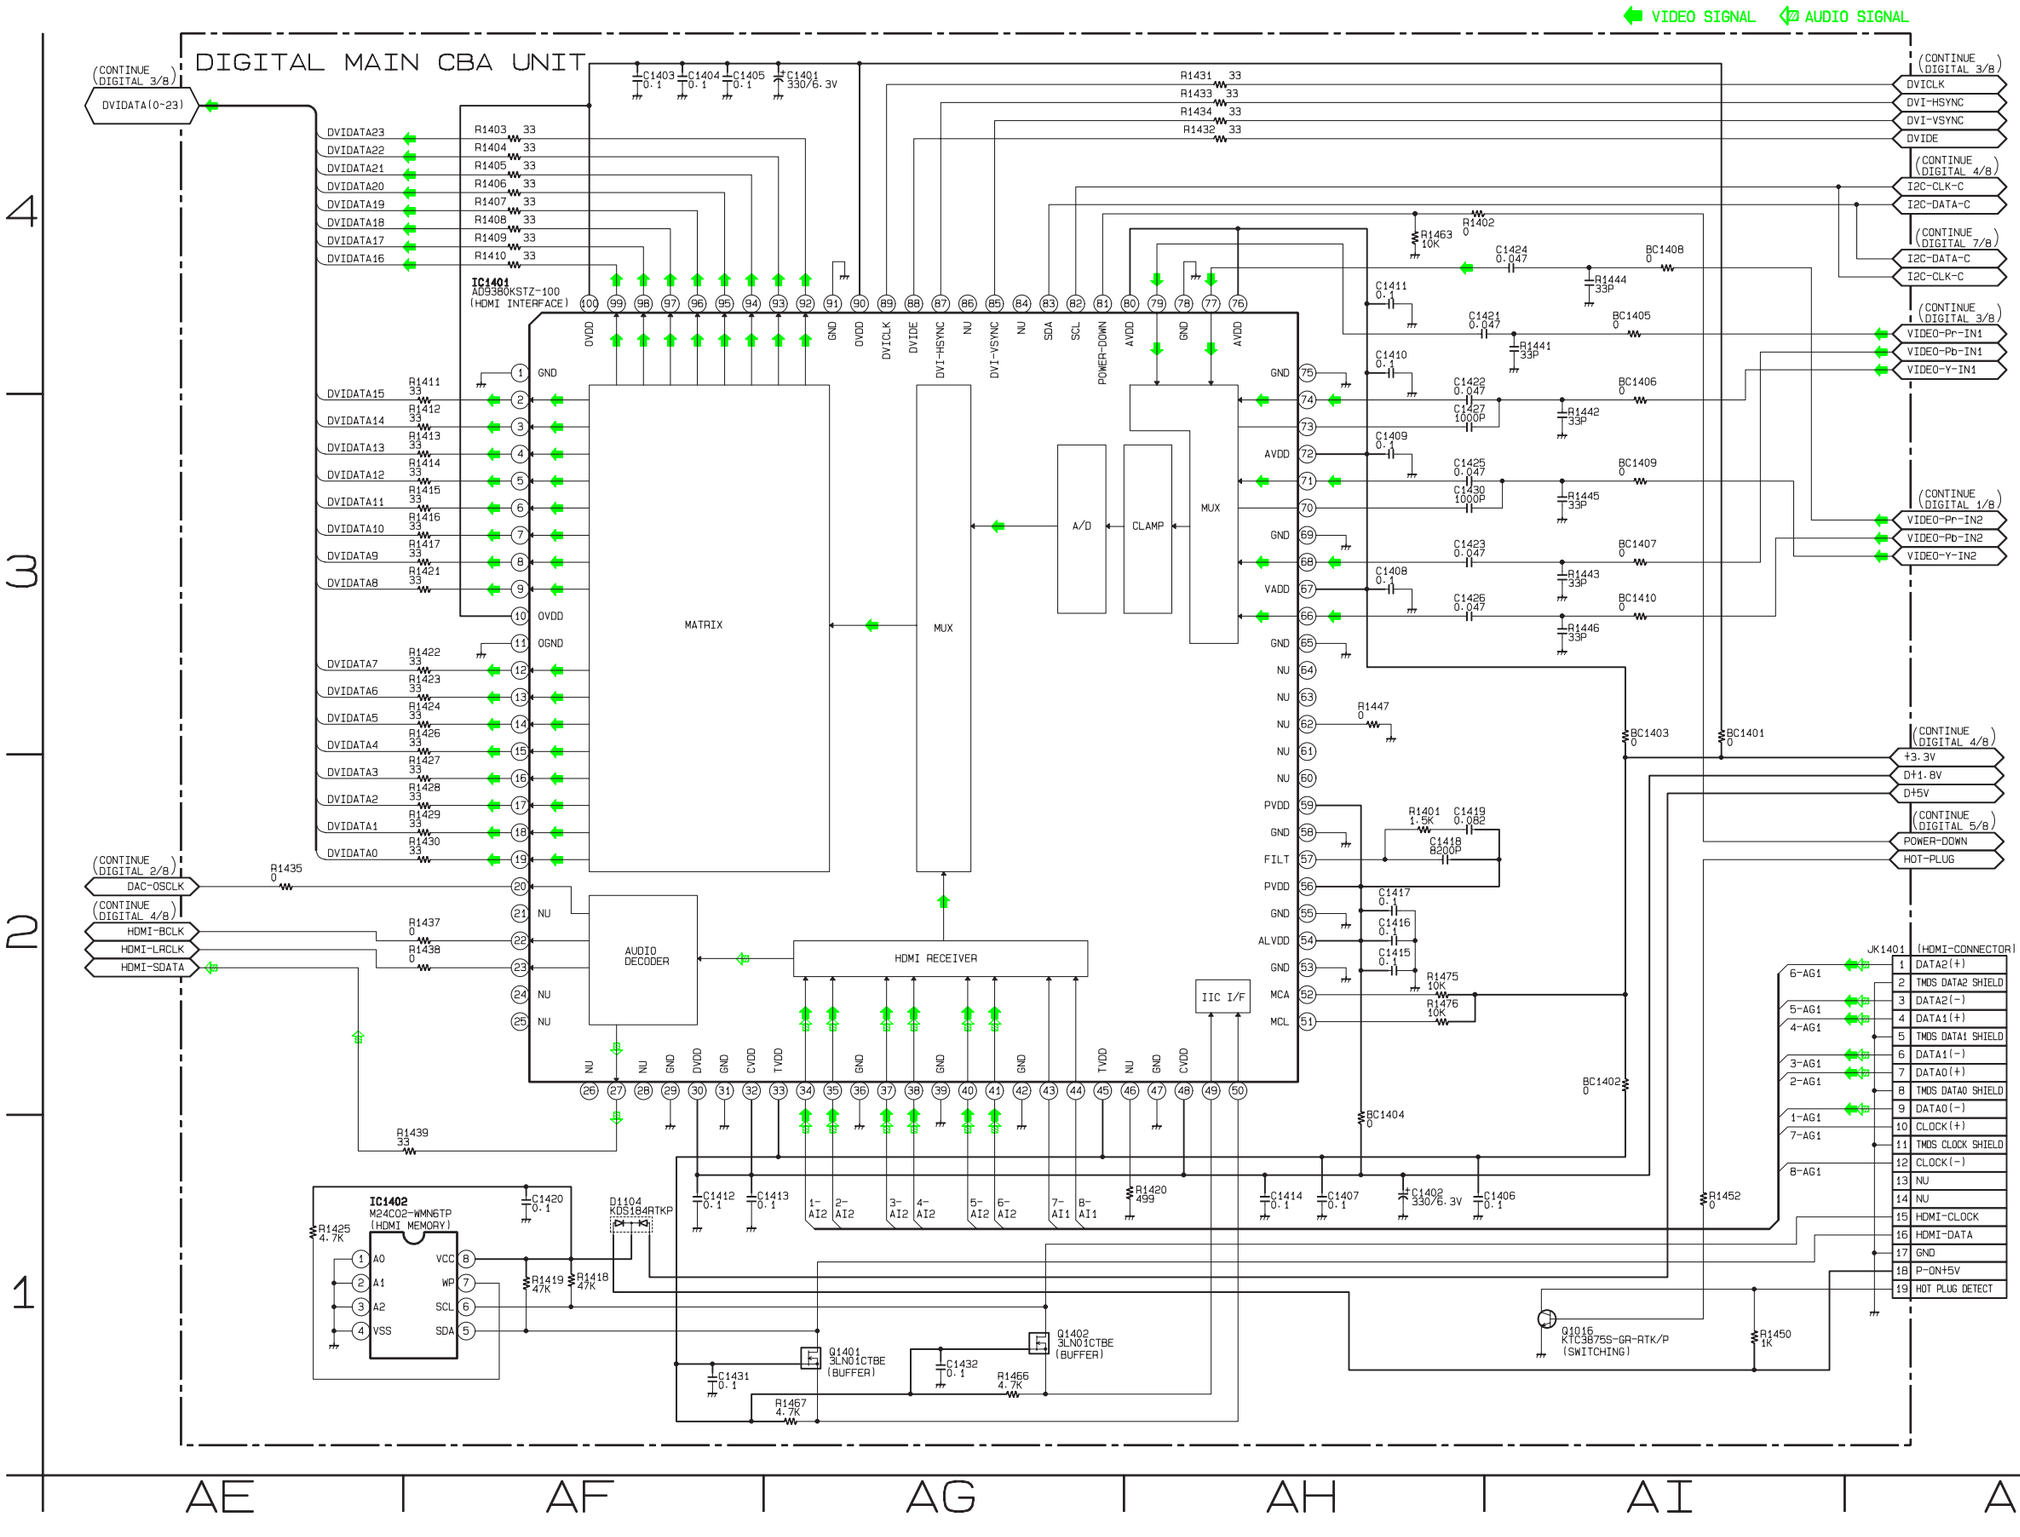

Digital Main 7/8 Schematic Diagram

∗1 NOTE:
The order of pins shown in this diagram is different from that of actual IC1504.
IC1504 is divided into four and shown as IC1504 (1/4) ~ IC1504 (4/4) in this Digital Main Schematic Diagram Section.

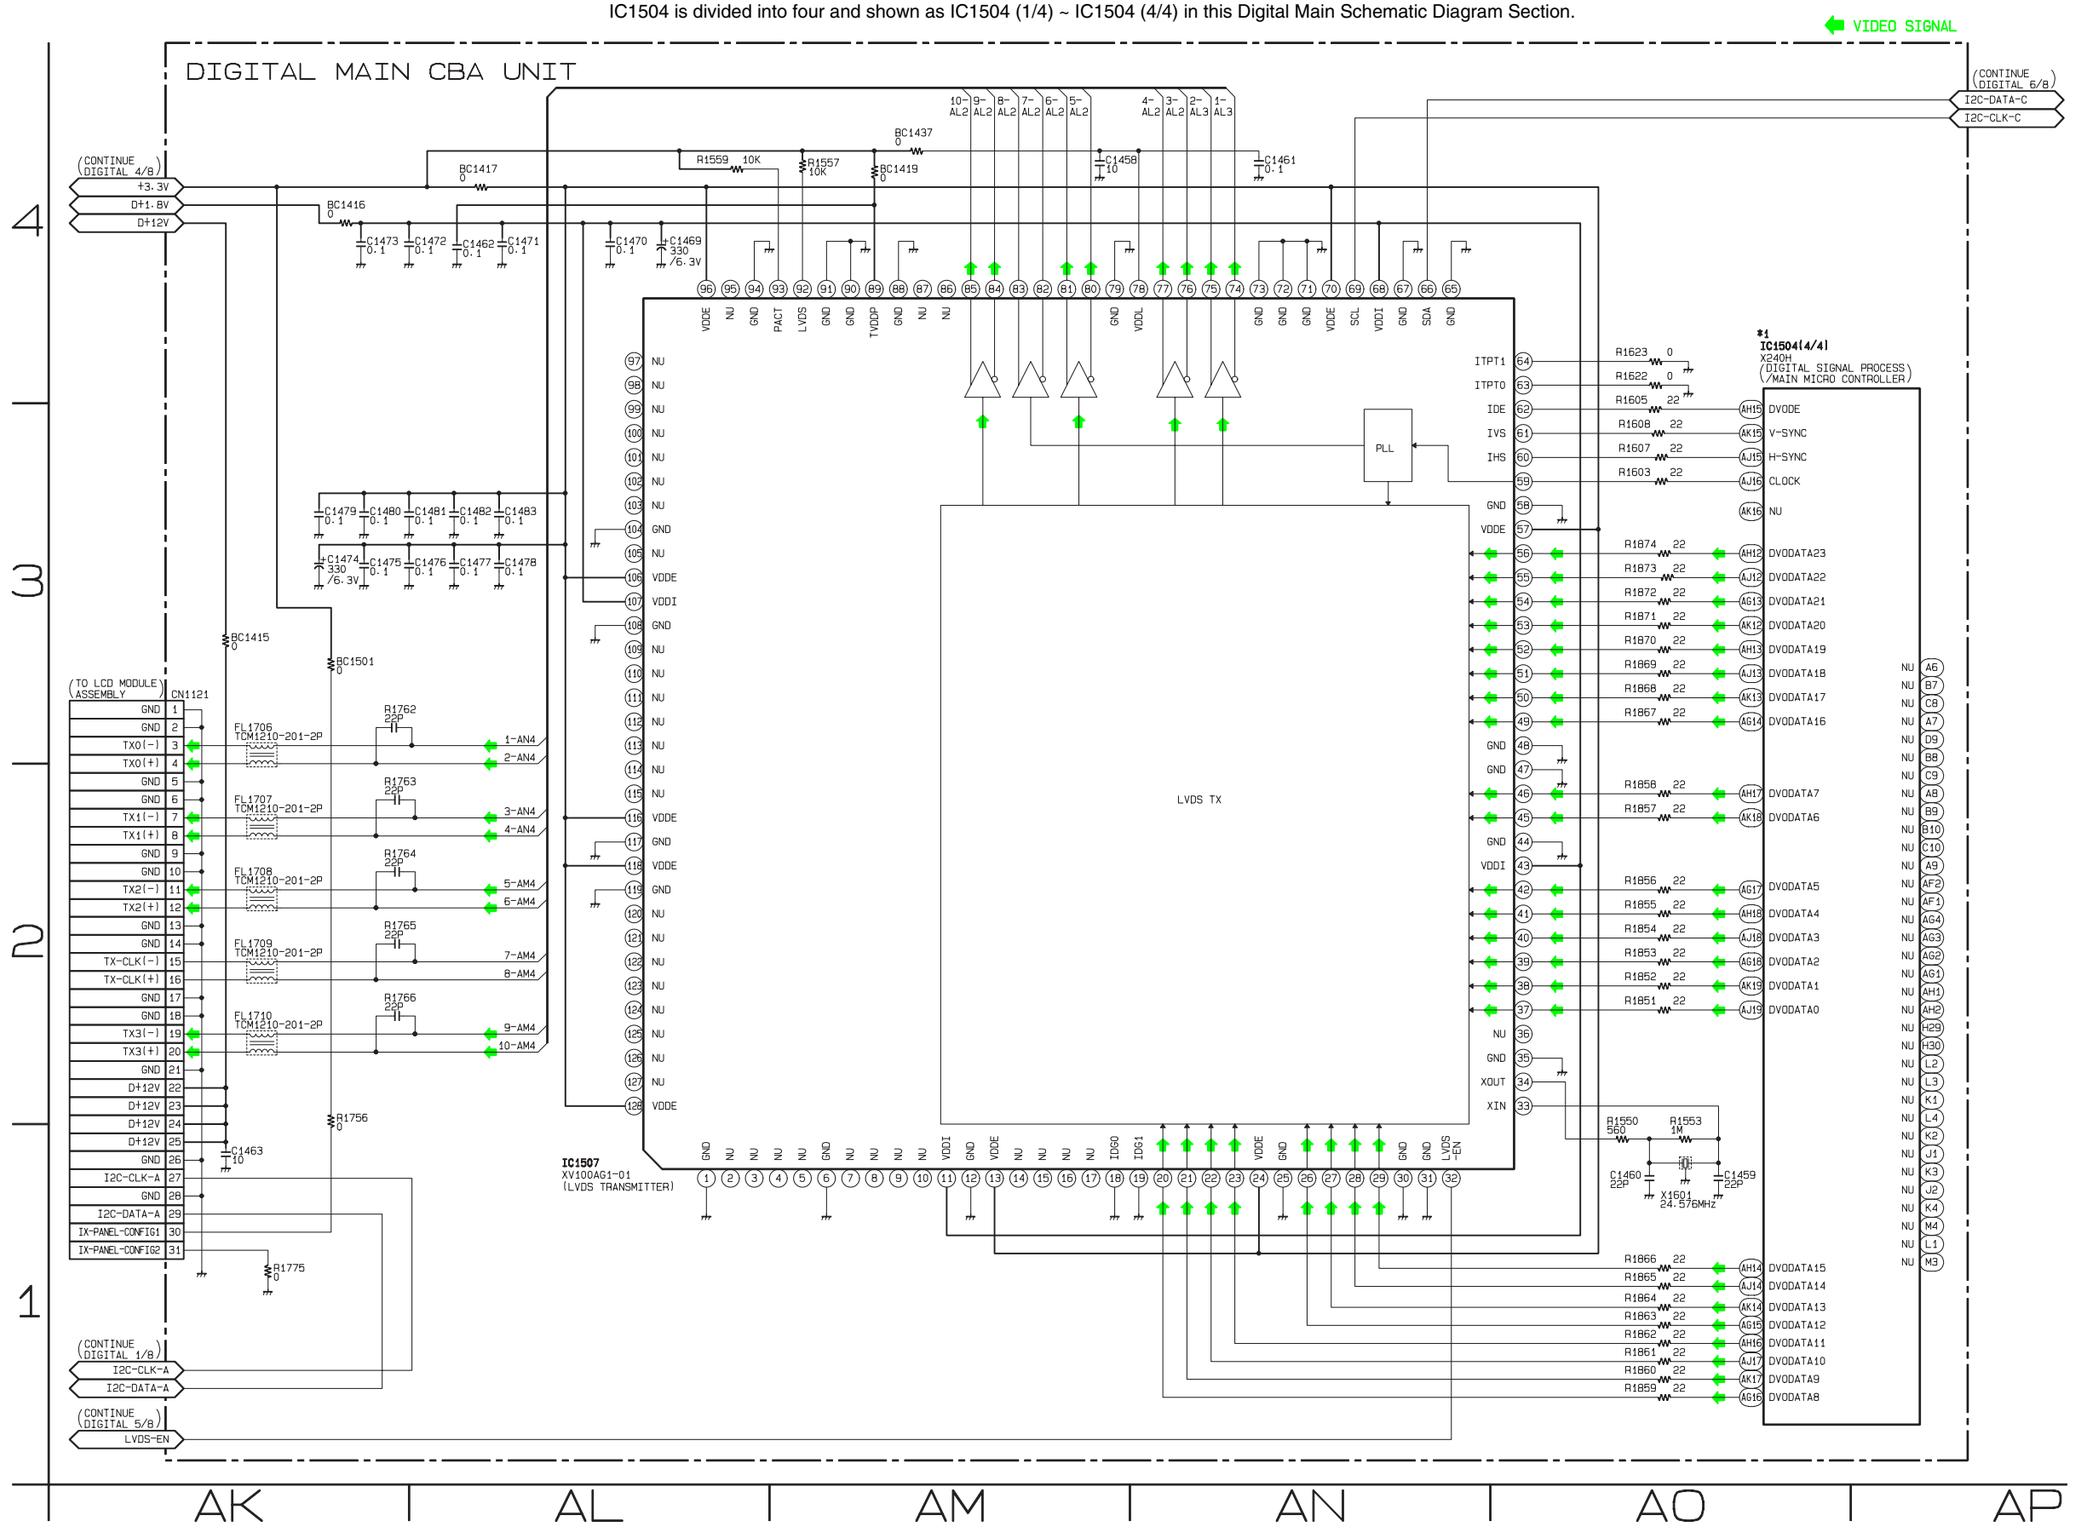

L5005SCD7

Digital Main 8/8 Schematic Diagram

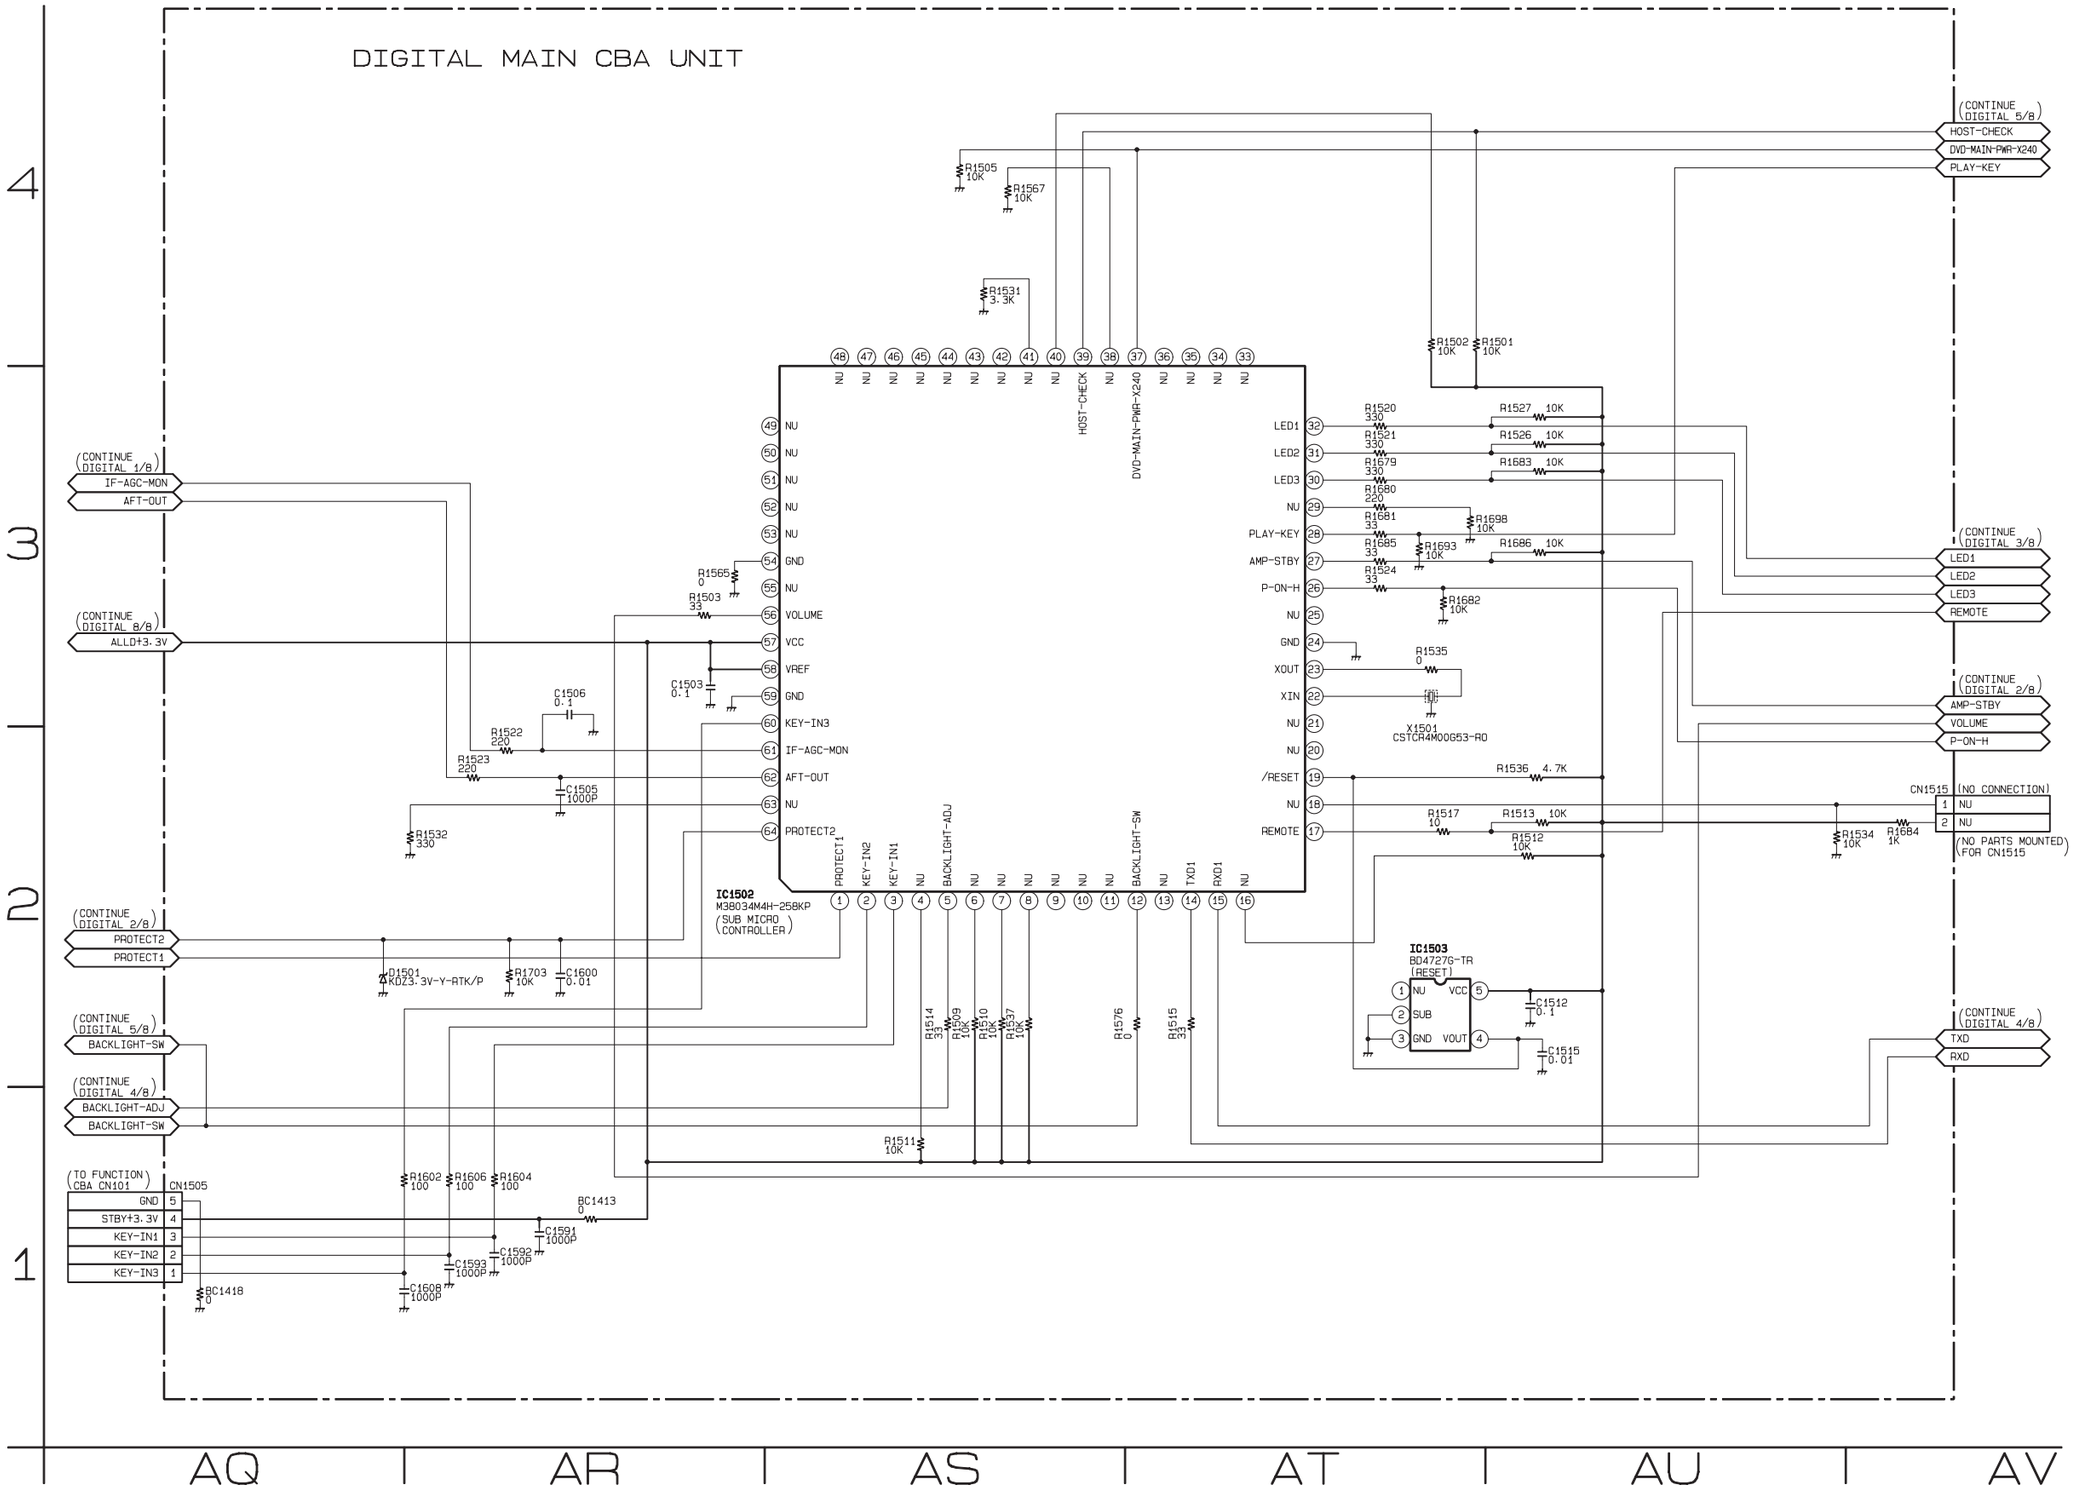

Main CBA Top View

CAUTION !
Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F601) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.



CAUTION ! : For continued protection against risk of fire, replace only with same type 4 A, 125V fuse.
ATTENTION : Utiliser un fusible de rechange de même type de 4A, 125V.

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used. Also, in order to have the ability to increase the input slowly,when troubleshooting this type power supply circuit, a variable isolation transformer is required.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

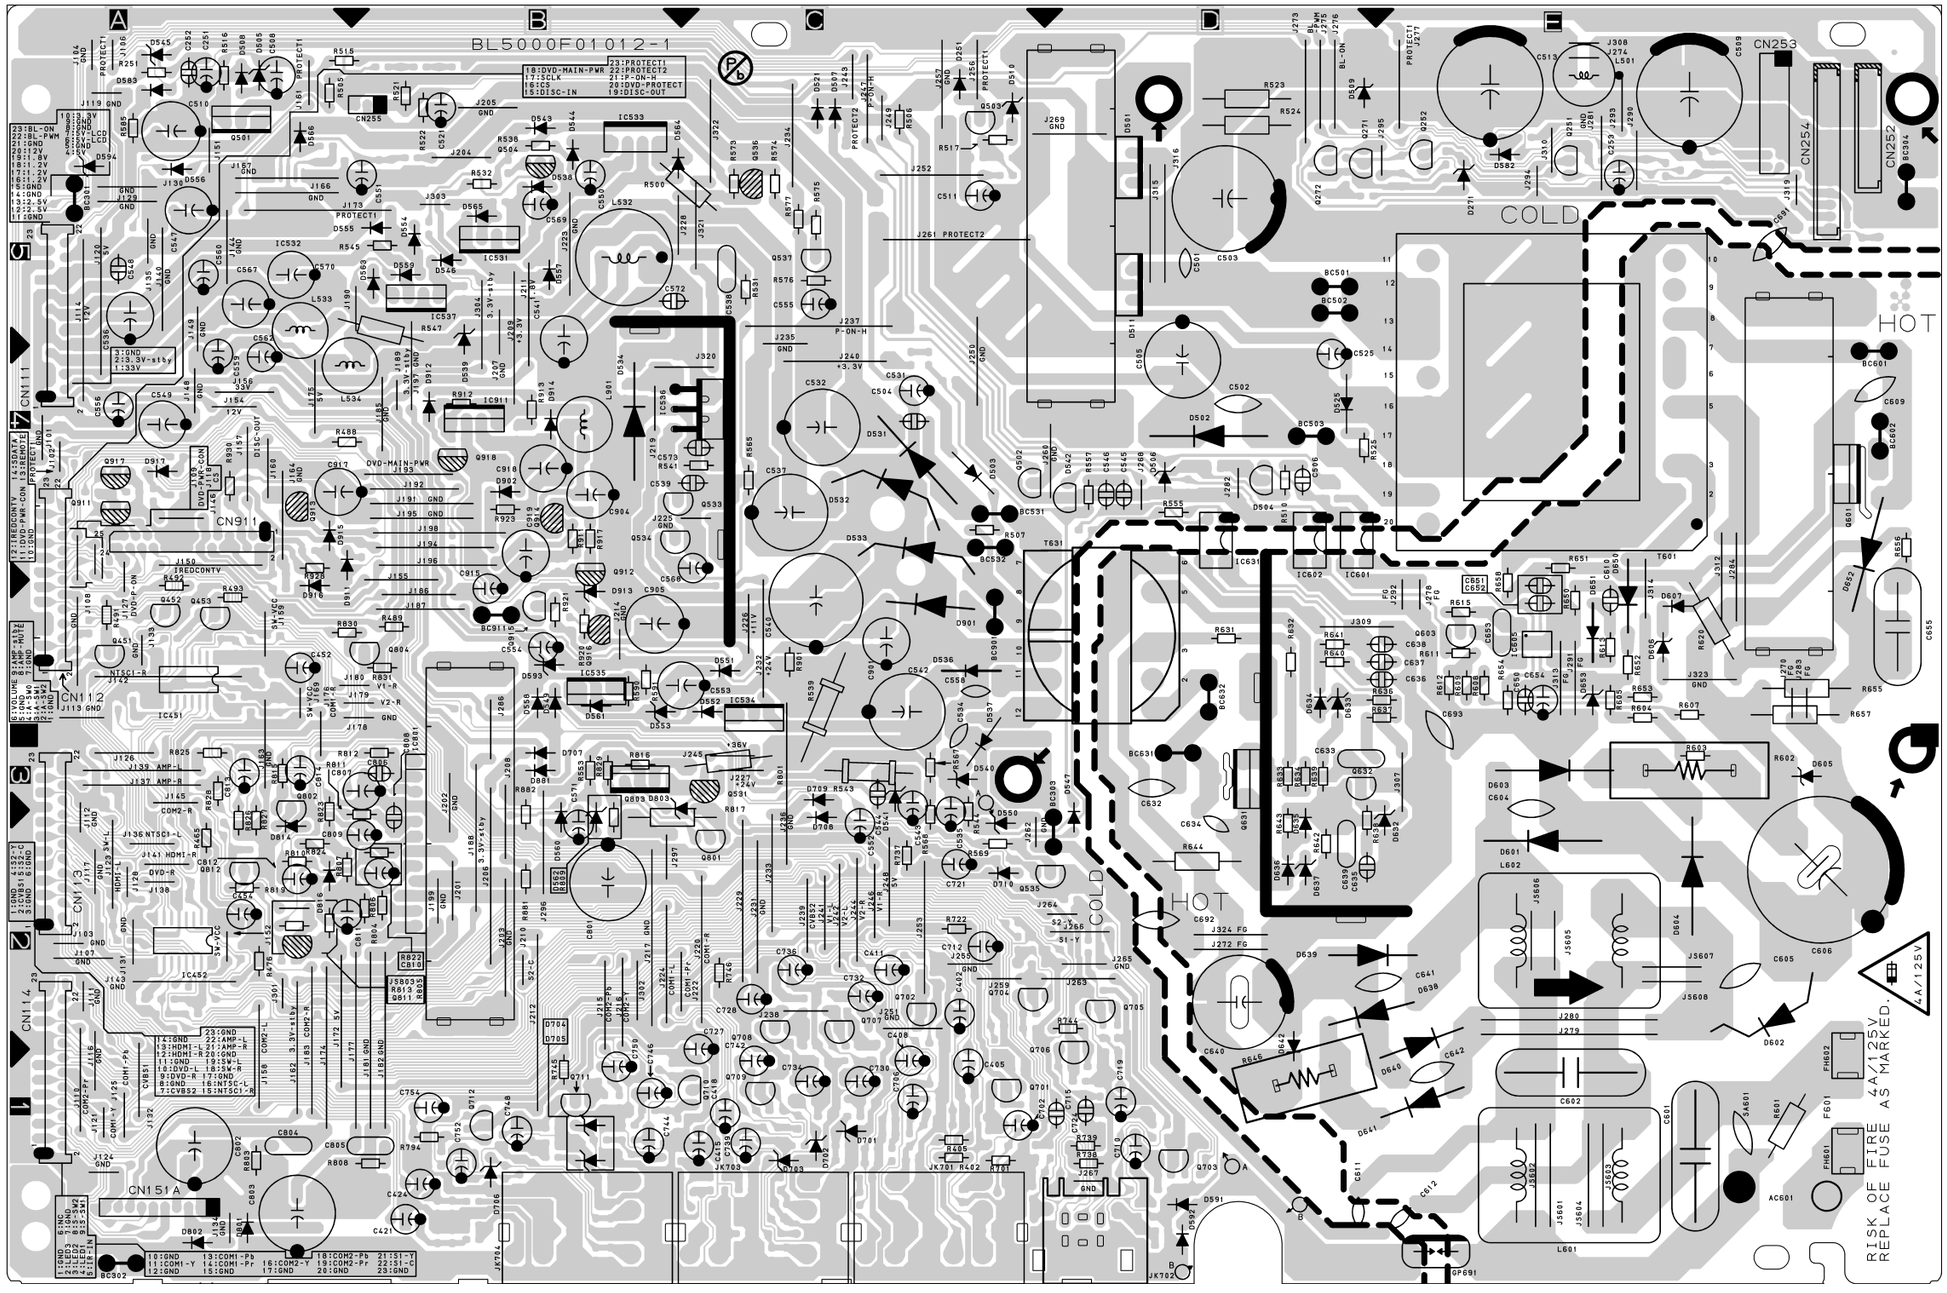

Main CBA Bottom View

CAUTION !
Fixed voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F601) is blown , check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.

4A/125V

CAUTION ! : For continued protection against risk of fire, replace only with same type 4 A, 125V fuse.
ATTENTION : Utiliser un fusible de rechange de même type de 4A, 125V.

Because a hot chassis ground is present in the power supply circuit, an isolation transformer must be used. Also, in order to have the ability to increase the input slowly,when troubleshooting this type power supply circuit, a variable isolation transformer is required.

NOTE:
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

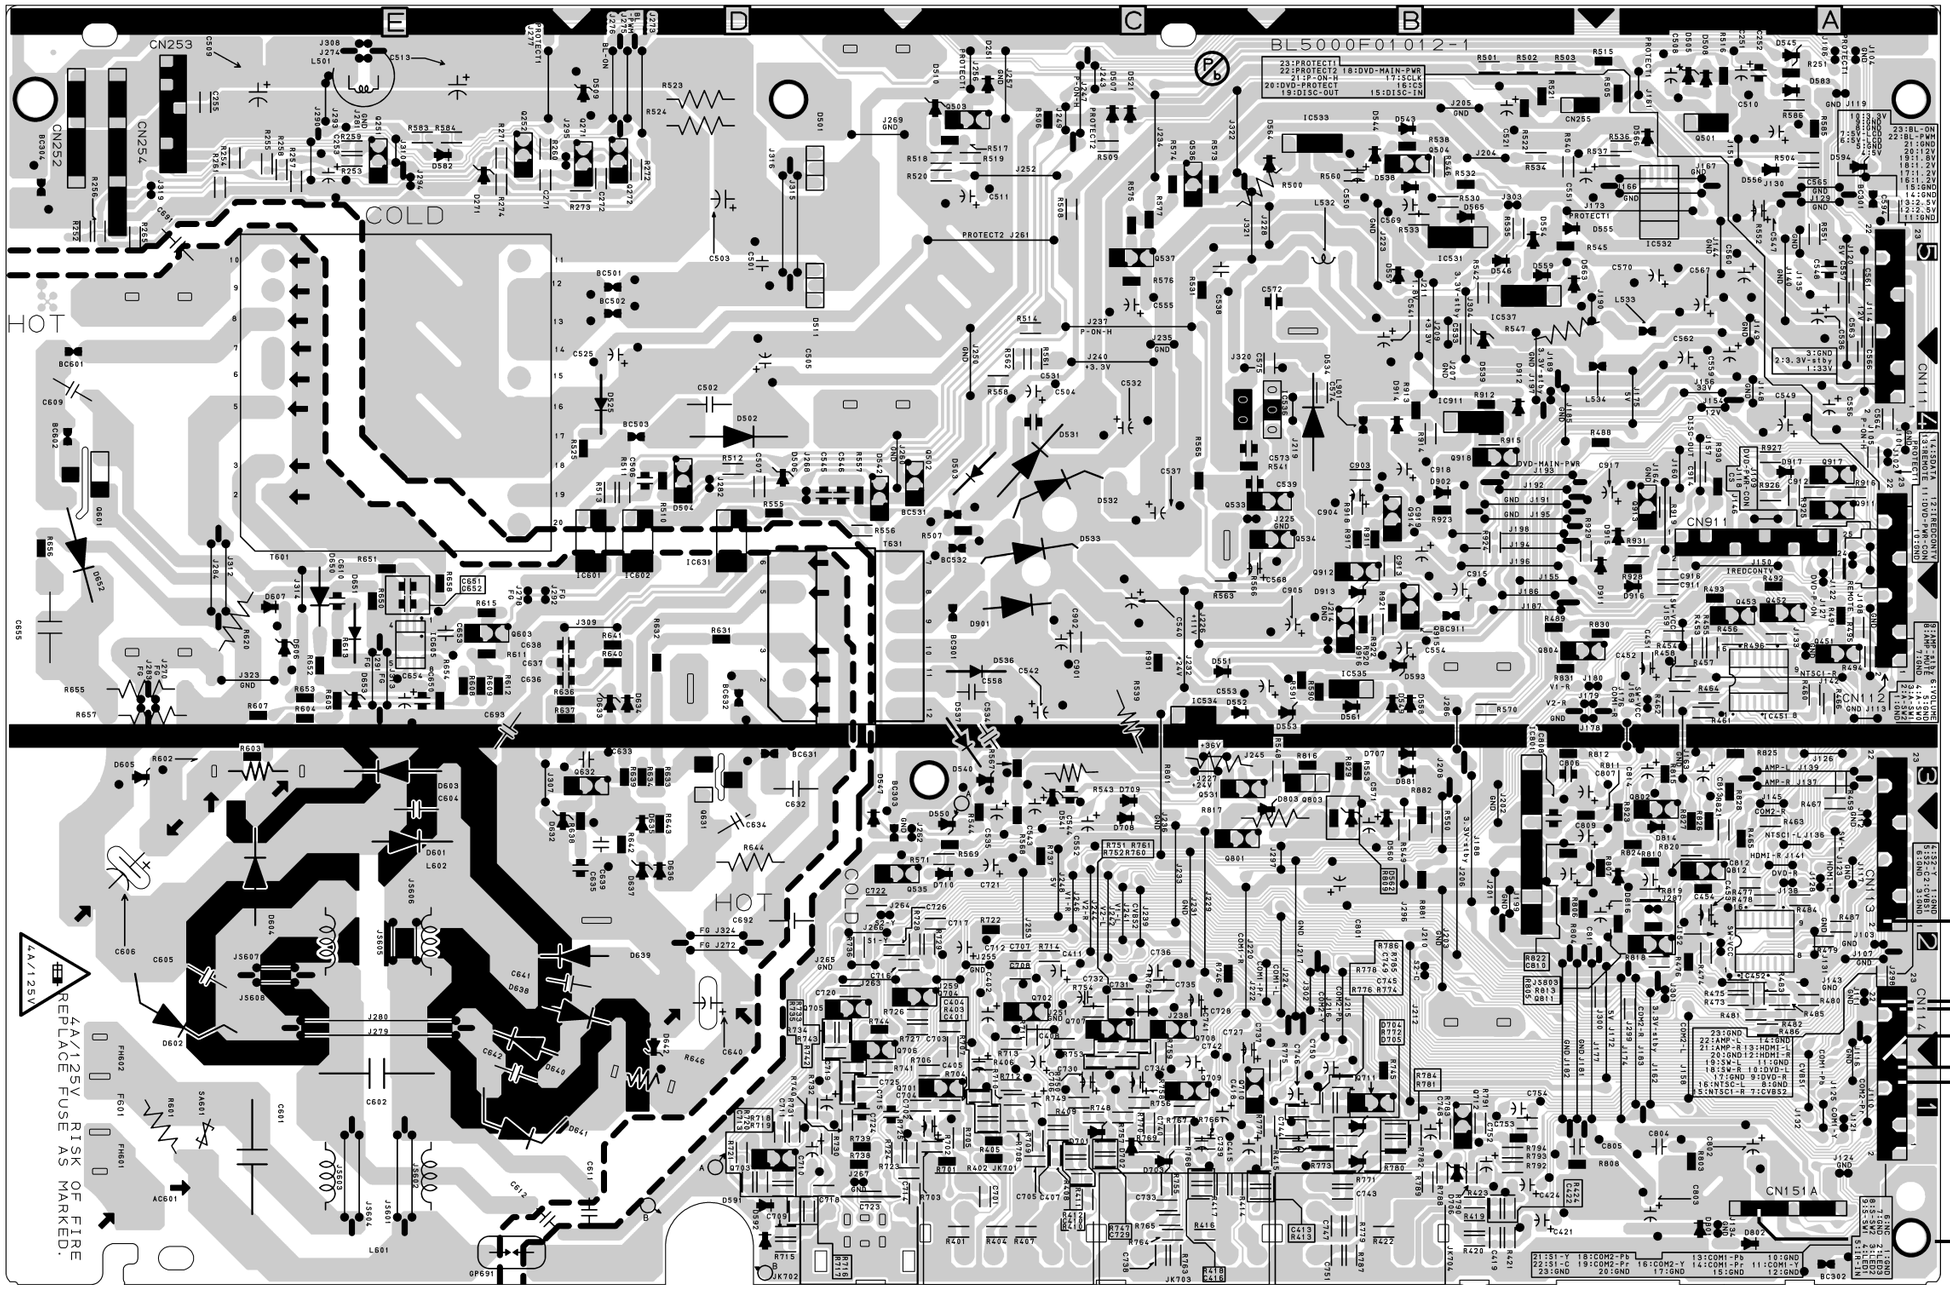

Function CBA Top View

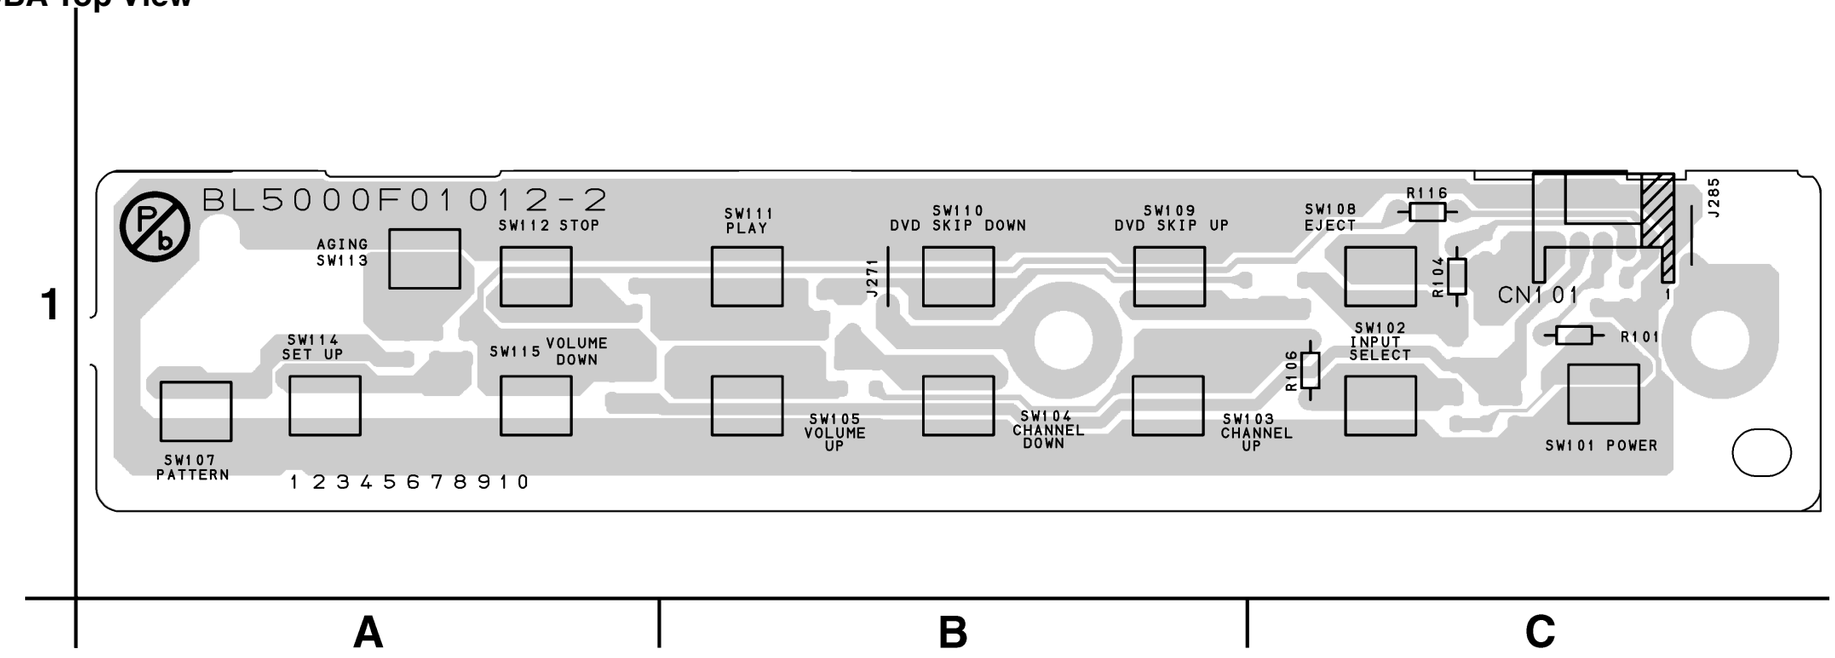

Function CBA Bottom View

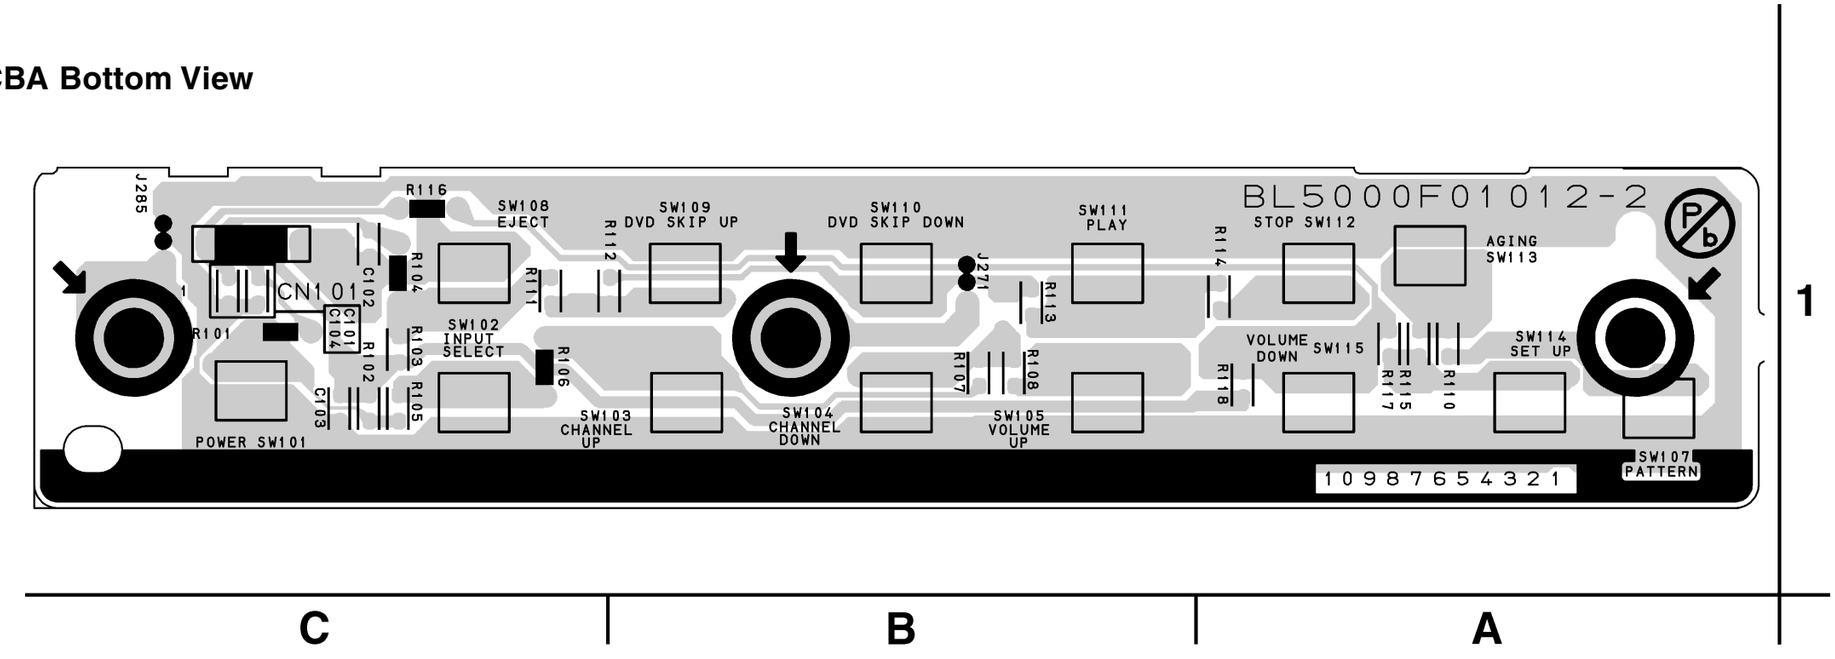

LED CBA Top View

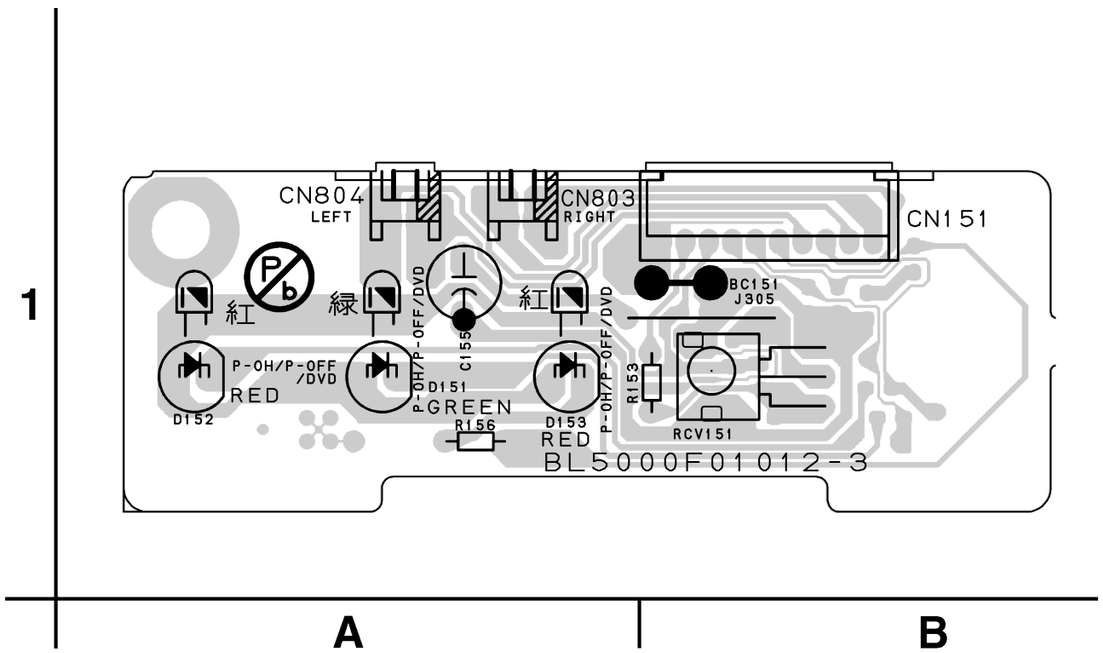

LED CBA Bottom View

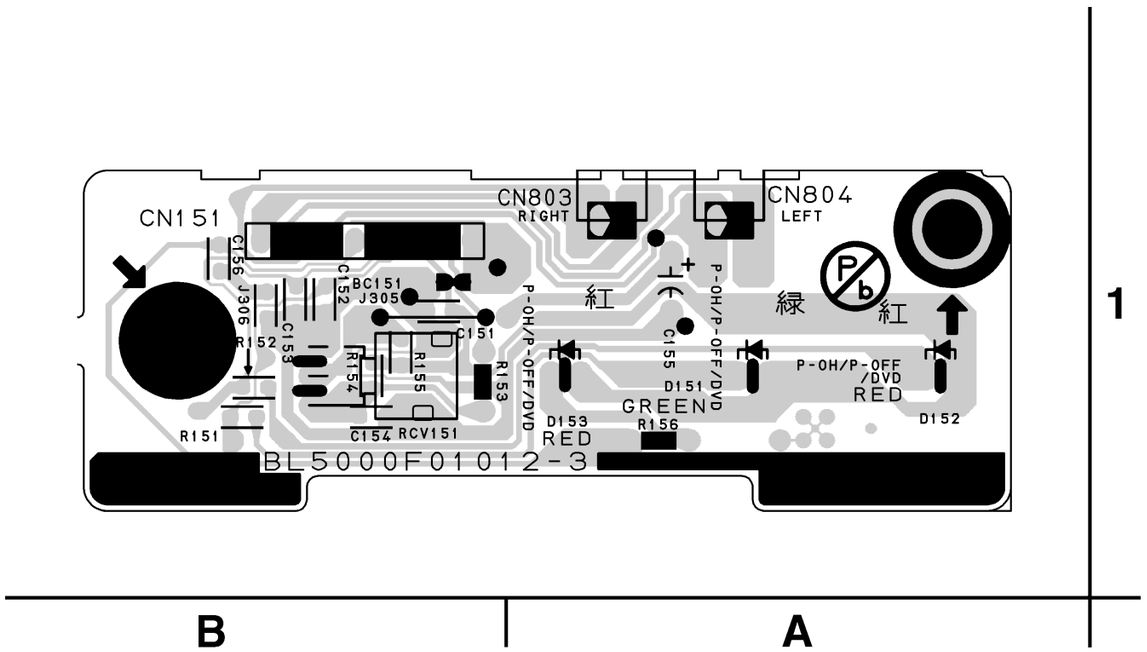

Inverter CBA Top View

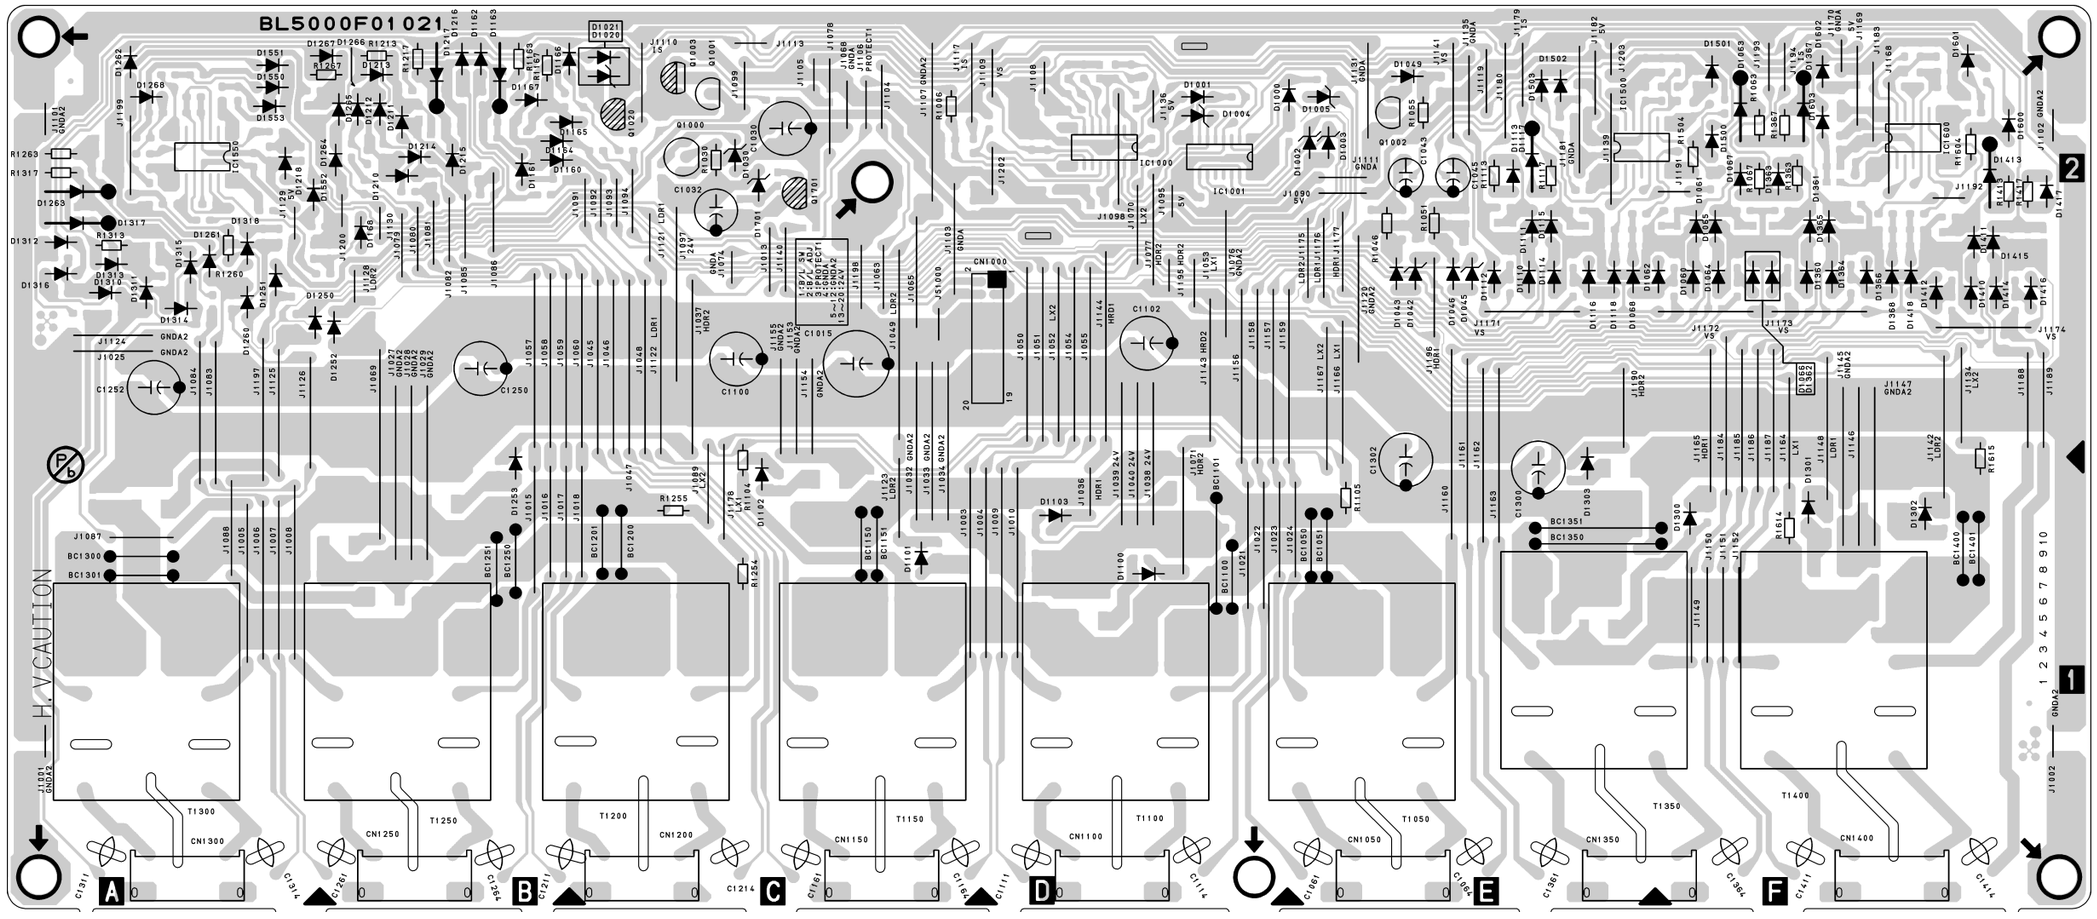

Inverter CBA Bottom View

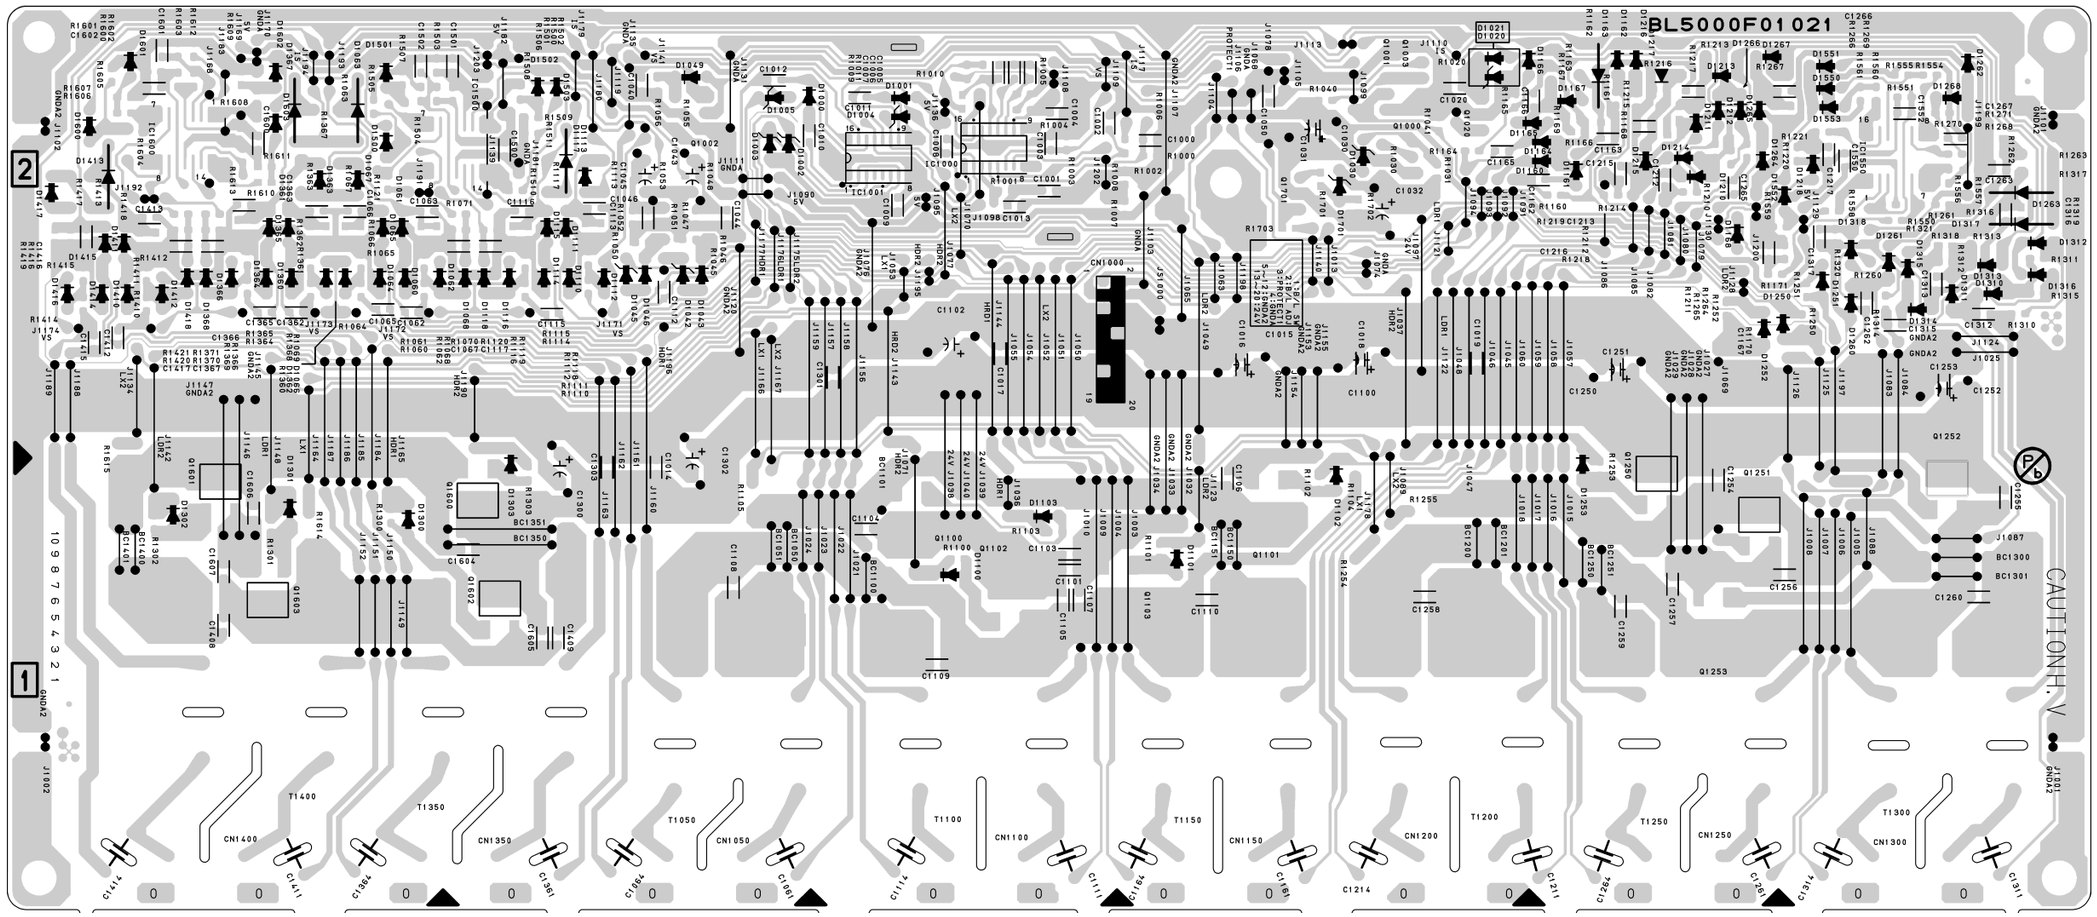

WAVEFORMS

WF1 ~ WF7 = Waveforms to be observed at
Waveform check points.
(Shown in Schematic Diagram.)

Input: NTSC Color Bar Signal (with 1kHz Audio Signal)

WF1 Pin 2 of CN113

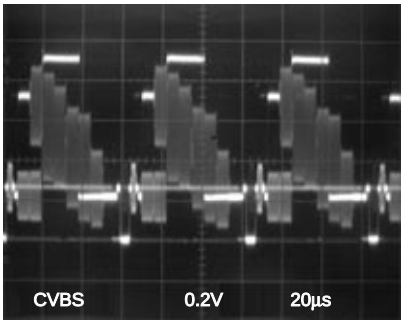

WF5 Pin 13 of CN114

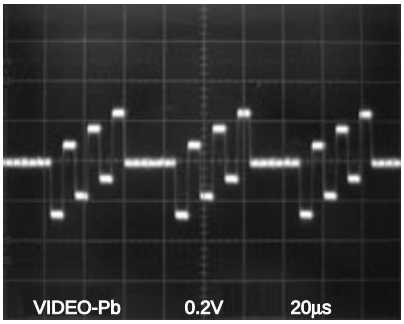

WF2 Pin 21 of CN114

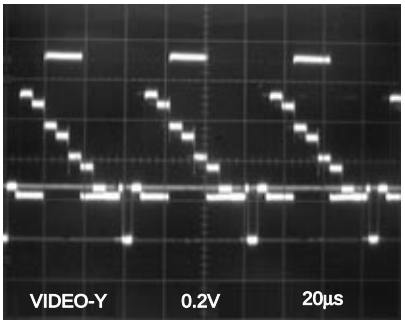

WF6 Pin 14 of CN114

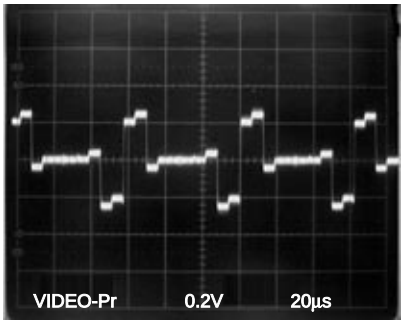

WF3 Pin 22 of CN114

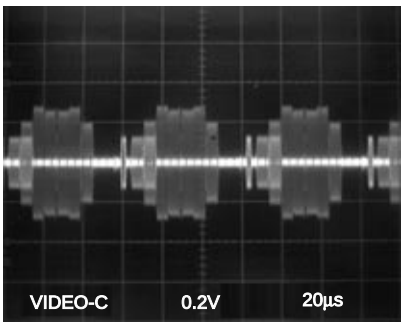

WF7 Pin 8 of CN151A

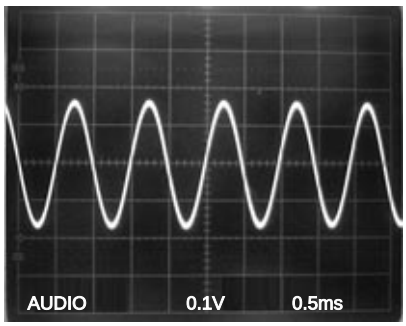

WF4 Pin 11 of CN114

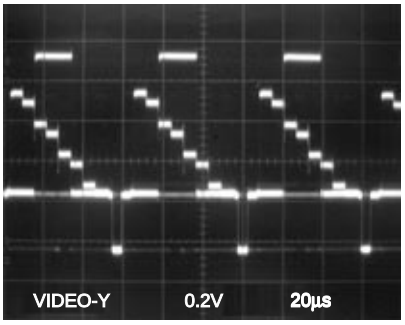

WIRING DIAGRAM

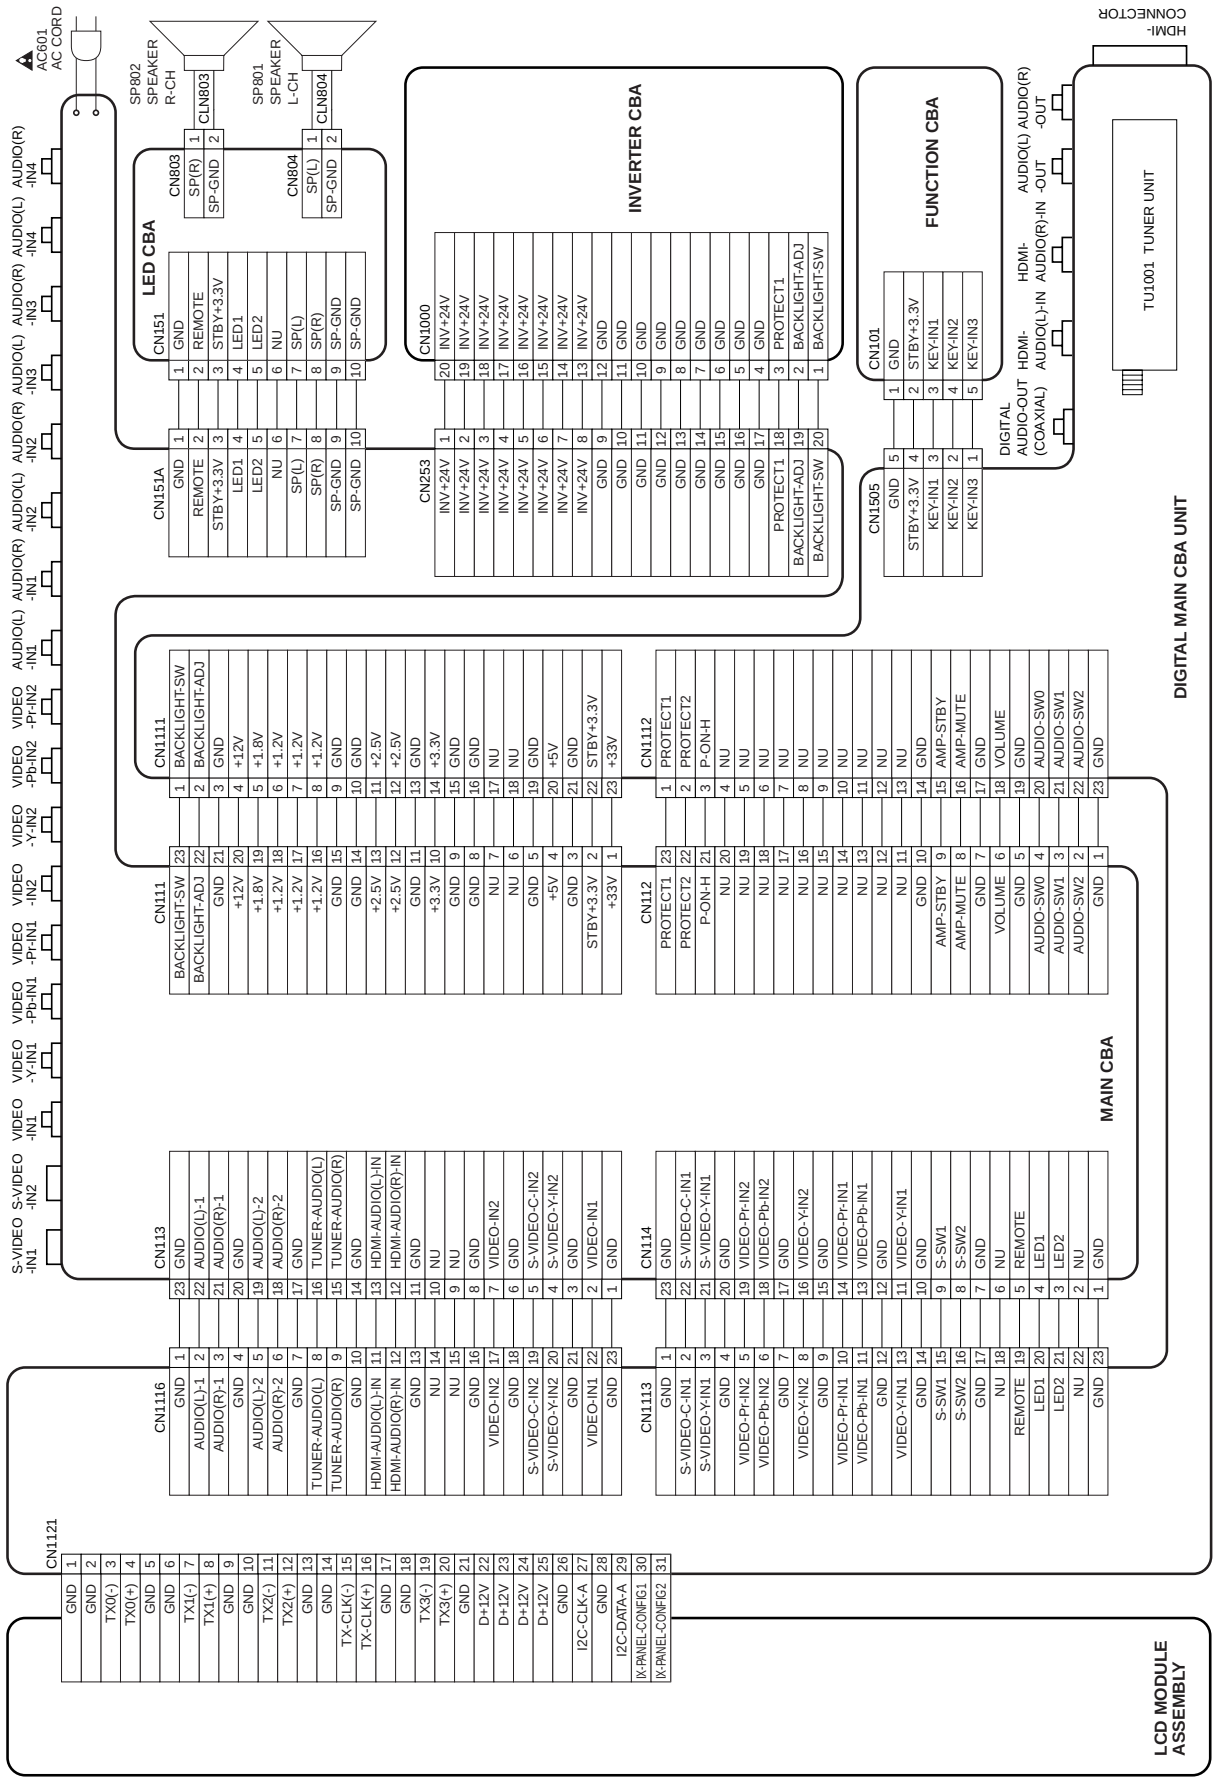

EXPLODED VIEWS

Cabinet

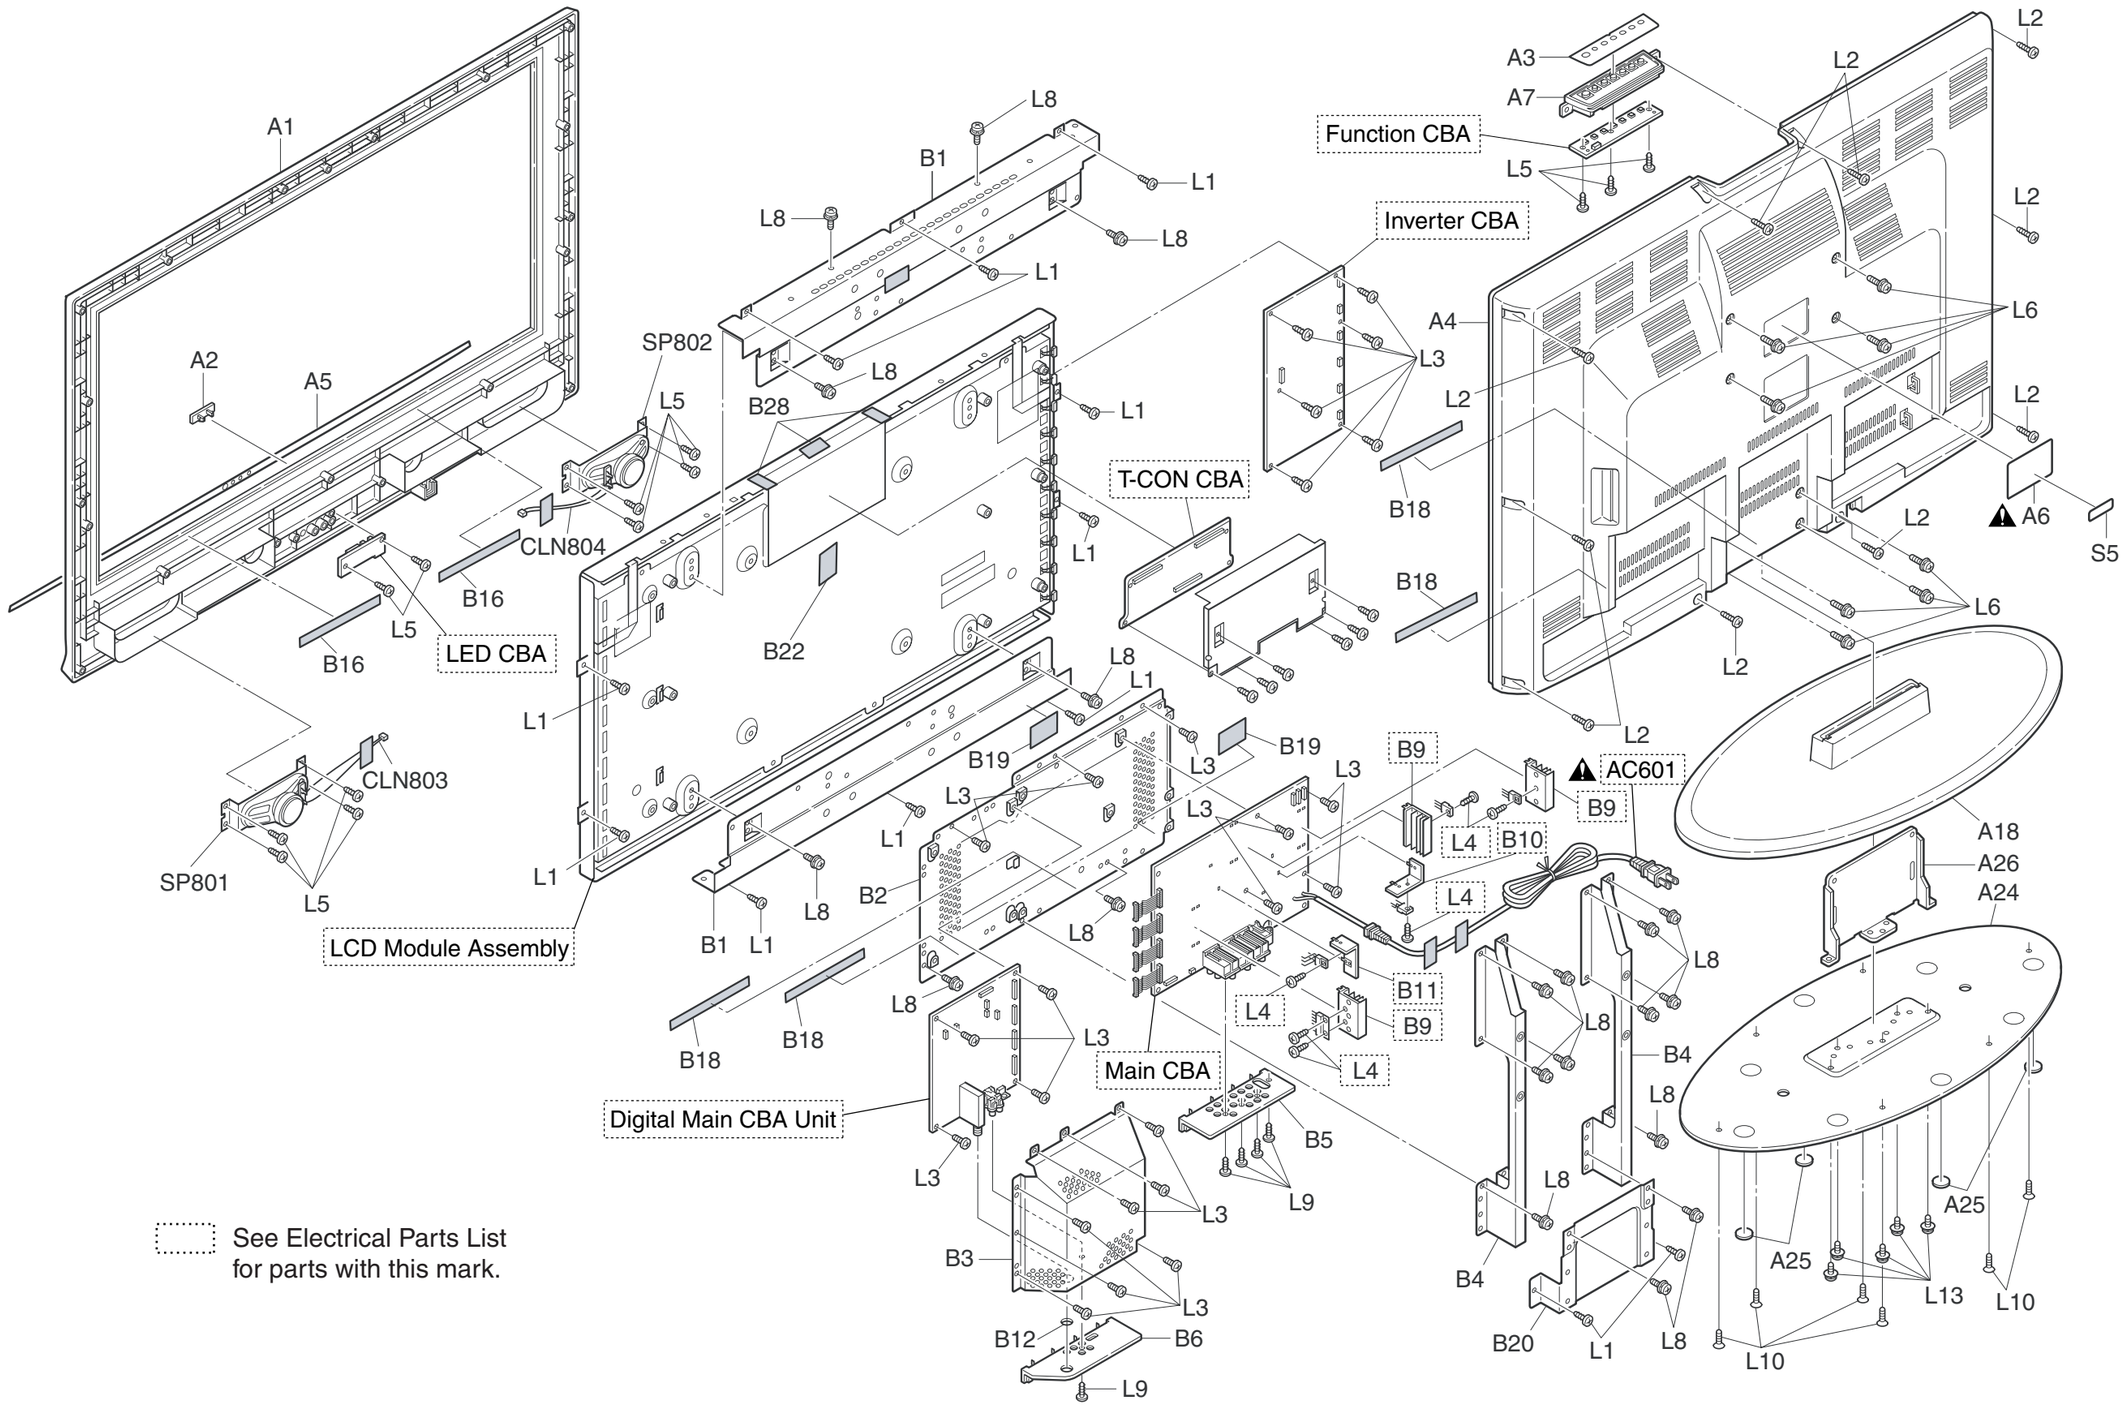

See Electrical Parts List for parts with this mark.

Packing

Some Ref. Numbers are not in sequence.

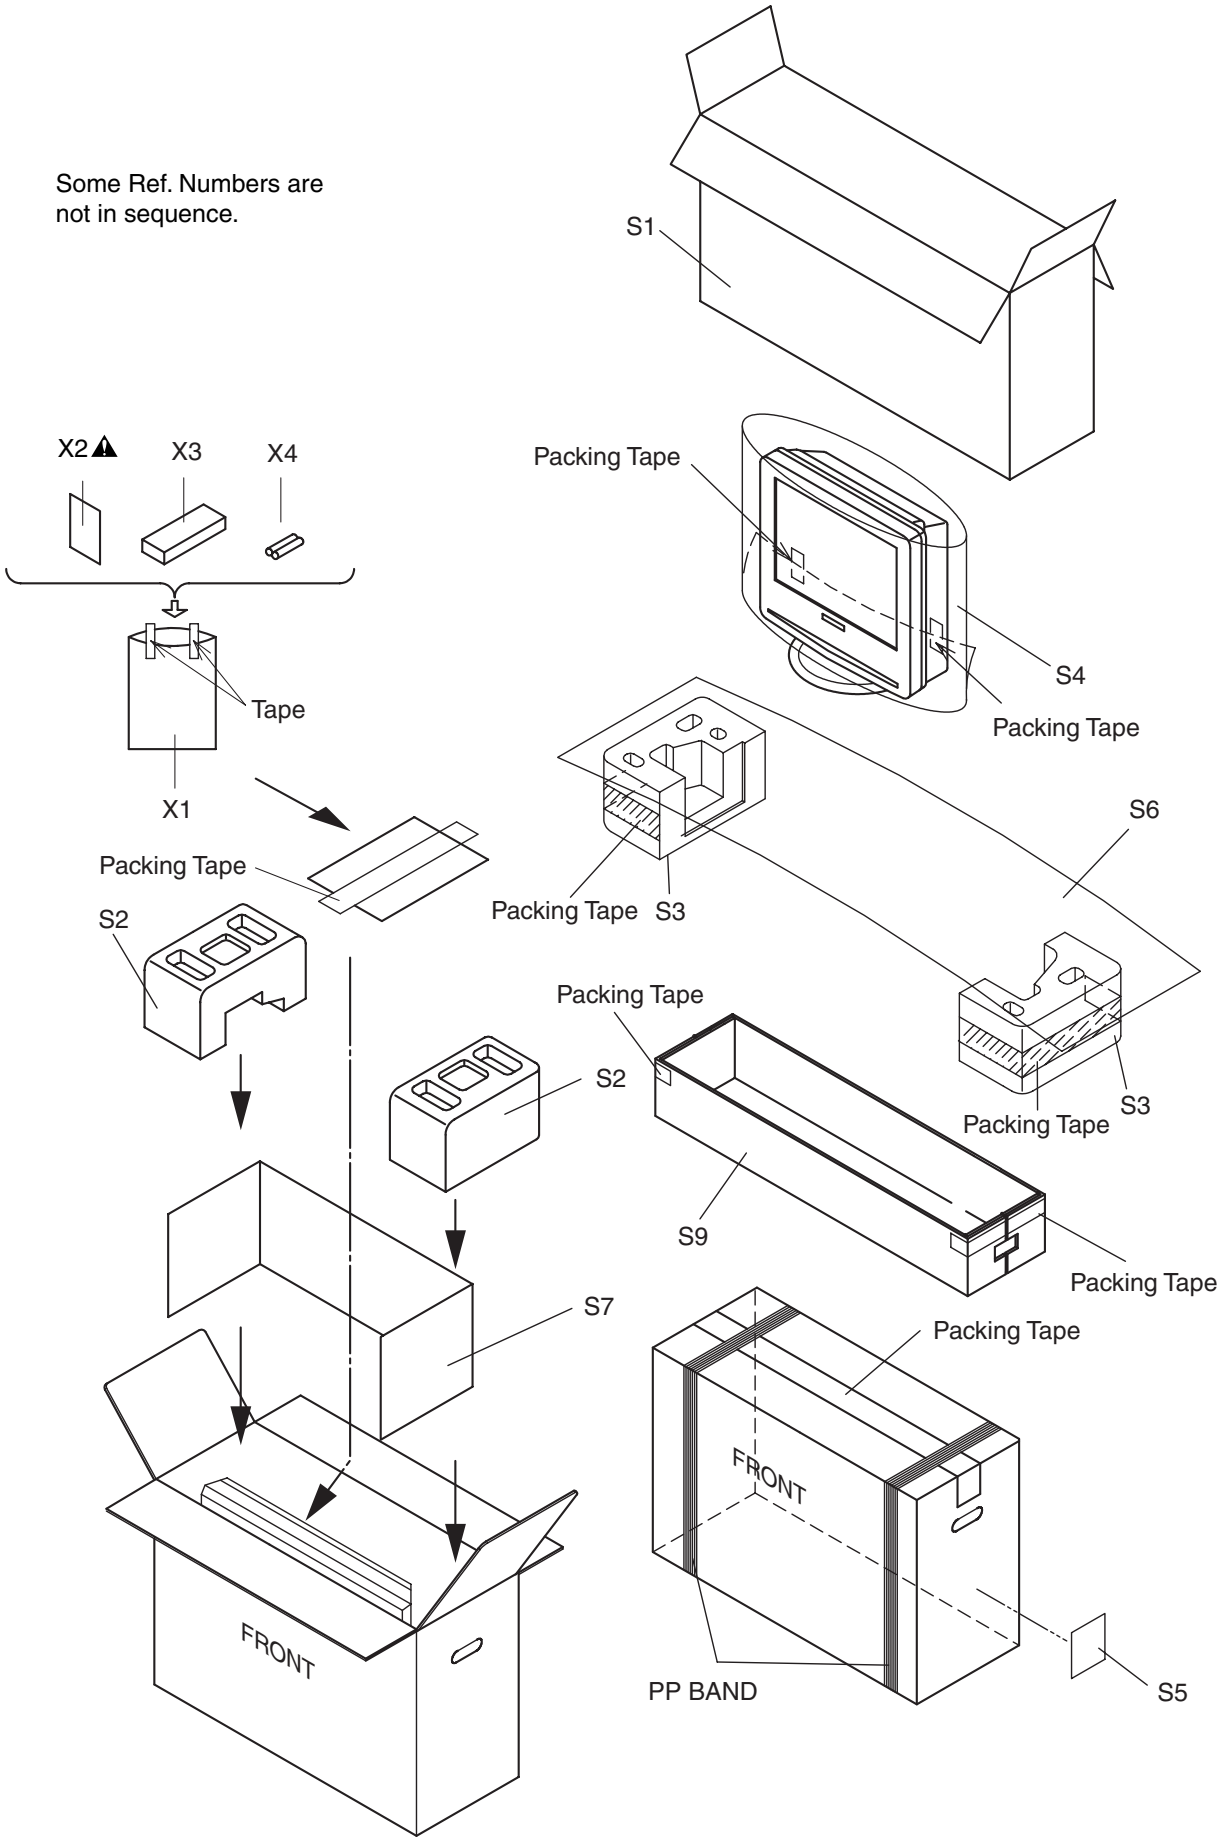

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a ⚠ have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTE: Parts that are not assigned part numbers (---------) are not available.

Ref. No.	Description	Part No.
A1	FRONT CABINET L5002UC	1EM021488
A2	BRAND BADGE L L5002UC	1EM423715
A3	CONTROL PLATE L4300UA	1EM321266
A4	REAR CABINET L5001CB	1EM021439
A5	DECORATION PLATE L5002UC	1EM021489
A6⚠	RATING LABEL L5005UF	---------
A7	FUNCTION KNOB L4300UA	1EM120992
A18	STAND COVER L5002UC	1EM121725
A24	STAND BASE PLAT L5001CB	1EM021441
A25	STAND RUBBER FOOT L5001CB	1EM423855
A26	STAND HINGE L4300UA	1EM220784
B1	PANEL HOLDER UD L5001CB	1EM021440
B2	PCB HOLDER L5001CB	1EM121711A
B3	SHIELD BOX L4300UA	1EM120996A
B4	CHASSIS BRACKET L4300UA	1EM120993A
B5	JACK HOLDER(A) L4300UA	1EM220681A
B6	JACK HOLDER(D) L4300UA	1EM220682
B12	NUT 3/8-32UNEF	0EM401451A
B16	CLOTH(10X190XT0.3) L0200UA	1EM420019
B18	CLOTH(10X180XT0.5) L0336JG	0EM408827
B19	CLOTH(20X65XT0.5) L0100JA	0EM407914
B20	STAND HOLDER L5001CB	1EM221397
B22	GRAND TAPE L4400UA	1EM423347
B28	CLOTH(10X30XT0.5) B5900UA	0EM404486
CLN112	WIRE ASSEMBLY 010 WX1L5001-010	WX1L5001-010
CLN253	WIRE ASSEMBLY 006 WX1L5001-006	WX1L5001-006
CLN803	WIRE ASSEMBLY 001 WX1L5001-001	WX1L5001-001
CLN804	WIRE ASSEMBLY 001 WX1L5001-001	WX1L5001-001
FC101	CLAMP FILTER ZCAT1325-0530A	XL03025TE001
L1	SCREW P-TIGHT 4X14 BIND HEAD	GBJP4140
L2	SCREW P-TIGHT M4X14 PAN HEAD+BLK	GPHP4140
L3	SCREW S-TIGHT M3X6 BIND HEAD+	GBJS3060
L5	SCREW P-TIGHT 3X10 BIND HEAD+	GBJP3100
L6	DOUBLE SEMS SCREW M4X10 + BLK	FPH34100
L8	DOUBLE SEMS SCREW M4X6 M4X6	FPJ34060
L9	SCREW B-TIGHT 3X10 BIND HEAD+ BLK	GBHB3100
L10	SCREW P-TIGHT M3X12 DISH HEAD+	GDJP3120
L13	DOUBLE SEMS SCREW M4X9 + BLACK L0130UA	0EM408146A
SP801	SPEAKER S0516F06	DSD0813XQ002
SP802	SPEAKER S0516F06	DSD0813XQ002
PACKING		
S1	CARTON(U) L5002UC	1EM322226B
S2	STYROFOAM TOP L5001CB	1EM021447
S3	STYROFOAM BOTTOM L5001CB	1EM021448
S4	SET BAG L5001CB	1EM322163
S5	SERIAL NO. LABEL L9750UA	---------
S6	STAND SHEET L5001CB	1EM423856
S7	HOLD PAD L5001CB	1EM423854
S9	CARTON(L) L5001CB	1EM322161
ACCESSORIES		
X1	BAG POLYETHYLENE 235X365XT0.03	0EM408420A
X2⚠	OWNERS MANUAL L5002UC	1EMN21950A
X3	REMOTE CONTROL NF006UD 170/ ECNLC301/NF006UD	NF006UD
X4	DRY BATTERY(SUNRISE) R6SSE/2S	XB0M451MS002

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a ⚠ have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. Parts that are not assigned part numbers (---------) are not available.
2. Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25% D.....±0.5% F.....±1%

G.....±2% J.....±5% K.....±10%

M.....±20% N.....±30% Z.....+80/-20%

LCD MODULE ASSEMBLY

*White Balance Adjustment and Flicker Adjustment are required when reparing T-CON CBA.

Ref. No.	Description	Part No.
	LCD MODULE ASSEMBLY Consists of the following:	UE370XA
	T-CON CBA CELL ACF ASSEMBLY BACKLIGHT ASSEMBLY	1FSA10185 ---------- ----------

DIGITAL MAIN CBA UNIT

Ref. No.	Description	Part No.
	DIGITAL MAIN CBA UNIT	1ESA13917

MMA CBA

Ref. No.	Description	Part No.
	MMA CBA Consists of the following:	1ESA13390
	MAIN CBA FUNCTION CBA LED CBA	---------- ---------- ----------

MAIN CBA

Ref. No.	Description	Part No.
	MAIN CBA Consists of the following:	----------
	CAPACITORS	
C251	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C252	CERAMIC CAP.(AX) F Z 0.01μF/25V	CDA1EZT0F103
C255	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C402	ELECTROLYTIC CAP. 4.7μF/50V M	CA1J4R7SP085
C405	ELECTROLYTIC CAP. 4.7μF/50V M	CA1J4R7SP085
C408	ELECTROLYTIC CAP. 4.7μF/50V M	CA1J4R7SP085
C411	ELECTROLYTIC CAP. 4.7μF/50V M	CA1J4R7SP085
C415	ELECTROLYTIC CAP. 4.7μF/25V M	CA1E4R7SP085
C418	ELECTROLYTIC CAP. 4.7μF/25V M	CA1E4R7SP085
C421	ELECTROLYTIC CAP. 4.7μF/25V M	CA1E4R7SP085
C424	ELECTROLYTIC CAP. 4.7μF/25V M	CA1E4R7SP085
C451	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C452	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C453	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C454	ELECTROLYTIC CAP. 10μF/16V M	CA1C100SP085
C501	CERAMIC CAP. B K 1000pF/500V	CCD2JKP0B102
C503⚠	ALUMINUM ELECTROLYTIC CAP 2200μF/35V M	CE1GMZNTM222
C504	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C506	CERAMIC CAP.(AX) B K 0.01μF/50V	CA1J103TU011
C507	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C508	ELECTROLYTIC CAP. 100μF/16V M	CA1C101SP085
C509	ALUMINUM ELECTROLYTIC CAP 2200μF/35V M	CE1GMZNTM222
C510	ELECTROLYTIC CAP. 470μF/16V M	CA1C471SP085
C511	ELECTROLYTIC CAP. 0.1μF/50V M	CE1JMASDL0R1
C513⚠	ALUMINUM ELECTROLYTIC CAP 2200μF/35V M	CE1GMZNTM222
C531	CERAMIC CAP.(AX) B K 470pF/50V	CCA1JKT0B471
C532⚠	ALUMINUM ELECTROLYTIC CAP 4700μF/6.3V M	CE0KMZNTM472
C533	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C535⚠	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C536	ELECTROLYTIC CAP. 1000μF/6.3V M	CA0K102SP085
C537⚠	ALUMINUM ELECTROLYTIC CAP 4700μF/10V M	CE1AMZNTM472
C538	FILM CAP.(P) 0.01μF/50V J	CA1J103MS029
C539	CERAMIC CAP.(AX) B K 0.047μF/50V	CA1J473TU011
C540⚠	ALUMINUM ELECTROLYTIC CAP 1000μF/25V M	CE1EMZPTM102
C541	ELECTROLYTIC CAP. 1000μF/6.3V M	CA0K102SP085
C542⚠	ALUMINUM ELECTROLYTIC CAP 1000μF/35V M	CE1GMZNTM102
C543	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C544	CERAMIC CAP.(AX) F Z 0.01μF/25V	CDA1EZT0F103
C545	CERAMIC CAP.(AX) B K 0.01μF/50V	CA1J103TU011
C546	CERAMIC CAP.(AX) B K 0.01μF/50V	CA1J103TU011
C547	ELECTROLYTIC CAP. 1000μF/6.3V M	CA0K102SP085
C548	CERAMIC CAP.(AX) F Z 0.01μF/25V	CDA1EZT0F103
C549	ELECTROLYTIC CAP. 470μF/6.3V M	CA0K471SP085
C553	ELECTROLYTIC CAP. 220μF/25V M	CA1E221SP085
C554	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C555	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C556	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C557	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C559	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C560	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C561	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C562	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C563	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C564	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C565	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C566	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C570	ELECTROLYTIC CAP. 1000μF/6.3V M	CA0K102SP085
C572	CERAMIC CAP.(AX) B K 1000pF/50V	CCA1JKT0B102
C573	CERAMIC CAP.(AX) F Z 0.01μF/25V	CDA1EZT0F103
C574	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C575	CHIP CERAMIC CAP.(1608) B K 2700pF/50V	CHD1JK30B272
C601⚠	CAP METALIZED FILM 0.47μF/275V K	CT2E474DC011
C602⚠	FILM CAP.(MP) 0.22μF/275V K	CT2E224DC011
C604	CERAMIC CAP. B K 0.01μF/500V	CCD2JKP0B103
C605	CERAMIC CAP. B K 0.01μF/500V	CCD2JKP0B103
C606⚠	ALUMINUM ELECTROLYTIC CAP 470μF/200V M	CA2D471NC190

Ref. No.	Description	Part No.
C609	CERAMIC CAP. R K 1000pF/2KV	CCD3DKA0R102
C610	PCB JUMPER D0.6-P5.0	JW5.0T
C611⚠	SAFETY CAP. 2200pF/250V	CCG2EMPYV222
C612⚠	SAFETY CAP. 2200pF/250V	CCG2EMPYV222
C633	FILM CAP.(P) 0.033μF/50V J	CA1J333MS029
C634	CERAMIC CAP. R K 680pF/2KV(HR)	CCD3DKA0R681
C639	FILM CAP.(P) 0.068μF/50V J	CA1J683MS029
C640	ALMINIUM ELECTROLYTIC CAP 150μF/200V	CA2D151NC236
C641	CERAMIC CAP. B K 0.01μF/500V	CCD2JKP0B103
C642	CERAMIC CAP. B K 0.01μF/500V	CCD2JKP0B103
C650	CERAMIC CAP.(AX) F 0.1μF/50V	CCK1JZT0F104
C651	CERAMIC CAP.(AX) B K 100pF/50V	CCA1JKT0B101
C652	CERAMIC CAP.(AX) B K 390pF/50V	CCA1JKT0B391
C653	FILM CAP.(P) 0.022μF/50V J	CA1J223MS029
C654	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C655	CAP METALIZED FILM 0.047μF 630V J	CT2K473DT036
C691⚠	SAFETY CAP. 3300pF/250V	CCG2EMPYV332
C701	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C702	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C704	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C705	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C706	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C708	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C709	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C710	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C711	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C712	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C714	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C715	CERAMIC CAP.(AX) B K 1000pF/50V	CCA1JKT0B102
C716	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C718	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C719	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C720	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C721	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C723	CHIP CERAMIC CAP.(1608) CH J 100pF/50V	CHD1JJ3CH101
C724	CERAMIC CAP.(AX) B K 1000pF/50V	CCA1JKT0B102
C725	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C727	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C728	ELECTROLYTIC CAP. 100μF/10V M	CA1A101SP085
C730	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C732	PCB JUMPER D0.6-P5.0	JW5.0T
C734	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C736	PCB JUMPER D0.6-P5.0	JW5.0T
C737	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C739	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C741	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C742	PCB JUMPER D0.6-P5.0	JW5.0T
C744	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C746	PCB JUMPER D0.6-P5.0	JW5.0T
C748	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C750	PCB JUMPER D0.6-P5.0	JW5.0T
C752	ELECTROLYTIC CAP. 47μF/16V M	CA1C470SP085
C754	PCB JUMPER D0.6-P5.0	JW5.0T
C801	ALUMINUM ELECTROLYTIC CAP 1000μF/35V M	CE1GMZNTM102
C802	ELECTROLYTIC CAP. 220μF/35V M	CA1G221SP085
C803	ELECTROLYTIC CAP. 220μF/35V M	CA1G221SP085
C804	FILM CAP.(P) 0.1μF/50V J	CA1J104MS029
C805	FILM CAP.(P) 0.1μF/50V J	CA1J104MS029
C806	CERAMIC CAP.(AX) B K 0.01μF/50V	CA1J103TU011
C807	ELECTROLYTIC CAP. 100μF/25V M	CA1E101SP085
C808	CERAMIC CAP.(AX) B K 0.01μF/50V	CA1J103TU011
C809	ELECTROLYTIC CAP. 3.3μF/50V M	CA1J3R3SP085

Ref. No.	Description	Part No.
C810	ELECTROLYTIC CAP. 10μF/50V M	CA1J100SP085
C811	ELECTROLYTIC CAP. 100μF/25V M	CA1E101SP085
C813	ELECTROLYTIC CAP 1μF/50V M	CA1J1R0SP085
C814	ELECTROLYTIC CAP 1μF/50V M	CA1J1R0SP085
CONNECTORS		
CN111	TWG CONNECTOR 23P TWG-P23P-A1	J3TWA23TG001
CN112	TWG CONNECTOR 23P TWG-P23P-A1	J3TWA23TG001
CN113	TWG CONNECTOR 23P TWG-P23P-A1	J3TWA23TG001
CN114	TWG CONNECTOR 23P TWG-P23P-A1	J3TWA23TG001
CN151A	WIRE ASSEMBLY 002 WX1L5001-002	WX1L5001-002
CN253	PH CONNECTOR TOP 20P B20B-PHDSS-B(LF)(SN)	J3F5D20JG003
DIODES		
D251	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D501⚠	DIODE SCHOTTKY YG802C10R	QDQZYG802C10
D503	DIODE FR104-B	NDLZ000FR104
D504	IC SHUNT REGULATOR KIA431-AT/P	NSZBA0TJY036
D505	ZENER DIODE MTZJT-7712B	QDTB00MTZJ12
D507	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D508	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D509	DIODE 1ZC30(Q)	QDLZ001ZC30Q
D510	ZENER DIODE MTZJT-7727B	QDTB00MTZJ27
D511⚠	DIODE SCHOTTKY YG802C10R	QDQZYG802C10
D531⚠	DIODE SCHOTTKY 31DQ03L	QDLZ031DQ03L
D532⚠	DIODE SCHOTTKY 31DQ03L	QDLZ031DQ03L
D533⚠	SCHOTTKY BARRIER DIODE ERC81-006	QDQZERC81006
D534	SCHOTTKY BARRIER DIODE ERC81-004	QDPZERC81004
D536⚠	RECTIFIER DIODE FR202-B/P	NDQZ000FR202
D537⚠	DIODE FR104-B	NDLZ000FR104
D538	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D539	ZENER DIODE MTZJT-776.8B	QDTB0MTZJ6R8
D540⚠	DIODE 1ZC43(Q)	QDLZ001ZC43Q
D541	ZENER DIODE MTZJT-7733B	QDTB00MTZJ33
D542	IC SHUNT REGULATOR KIA431-AT/P	NSZBA0TJY036
D543	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D544	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D545	ZENER DIODE MTZJT-773.3B	QDTB0MTZJ3R3
D546	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D547	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D549	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D551	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D552	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D553	ZENER DIODE MTZJT-7715B	QDTB00MTZJ15
D554	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D555	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D556	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D557	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D558	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D559	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D561	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D563	RECTIFIER DIODE ERA22-02	QDPZ0ERA2202
D564	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D566	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D582	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D583	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D591	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D592	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D593	ZENER DIODE MTZJT-774.7B	QDTB0MTZJ4R7
D594	ZENER DIODE MTZJT-773.9B	QDTB0MTZJ3R9
D601⚠	DIODE 1N5406	NDLZ001N5406
D602⚠	DIODE 1N5406	NDLZ001N5406
D603⚠	DIODE 1N5406	NDLZ001N5406
D604⚠	DIODE 1N5406	NDLZ001N5406

Ref. No.	Description	Part No.
D606⚠	DIODE 1ZC30(Q)	QDLZ001ZC30Q
D607	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D632⚠	ZENER DIODE MTZJT-7727B	QDTB00MTZJ27
D633	ZENER DIODE MTZJT-775.6B	QDTB0MTZJ5R6
D634	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D635	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D636⚠	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D637⚠	ZENER DIODE MTZJT-7718B	QDTB00MTZJ18
D638⚠	DIODE 1N5397-B	NDLZ001N5397
D639⚠	DIODE 1N5397-B	NDLZ001N5397
D640⚠	DIODE 1N5397-B	NDLZ001N5397
D641⚠	DIODE 1N5397-B	NDLZ001N5397
D650	DIODE FR154	NDLZ000FR154
D651	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D652	FAST RECOVERY DIODE FE201-6	QDLZ00FE2016
D653	FILM CAP.(P) 0.022μF/50V J	CA1J223MS029
D707	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D708	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D709	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D710	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D803	ZENER DIODE MTZJT-7715B	QDTB00MTZJ15
D814	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D816	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D881	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
ICS		
IC451	IC ANALOG MULTIPLEXER CD4051BNSR	NSZBA0TTY157
IC452	IC ANALOG MULTIPLEXER CD4051BNSR	NSZBA0TTY157
IC531	VOLTAGE REGULATOR PQ070XF01SZH	QSZBA0SSH054
IC532	REGULATOR IC(3.5V) PQ035ZN1HZPH	QSZBA0TSH078
IC533	REGULATOR PQ018EF01SZH	QSZBA0SSH075
IC534	IC VOLTAGE REGULATOR 5V KIA7805API/P	NSZBA0SJY041
IC535	IC LD1117V	NSZBA0SSS046
IC536⚠	REGULATOR PQ1CG2032FZH	QSZBA0SSH071
IC537	REGULATOR(PB FREE) PQ033EF01SZH	QSZBA0SSH060
IC601⚠	PHOTOCOUPLER LTV-817C-F	NPEC0LTV817F
IC602⚠	PHOTOCOUPLER LTV-817C-F	NPEC0LTV817F
IC605	IC UCC28600DR SOIC 8PIN	NSZAA0TTY017
IC631⚠	PHOTOCOUPLER LTV-817C-F	NPEC0LTV817F
IC801	AUDIO POWER IC AN17805A	QSZBA0SMS007
COILS		
L501	PCB JUMPER D0.6-P5.0	JW5.0T
L532	POWER INDUCTOR RCR1616-470M	LLC470MSF009
L534	INDUCTOR 15μH-K-5FT	LLARKBSTU150
L601⚠	FILTER LLBG00ZY2015	LLBG00ZY2015
L602⚠	FILTER LLBG00ZY2015	LLBG00ZY2015
TRANSISTORS		
Q451	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q452	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q453	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q501	TRANSISTOR(PB FREE) KTC2026-Y/P	NQEYKTC2026P
Q502	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q503	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q504	NPN TRANSISTOR KRC103M-AT/P	NQSZKRC103MP
Q531	TRANSISTOR KTA1267-GR-AT/P	NQS1KTA1267P
Q533	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q534	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q535	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q536	TRANSISTOR KTA1267-GR-AT/P	NQS1KTA1267P
Q537	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q601⚠	MOS FET 2SK3568(Q)	QQQZ02SK3568
Q603	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q631⚠	MOS FET 2SK3563	QFWZ02SK3563

Ref. No.	Description	Part No.
Q632⚠	TRANSISTOR 2SC2120-O(TE2 F T)	QQS02SC2120F
Q701	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q702	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q703	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q704	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q705	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q706	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q707	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q708	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q709	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q710	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q711	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q712	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q801	TRANSISTOR 2SC2120-O(TE2 F T)	QQS02SC2120F
Q802	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q803	TRANSISTOR 2SA1931(Q)	QQZZ2SA1931Q
Q804	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
RESISTORS		
R251	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R265	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R401	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R402	CARBON RES. 1/4W J 5.6k Ω	RCX4JATZ0562
R403	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R404	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R405	CARBON RES. 1/4W J 5.6k Ω	RCX4JATZ0562
R406	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R407	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R408	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R409	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R410	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R411	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R412	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R413	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R414	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R415	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R416	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R417	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R418	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R419	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R420	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R421	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R422	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R423	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R424	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R453	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R454	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R455	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R456	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R457	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R458	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R459	CHIP RES. 1/10W J 100 Ω	RRXAJR5Z0101
R460	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R461	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R462	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R463	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R464	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R465	CARBON RES. 1/4W J 100k Ω	RCX4JATZ0104
R466	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R473	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R474	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R475	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R476	CARBON RES. 1/4W J 100k Ω	RCX4JATZ0104

Ref. No.	Description	Part No.
R477	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R478	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R479	CHIP RES. 1/10W J 100 Ω	RRXAJR5Z0101
R480	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R481	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R482	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R483	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R484	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R485	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R486	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R489	PCB JUMPER D0.6-P5.0	JW5.0T
R491	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R492	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R493	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R494	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R495	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R496	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R500	METAL OXIDE FILM RES. 1W J 1.2 Ω	RN011R2ZU001
R501	CHIP RES. 1/10W F 8.2k Ω	RRXAFR5H8201
R502	CHIP RES. 1/10W F 8.2k Ω	RRXAFR5H8201
R503	CHIP RES. 1/10W F 3.9k Ω	RRXAFR5H3901
R506	PCB JUMPER D0.6-P5.0	JW5.0T
R507	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R508	CHIP RES. 1/10W F 27k Ω	RRXAFR5H2702
R509	CHIP RES. 1/10W F 12k Ω	RRXAFR5H1202
R510	CARBON RES. 1/4W J 820 Ω	RCX4JATZ0821
R511	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R512	CHIP RES.(1608) 1/10W F 2.2k Ω	RRXAFR5Z2201
R513	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R514	CHIP RES. 1/10W J 2.2k Ω	RRXAJR5Z0222
R515	CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R516	PCB JUMPER D0.6-P5.0	JW5.0T
R517	CARBON RES. 1/4W J 2.7k Ω	RCX4JATZ0272
R518	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R519	CHIP RES. 1/10W J 5.6k Ω	RRXAJR5Z0562
R520	CHIP RES. 1/10W J 3.3k Ω	RRXAJR5Z0332
R523	METAL OXIDE FILM RES. 2W J 1.5k Ω	RN02152ZU001
R524	METAL OXIDE FILM RES. 2W J 1.5k Ω	RN02152ZU001
R530	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R531	CARBON RES. 1/4W G 5.1k Ω	RCX4GATZ0512
R532	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R533	CHIP RES. 1/10W F 6.8k Ω	RRXAFR5Z6801
R534	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R535	CHIP RES. 1/10W J 4.7k Ω	RRXAJR5Z0472
R536	CHIP RES. 1/10W F 1.1k Ω	RRXAFR5H1101
R537	CHIP RES. 1/10W F 1k Ω	RRXAFR5Z1001
R538	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R540	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R541	CARBON RES. 1/4W G 1.6k Ω	RCX4GATZ0162
R543	METAL OXIDE FILM RES. 1W J 1k Ω	RN01102ZU001
R544	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R545	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R546	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R548	CHIP RES. 1/10W J 100 Ω	RRXAJR5Z0101
R551	CHIP RES. 1/10W J 8.2k Ω	RRXAJR5Z0822
R555	CARBON RES. 1/4W J 560 Ω	RCX4JATZ0561
R556	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R557	CARBON RES. 1/4W J 820 Ω	RCX4JATZ0821
R558	CHIP RES.(1608) 1/10W F 2.2k Ω	RRXAFR5Z2201
R561	CHIP RES. 1/10W F 680 Ω	RRXAFR5H6800
R562	CHIP RES. 1/10W F 220 Ω	RRXAFR5H2200
R563	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R565	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103

Ref. No.	Description	Part No.
R566	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R567	CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R568	CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R569	PCB JUMPER D0.6-P5.0	JW5.0T
R570	CHIP RES. 1/10W J 4.7k Ω	RRXAJR5Z0472
R571	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R573	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R574	PCB JUMPER D0.6-P5.0	JW5.0T
R575	CARBON RES. 1/4W J 220 Ω	RCX4JATZ0221
R576	CARBON RES. 1/4W J 47k Ω	RCX4JATZ0473
R577	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R583	CHIP RES. 1/10W J 22k Ω	RRXAJR5Z0223
R584	CHIP RES. 1/10W J 3.3k Ω	RRXAJR5Z0332
R585	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R586	CHIP RES. 1/10W J 3.3k Ω	RRXAJR5Z0332
R590	CARBON RES. 1/4W J 620 Ω	RCX4JATZ0621
R591	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R601⚠	CARBON RES. 1/2W J 3.3M Ω	RCX2JZQZ0335
R602⚠	CEMENT RESISTOR 5W J 0.47 Ω	RW05R47PAK10
R603⚠	CARBON RES. 1/4W J 120k Ω	RCX4JATZ0124
R604	CARBON RES. 1/4W J 120k Ω	RCX4JATZ0124
R605	CARBON RES. 1/4W J 120k Ω	RCX4JATZ0124
R607⚠	CARBON RES. 1/4W J 560k Ω	RCX4JATZ0564
R608	CARBON RES. 1/4W J 560k Ω	RCX4JATZ0564
R609	CARBON RES. 1/4W J 560k Ω	RCX4JATZ0564
R611	PCB JUMPER D0.6-P5.0	JW5.0T
R612	CARBON RES. 1/4W J 330k Ω	RCX4JATZ0334
R613	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R615	PCB JUMPER D0.6-P5.0	JW5.0T
R620⚠	METAL OXIDE FILM RES. 2W J 0.1 Ω	RN02R10KE010
R631⚠	CARBON RES. 1/4W J 390k Ω	RCX4JATZ0394
R632	CARBON RES. 1/4W J 390k Ω	RCX4JATZ0394
R633	CARBON RES. 1/4W J 390k Ω	RCX4JATZ0394
R634	CARBON RES. 1/4W J 390k Ω	RCX4JATZ0394
R636	CARBON RES. 1/4W J 270 Ω	RCX4JATZ0271
R637	CARBON RES. 1/4W J 220 Ω	RCX4JATZ0221
R639	CARBON RES. 1/4W J 820 Ω	RCX4JATZ0821
R641	CARBON RES. 1/4W J 56 Ω	RCX4JATZ0560
R642	CARBON RES. 1/4W J 2.2k Ω	RCX4JATZ0222
R643	CARBON RES. 1/4W J 150 Ω	RCX4JATZ0151
R644⚠	METAL OXIDE FILM RES. 2W J 0.47 Ω	RN02R47ZU001
R646	CEMENT RESISTOR 3W K 1.2 Ω	RW031R2PAK10
R650	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R651	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R652	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R653	PCB JUMPER D0.6-P5.0	JW5.0T
R654	METAL FILM RES. 1/4W F 27k Ω	RMX4FATH2702
R655	METAL OXIDE FILM RES. RSI-2S473JHB55	RN02473KE010
R656	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R657	METAL OXIDE FILM RES. RSI-2S473JHB55	RN02473KE010
R701	CARBON RES. 1/4W J 75 Ω	RCX4JATZ0750
R702	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R704	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R705	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R706	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R707	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R708	CHIP RES. 1/10W J 75 Ω	RRXAJR5Z0750
R709	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R711	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R712	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R713	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R714	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R715	CHIP RES. 1/10W J 75 Ω	RRXAJR5Z0750

Ref. No.	Description	Part No.
R716	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R718	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R719	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R720	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R721	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R722	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R723	CHIP RES. 1/10W J 75 Ω	RRXAJR5Z0750
R724	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R726	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R727	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R728	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R729	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R730	CHIP RES. 1/10W J 75 Ω	RRXAJR5Z0750
R731	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R733	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R734	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R735	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R736	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R737	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R738	CARBON RES. 1/4W J 75 Ω	RCX4JATZ0750
R739	PCB JUMPER D0.6-P5.0	JW5.0T
R741	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R742	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R743	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R744	PCB JUMPER D0.6-P5.0	JW5.0T
R745	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R746	CARBON RES. 1/4W J 22 Ω	RCX4JATZ0220
R747	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R748	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R749	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R751	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R752	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R753	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R754	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R755	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R756	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R757	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R759	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R760	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R761	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R762	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R763	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R764	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R765	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R767	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R768	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R769	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R770	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R771	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R772	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R773	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R775	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R776	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R777	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R778	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R779	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R780	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R781	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R783	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R784	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R785	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R786	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
R787	CHIP RES. 1/10W F 75 Ω	RRXAFR5Z75R0
R788	COIL CHIP BEADS INDUCTOR (SMD) FBMH1608HM101-T	LLC101NTU037
R789	CHIP CERAMIC CAP.(1608) CH J 33pF/50V	CHD1JJ3CH330
R791	CHIP RES. 1/10W J 33k Ω	RRXAJR5Z0333
R792	CHIP RES. 1/10W J 39k Ω	RRXAJR5Z0393
R793	CHIP RES. 1/10W J 390 Ω	RRXAJR5Z0391
R794	PCB JUMPER D0.6-P5.0	JW5.0T
R801	METAL OXIDE FILM RES. 2W J 0.33 Ω	RN02R33ZU001
R803	CARBON RES. 1/4W J 100 Ω	RCX4JATZ0101
R804	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R807	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R808	CARBON RES. 1/4W J 100 Ω	RCX4JATZ0101
R809	CARBON RES. 1/4W J 2.7k Ω	RCX4JATZ0272
R810	PCB JUMPER D0.6-P5.0	JW5.0T
R811	CARBON RES. 1/4W J 100 Ω	RCX4JATZ0101
R812	CARBON RES. 1/4W J 100 Ω	RCX4JATZ0101
R813	PCB JUMPER D0.6-P5.0	JW5.0T
R815	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R816	CARBON RES. 1/4W J 4.7k Ω	RCX4JATZ0472
R817	METAL OXIDE FILM RES. 2W J 560 Ω	RN02561KE010
R823	PCB JUMPER D0.6-P5.0	JW5.0T
R824	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R825	CARBON RES. 1/4W J 390 Ω	RCX4JATZ0391
R826	CARBON RES. 1/4W J 2.2k Ω	RCX4JATZ0222
R827	CARBON RES. 1/4W J 2.2k Ω	RCX4JATZ0222
R828	CARBON RES. 1/4W J 390 Ω	RCX4JATZ0391
R829	CARBON RES. 1/4W J 4.7k Ω	RCX4JATZ0472
R830	CARBON RES. 1/4W J 1k Ω	RCX4JATZ0102
R831	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R881	CARBON RES. 1/4W J 15k Ω	RCX4JATZ0153
R882	CARBON RES. 1/4W J 2.2k Ω	RCX4JATZ0222
R927	CHIP RES.(1608) 1/10W 0 Ω	RRXAJR5Z0000
MISCELLANEOUS		
AC601⚠	AC CORD W/O A GND WIRE UL 1935MM BLACK	WAC0192LW003
B9	HEAT SINK EAB ASSEMBLY L4300UA	1EM422612
B10	HEAT SINK PKH ASSEMBLY L3201UB	1EM420648
B11	HEAT SINK PLQ ASSEMBLY L4300UA	1EM422615
BC301	PCB JUMPER D0.6-P5.0	JW5.0T
BC302	PCB JUMPER D0.6-P5.0	JW5.0T
BC303	PCB JUMPER D0.6-P5.0	JW5.0T
BC304	PCB JUMPER D0.6-P5.0	JW5.0T
BC501	PCB JUMPER D0.6-P5.0	JW5.0T
BC502	PCB JUMPER D0.6-P5.0	JW5.0T
BC531	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
BC532	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
BC601	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
BC602	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
BC631	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
BC632	BEAD INDUCTOR FBR07HA121TB-00	LLBF00ZTU021
CLN1	WIRE 095/BLA/AWG22#1007	WX3001A2FF10
CLN2	WIRE 035/BLA/AWG22#1007	WX3001A2FF04
F601⚠	FUSE STC4A125V U/CT	PAGE20CW3402
FC001	CORE FERRITE TOROIDAL HF40T18X10X10	XL04018TE001
FH601	FUSE HOLDER MSF-015 LF (B110)	XH01Z00LY002
FH602	FUSE HOLDER MSF-015 LF (B110)	XH01Z00LY002
GP691⚠	GAP. FNR-G3.10D	FAZ000LD6005
J314	RES METALIZED FILM 1/4W F 220k Ω	RDC2203HH001
JK701	6PIN JACK MSP-226V27-01 NI FE	JYRL060LY032

Ref. No.	Description	Part No.
JK702	Y/C JACK(SW) YKF51-5563N	JYEL080JC002
JK703	5PIN JACK MSP-226V40-03 NI FE	JYRL050LY033
JK704	5PIN JACK MSP-226V40-03 NI FE	JYRL050LY033
JS803	PCB JUMPER D0.6-P5.0	JW5.0T
L4	SCREW B-TIGHT D3X8 BIND HEAD+	GBJB3080
SA601⚠	SURGE ABSORBER 470V+-10PER	NVQZ10D471KB
T601⚠	TRANS POWER ETS49BP17KAD	LTT4PC0MS002
T631⚠	SW TRANS 6714	LTT2PC0KT004

FUNCTION CBA

Ref. No.	Description	Part No.
	FUNCTION CBA Consists of the following:	----------
	CAPACITORS	
C101	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C102	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C103	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C104	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
	CONNECTOR	
CN101	PH CONNECTOR SIDE 5P S5B-PH-K-S(LF)(SN)	J3PHC05JG030
	RESISTORS	
R101	PCB JUMPER D0.6-P5.0	JW5.0T
R102	CHIP RES. 1/10W J 10kΩ	RRXAJR5Z0103
R103	CHIP RES. 1/10W J 10kΩ	RRXAJR5Z0103
R104	PCB JUMPER D0.6-P5.0	JW5.0T
R105	CHIP RES. 1/10W J 2.4kΩ	RRXAJR5Z0242
R106	CARBON RES. 1/4W J 4.3kΩ	RCX4JATZ0432
R107	CHIP RES. 1/10W J 8.2kΩ	RRXAJR5Z0822
R108	CHIP RES. 1/10W J 24kΩ	RRXAJR5Z0243
R110	CHIP RES. 1/10W J 8.2kΩ	RRXAJR5Z0822
R111	CHIP RES. 1/10W J 2.4kΩ	RRXAJR5Z0242
R112	CHIP RES. 1/10W J 4.3kΩ	RRXAJR5Z0432
R113	CHIP RES. 1/10W J 8.2kΩ	RRXAJR5Z0822
R114	CHIP RES. 1/10W J 24kΩ	RRXAJR5Z0243
R115	CHIP RES. 1/10W J 4.3kΩ	RRXAJR5Z0432
R116	PCB JUMPER D0.6-P5.0	JW5.0T
R117	CHIP RES. 1/10W J 2.4kΩ	RRXAJR5Z0242
R118	CHIP RES. 1/10W J 10kΩ	RRXAJR5Z0103
	SWITCHES	
SW101	TACT SWITCH SKQSAB	SST0101AL038
SW102	TACT SWITCH SKQSAB	SST0101AL038
SW103	TACT SWITCH SKQSAB	SST0101AL038
SW104	TACT SWITCH SKQSAB	SST0101AL038
SW105	TACT SWITCH SKQSAB	SST0101AL038
SW114	TACT SWITCH SKQSAB	SST0101AL038
SW115	TACT SWITCH SKQSAB	SST0101AL038

LED CBA

Ref. No.	Description	Part No.
	LED CBA Consists of the following:	----------
	CAPACITORS	
C151	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C152	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C153	CHIP CERAMIC CAP.(1608) F Z 0.1μF/50V	CHD1JZ30F104
C154	CHIP CERAMIC CAP. F Z 0.01μF/50V	CHD1JZ30F103
C155	ELECTROLYTIC CAP. 47μF/10V M H7	CE1AMASSM470
	CONNECTORS	
CN151	PH CONNECTOR SIDE10PIN S10B-PH-K-S (LF)(SN)	J3PHC10JG030
CN803	PH CONNECTOR SIDE 2P S2B-PH-K-S(LF)(SN)	J3PHC02JG030
CN804	PH CONNECTOR SIDE 2P S2B-PH-K-S(LF)(SN)	J3PHC02JG030
	DIODES	
D151	LED 333GT/E	NPHZ00333GTE
D152	LED L-53HT	NP4Z000L53HT
	RESISTORS	
R151	CHIP RES. 1/10W J 220Ω	RRXAJR5Z0221
R152	CHIP RES. 1/10W J 220Ω	RRXAJR5Z0221
R153	CARBON RES. 1/4W J 1kΩ	RCX4JATZ0102
R154	CHIP RES. 1/10W J 3.3kΩ	RRXAJR5Z0332
R155	CHIP RES. 1/10W J 100Ω	RRXAJR5Z0101
	MISCELLANEOUS	
BC151	PCB JUMPER D0.6-P5.0	JW5.0T
RCV151	PHOTO LINK MODULE KSM-712TH2E	USESJRSKK044

INVERTER CBA

Ref. No.	Description	Part No.
	INVERTER CBA Consists of the following:	1FSA10219
	CAPACITORS	
C1000	CHIP CERAMIC CAP.(1608) B K 1000pF/50V	CHD1JK30B102
C1001	CHIP CERAMIC CAP. F Z 2.2μF/10V	CHD1AZ30F225
C1002	CHIP CERAMIC CAP.(1608) B K 1000pF/50V	CHD1JK30B102
C1003	CHIP CERAMIC CAP.(1608) B K 1000pF/50V	CHD1JK30B102
C1004	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1005	CHIP CERAMIC CAP.(1608) CH J 1000pF/50V	CHD1JJ3CH102
C1006	CHIP CERAMIC CAP. B K 0.047μF/50V	CHD1JKB0B473
C1007	CHIP CERAMIC CAP.(1608) CH J 270pF/50V	CHD1JJ3CH271
C1008	CHIP CERAMIC CAP. F Z 2.2μF/10V	CHD1AZ30F225
C1009	CHIP CERAMIC CAP. F Z 1μF/10V	CHD1AZ30F105
C1010	CHIP CERAMIC CAP. F Z 1μF/10V	CHD1AZ30F105
C1011	CHIP CERAMIC CAP.(1608) B K 0.47μF/10V	CHD1AK30B474
C1012	CHIP CERAMIC CAP.(1608) B K 0.47μF/10V	CHD1AK30B474
C1013	CHIP CERAMIC CAP. (1608) B K 1μF/16V	CHD1CK30B105
C1014	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1015	ELECTROLYTIC CAP. 470μF/35V M	CE1GMZNDL471
C1016	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1017	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1018	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1019	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1020	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1030	ELECTROLYTIC CAP. 330μF/16V M	CE1CMASDL331
C1031	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1032	ELECTROLYTIC CAP. 47μF/35V M	CE1GMASDL470
C1040	CHIP CERAMIC CAP.(1608) B K 1000pF/50V	CHD1JK30B102
C1043	ELECTROLYTIC CAP. 2.2μF/50V M	CE1JMASDL2R2
C1044	CHIP CERAMIC CAP. (1608) B K 1μF/16V	CHD1CK30B105
C1045	ELECTROLYTIC CAP. 2.2μF/50V M	CE1JMASDL2R2
C1046	CHIP CERAMIC CAP. (1608) B K 1μF/16V	CHD1CK30B105
C1050	CHIP CERAMIC CAP. (1608) B K 1μF/16V	CHD1CK30B105
C1061	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1062	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1063	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1064	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1065	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1066	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1067	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1100	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1101	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1102	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1103	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104

Ref. No.	Description	Part No.
C1104	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1105	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1106	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1107	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1111	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1112	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1113	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1114	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1115	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1116	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1117	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1161	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1162	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1163	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1164	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1165	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1166	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1167	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1211	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1212	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1213	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1214	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1215	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1216	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1217	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1250	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1251	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1252	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1253	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1254	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1255	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1256	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1257	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1261	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1262	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1263	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1264	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1265	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1266	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1267	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1300	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1301	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1302	ELECTROLYTIC CAP. 100μF/35V M	CE1GMASDL101
C1303	CHIP CERAMIC CAP.(1608) B K 0.1μF/50V	CHD1JK30B104
C1311	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1312	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1313	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1314	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1315	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1316	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1317	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1361	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1362	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1363	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1364	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1365	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1366	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1367	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1411	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1412	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152
C1413	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1414	CERAMIC CAP. SL D 10pF/3KV	CCD3FDASL100
C1415	CHIP CERAMIC CAP. B K 1500pF/50V	CHD1JK30B152

Ref. No.	Description	Part No.
C1416	CHIP CERAMIC CAP. B K 2200pF/50V	CHD1JK30B222
C1417	CHIP CERAMIC CAP. B K 0.01μF/50V	CHD1JKB0B103
C1500	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1501	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1502	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1550	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1552	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1600	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1601	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1602	CHIP CERAMIC CAP.(1608) B K 0.22μF/16V	CHD1CK30B224
C1604	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1605	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1606	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
C1607	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJ3CH221
	CONNECTORS	
CN1000	PH CONNECTOR TOP 20P B20B-PHDSS-B(LF)(SN)	J3F5D20JG003
CN1050	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1100	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1150	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1200	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1250	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1300	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1350	CONNECTOR/JACK 1747386-1	JB17J02AP002
CN1400	CONNECTOR/JACK 1747386-1	JB17J02AP002
	DIODES	
D1000	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1001	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1002	ZENER DIODE MTZJT-776.2B	QDTB0MTZJ6R2
D1003	ZENER DIODE MTZJT-776.2B	QDTB0MTZJ6R2
D1004	ZENER DIODE MTZJT-776.2B	QDTB0MTZJ6R2
D1005	ZENER DIODE MTZJT-776.2B	QDTB0MTZJ6R2
D1020	ZENER DIODE MTZJT-775.1B	QDTB0MTZJ5R1
D1021	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1030	ZENER DIODE MTZJT-775.6B	QDTB0MTZJ5R6
D1042	ZENER DIODE MTZJT-7724B	QDTB00MTZJ24
D1043	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1045	ZENER DIODE MTZJT-7724B	QDTB00MTZJ24
D1046	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1049	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1060	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1061	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1062	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1063	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1064	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1065	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1066	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1067	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1068	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1110	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1111	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1112	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1113	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1114	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1115	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1116	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1117	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1118	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1160	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1161	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1162	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1163	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1164	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133

Ref. No.	Description	Part No.
D1165	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1166	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1167	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1168	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1210	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1211	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1212	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1213	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1214	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1215	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1216	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1217	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1218	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1260	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1261	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1262	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1263	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1264	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1265	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1266	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1267	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1268	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1310	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1311	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1312	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1313	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1314	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1315	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1316	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1317	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1318	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1360	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1361	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1362	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1363	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1364	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1365	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1366	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1367	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1368	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1410	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1411	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1412	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1413	SCHOTTKY BARRIER DIODE ERA81-004Q	QDLZRA81004Q
D1414	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1415	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1416	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1417	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1418	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1500	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1501	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1502	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1503	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1550	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1551	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1552	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1553	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1600	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1601	SWITCHING DIODE 1SS133(T-77)	QDTZ001SS133
D1701	ZENER DIODE MTZJT-7718B	QDTB00MTZJ18
	ICS	
IC1000	IC PWM CONTROLLER OZ9938GN-B-0-T2	NSZBA0TTMC03
IC1001	IC MOSFET DRIVER OZ9982GN	NSZBA0TTMC02
IC1500	IC BA10324AF-E2	QSZBA0TRM032
IC1550	IC BA10324AF-E2	QSZBA0TRM032
IC1600	IC BA10324AF-E2	QSZBA0TRM032
	TRANSISTORS	
Q1000	TRANSISTOR KTC3205(Y)	NQSY0KTC3205
Q1001	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q1002	TRANSISTOR KTC3199-GR-AT/P	NQS4KTC3199P
Q1003	NPN TRANSISTOR KRC103M-AT/P	NQSZKRC103MP
Q1020	TRANSISTOR KTA1267-GR-AT/P	NQS1KTA1267P
Q1100	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1101	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1102	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1103	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1250	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1251	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1252	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1253	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1600	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1601	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1602	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1603	FET POWER MOS SMD NP22N055SLE-E1-AZ	QF2ZNP22N055
Q1701	TRANSISTOR KTA1267-GR-AT/P	NQS1KTA1267P
	RESISTORS	
R1000	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1001	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1002	CHIP RES. 1/10W J 5.1k Ω	RRXAJR5Z0512
R1003	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1004	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1005	CHIP RES. 1/10W F 160 k Ω	RRXAFR5H1603
R1006	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1007	CHIP RES. 1/10W J 30k Ω	RRXAJR5Z0303
R1008	CHIP RES. 1/10W J 30k Ω	RRXAJR5Z0303
R1009	CHIP RES. 1/10W F 1M Ω	RRXAFR5H1004
R1011	CHIP RES.(1608) 1/10W F 82k Ω	RRXAFR5H0823
R1020	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1030	CARBON RES. 1/4W J 470 Ω	RCX4JATZ0471
R1031	CHIP RES. 1/10W J 4.7k Ω	RRXAJR5Z0472
R1040	CHIP RES. 1/10W J 4.7k Ω	RRXAJR5Z0472
R1041	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1045	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R1046	CARBON RES. 1/4W J 6.8k Ω	RCX4JATZ0682
R1047	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1048	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1050	CHIP RES. 1/10W J 47k Ω	RRXAJR5Z0473
R1051	CARBON RES. 1/4W J 6.8k Ω	RCX4JATZ0682
R1052	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1053	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1055	CARBON RES. 1/4W J 2.2k Ω	RCX4JATZ0222
R1056	CHIP RES. 1/10W J 3.3k Ω	RRXAJR5Z0332
R1060	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1061	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1062	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1063	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1064	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1065	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1066	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1067	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1068	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1069	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1070	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1071	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102

Ref. No.	Description	Part No.
R1100	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1101	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1102	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1103	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1104	PCB JUMPER D0.6-P5.0	JW5.0T
R1105	PCB JUMPER D0.6-P5.0	JW5.0T
R1110	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1111	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1112	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1113	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1114	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1115	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1116	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1117	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1118	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1119	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1120	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1121	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1160	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1161	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1162	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1163	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1164	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1165	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1166	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1167	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1168	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1169	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1170	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1171	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1210	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1211	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1212	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1213	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1214	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1215	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1216	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1217	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1218	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1219	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1220	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1221	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1250	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1251	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1252	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1253	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1254	PCB JUMPER D0.6-P5.0	JW5.0T
R1255	PCB JUMPER D0.6-P5.0	JW5.0T
R1260	CARBON RES. 1/4W J 100k Ω	RCX4JATZ0104
R1261	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1262	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1263	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1264	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1265	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1266	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1267	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1268	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1269	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1270	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1271	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1300	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1301	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1302	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330

Ref. No.	Description	Part No.
R1303	CHIP RES. 1/10W J 33 Ω	RRXAJR5Z0330
R1310	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1311	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1312	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1313	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1314	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1315	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1316	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1317	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1318	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1319	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1320	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1321	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1360	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1361	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1362	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1363	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1364	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1365	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1366	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1367	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1368	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1369	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1370	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1371	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1410	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1411	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1412	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1413	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1414	CHIP RES. 1/10W J 100k Ω	RRXAJR5Z0104
R1415	CHIP RES. 1/10W J 20k Ω	RRXAJR5Z0203
R1416	CHIP RES. 1/10W F 430 Ω	RRXAFR5H4300
R1417	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1418	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1419	CHIP RES. 1/10W F 7.5k Ω	RRXAFR5Z7501
R1420	CHIP RES. 1/10W J 1M Ω	RRXAJR5Z0105
R1421	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1500	CHIP RES. 1/10W F 9.1k Ω	RRXAFR5H9101
R1501	CHIP RES. 1/10W F 1.0k Ω	RRXAFR5H1001
R1502	CHIP RES. 1/10W F 9.1k Ω	RRXAFR5H9101
R1503	CHIP RES. 1/10W F 1.0k Ω	RRXAFR5H1001
R1504	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1505	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1506	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1507	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1508	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1509	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1510	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1511	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1550	CHIP RES. 1/10W F 9.1k Ω	RRXAFR5H9101
R1551	CHIP RES. 1/10W F 1.0k Ω	RRXAFR5H1001
R1554	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1555	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1556	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1557	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1558	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1559	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1560	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1561	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1600	CHIP RES. 1/10W F 9.1k Ω	RRXAFR5H9101
R1601	CHIP RES. 1/10W F 1.0k Ω	RRXAFR5H1001
R1602	CHIP RES. 1/10W F 9.1k Ω	RRXAFR5H9101
R1603	CHIP RES. 1/10W F 1.0k Ω	RRXAFR5H1001

Ref. No.	Description	Part No.
R1604	CARBON RES. 1/4W J 10k Ω	RCX4JATZ0103
R1605	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1606	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1607	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1612	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1613	CHIP RES. 1/10W J 10k Ω	RRXAJR5Z0103
R1614	PCB JUMPER D0.6-P5.0	JW5.0T
R1615	PCB JUMPER D0.6-P5.0	JW5.0T
R1701	CHIP RES. 1/10W J 1k Ω	RRXAJR5Z0102
R1702	CHIP RES. 1/10W J 2.2k Ω	RRXAJR5Z0222
R1703	CHIP RES. 1/10W J 100 Ω	RRXAJR5Z0101
MISCELLANEOUS		
BC1050	PCB JUMPER D0.6-P10.0	JW10.0T
BC1051	PCB JUMPER D0.6-P10.0	JW10.0T
BC1100	PCB JUMPER D0.6-P10.0	JW10.0T
BC1101	PCB JUMPER D0.6-P17.5	JW17.5T
BC1150	PCB JUMPER D0.6-P10.0	JW10.0T
BC1151	PCB JUMPER D0.6-P10.0	JW10.0T
BC1200	PCB JUMPER D0.6-P10.0	JW10.0T
BC1201	PCB JUMPER D0.6-P10.0	JW10.0T
BC1250	PCB JUMPER D0.6-P10.0	JW10.0T
BC1251	PCB JUMPER D0.6-P10.0	JW10.0T
BC1300	PCB JUMPER D0.6-P10.0	JW10.0T
BC1301	PCB JUMPER D0.6-P10.0	JW10.0T
BC1350	PCB JUMPER D0.6-P20.0	JW20.0T
BC1351	PCB JUMPER D0.6-P20.0	JW20.0T
BC1400	PCB JUMPER D0.6-P10.0	JW10.0T
BC1401	PCB JUMPER D0.6-P10.0	JW10.0T
JS1000	PCB JUMPER D0.6-P5.0	JW5.0T
T1050	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1100	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1150	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1200	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1250	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1300	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1350	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005
T1400	TRANS INVERTER ETJV23ZF2KAC	LTZ2PC0MS005

EWL3706 A
L5005UF
2006-10-31